

CFD-ZW200L/ZW220L

SERVICE MANUAL

Ver 1.1 2000.02


AEP Model

UK Model

CFD-ZW200L

East European Model

CFD-ZW220L

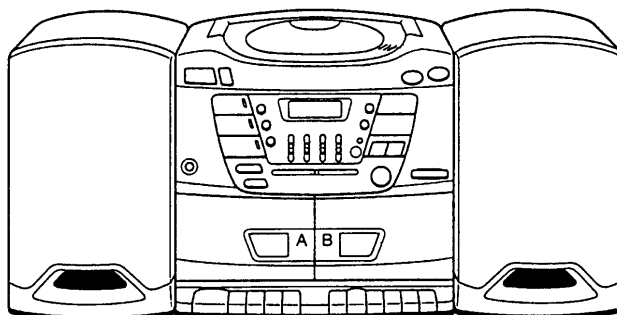

CFD-ZW200L

CD Section	Model Name Using Similar Mechanism	CFD-ZW150
	CD Mechanism Type	KSM-213CAM/C2NP
	Optical Pick-up Name	KSS-213C/C2N
TAPE Section	Model Name Using Similar Mechanism	NEW
	Tape Transport Mechanism Type	MF-ZW200

SPECIFICATIONS

CD player section

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs

Wave length: 780 nm

Emission duration: Continuous

Laser output: Less than 44.6 μ W

(This output is the value measured at a distance of about 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Spindle speed

200 r/min (rpm) to 500 r/min (rpm) (CLV)

Number of channels

2

Frequency response

20 - 20,000 Hz +3/-3 dB

Wow and flutter

Below measurable limit

Radio section

Frequency range

FM Europe	87.6 - 107 MHz
Eastern Europe	65 - 108 MHz

MW	531 - 1,602 kHz
----	-----------------

LW	153 - 279 kHz
----	---------------

IF

FM: 10.7 MHz

MW/LW: 455 kHz

Aerials

FM: Telescopic aerial

MW/LW: Built-in ferrite bar aerial

Cassette-corder section

Recording system

4-track 2 channel stereo

Fast winding time

Approx. 110 s (sec.) with Sony cassette C-60

Frequency response

TYPE I (normal): 80 - 10,000 Hz

General

Speaker

Full range: 10 cm (4 in.) dia.,

3.2 ohms, cone type (2)

Outputs

Headphones jack (stereo minijack)

For 16 - 68 ohms impedance headphones

Maximum power output

13 W + 13 W (in AC operation)

Power requirements

For CD radio cassette-corder:

230 V AC, 50 Hz

12 V DC, 8 R20 (size D) batteries

For memory back-up:

4.5 V DC, 3 R6 (size AA) batteries

For remote: 3 V DC, 2 R6 (size AA) batteries

Power consumption: AC 45 W

Battery life

For CD radio cassette-corder:

FM recording

Sony R20P: approx. 2.5 h

Sony alkaline LR20: approx. 8 h

Tape playback

Sony R20P: approx. 1 h

Sony alkaline LR20: approx. 1.5 h

CD playback

Sony R20P: approx. 0.5 h

Sony alkaline LR20: approx. 2 h

For memory back-up: approx. 1 year

Dimensions

Approx. 648 x 218 x 277 mm

(w/h/d) (25 1/8 x 8 x 7 inches)

(incl. projecting parts)

Mass

Approx. 8.7 kg (19 lb. 3 oz) (incl. batteries)

Supplied accessory

AC power cord (1)

Remote controller (1)

Design and specifications are subject to change without notice.

CD RADIO CASSETTE-CORDER



SONY®

TABLE OF CONTENTS

1. SERVICING NOTES	3
2. GENERAL	4
3. DISASSEMBLY	16
4. DIAL POINTER SETTING	22
5. ADJUSTMENTS	
5-1. Mechanical Adjustments	23
5-2. Electrical Adjustments	
Tape Deck Section	23
Tuner Section	25
CD Section	27
6. DIAGRAMS	30
6-1. IC Pin Function Description	31
6-2. Printed Wiring Boards – CD Section –	35
6-3. Schematic Diagram – CD Section –	38
6-4. Schematic Diagram – MAIN Section –	41
6-5. Printed Wiring Boards – MAIN Section –	46
6-6. Printed Wiring Boards – FRONT Section –	49
6-7. Schematic Diagram – FRONT Section –	51
7. EXPLODED VIEWS	53
8. ELECTRICAL PARTS LIST	65

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

SAFETY-RELATED COMPONENT WARNING!!


COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 SERVICING NOTES

CHUCK PLATE JIG ON REPAIRING

On repairing CD section, playing a disc without the CD lid, use Chuck Plate Jig.

- Code number of Chuck Plate Jig: X-4918-255-1

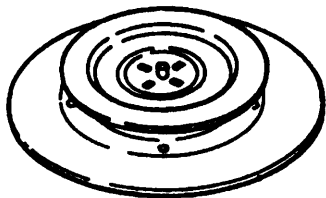

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.


The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

1. Turn POWER switch on with no disc inserted and make Function switch to CD position.
2. Open the lid for CD.
3. Turn on S702 as following figure.
4. Press the button.
5. Confirm the laser diode emission while observing the objecting lens. When there is no emission, Auto Power Control circuit or Optical Pick-up is broken. Objective lens moves up and down three times for the focus search.

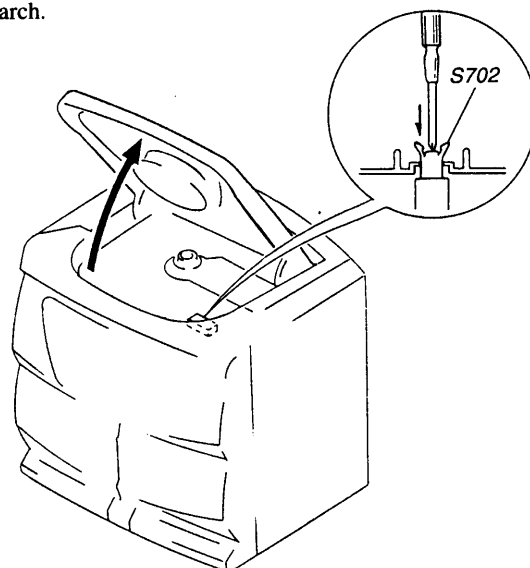

HOW TO CHANGE THE FM CERAMIC FILTERS


This model is used two ceramic filters of CF1 and CF4.

You must use same type of color marked ceramic filters in order to meet same specifications.

Therefore, the ceramic filter must change two pieces together since it's supply two pieces in one package as a spare parts.


	Mark 1	Mark 2	Center frequency
	red	—	10.70MHz
	blue	—	10.67MHz
	orange	—	10.73MHz
	black	—	10.64MHz
	white	—	10.76MHz
	white	white	10.75 MHz
	yellow	—	10.79 MHz

Playing a CD

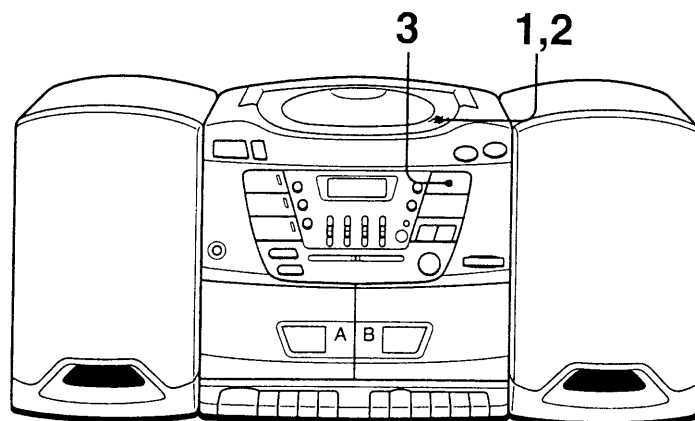


For hookup instructions, see pages 20 – 22.

1

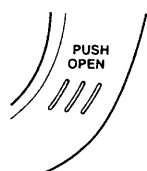


Push PUSH OPEN down to open the CD compartment and place the CD on the CD compartment.

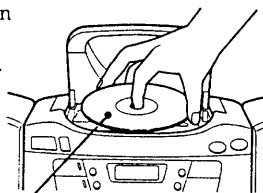

With the label side up


2

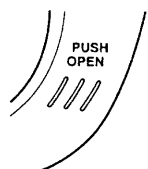

Close the lid of the CD compartment.




3




Press ►|| (direct power-on).
The player plays all the tracks once.

Display



Track number Playing time

Use these buttons for additional operations

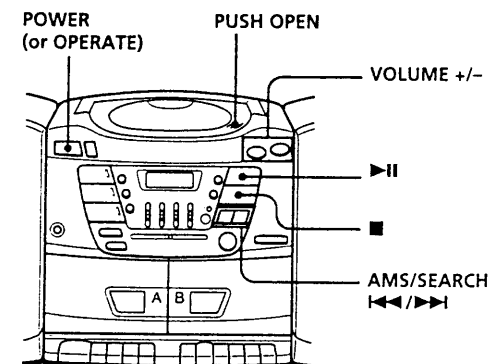

Tip

Next time you want to listen to a CD, just press ►||. The player turns on automatically and starts playing the CD.


To	Press
Adjust the volume	VOLUME +/-
Stop playback	■
Pause playback	► Press again to resume play after pause.
Go to the next track	AMS/SEARCH ►►
Go back to the previous track	AMS/SEARCH ◄◄
Remove the CD	PUSH OPEN
Turn on/off the player	POWER (or OPERATE, see page 2)

SECTION 2 GENERAL


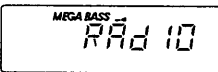
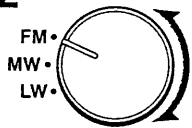

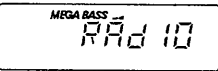
This section is extracted from instruction manual.

Basic Operations

Listening to the radio

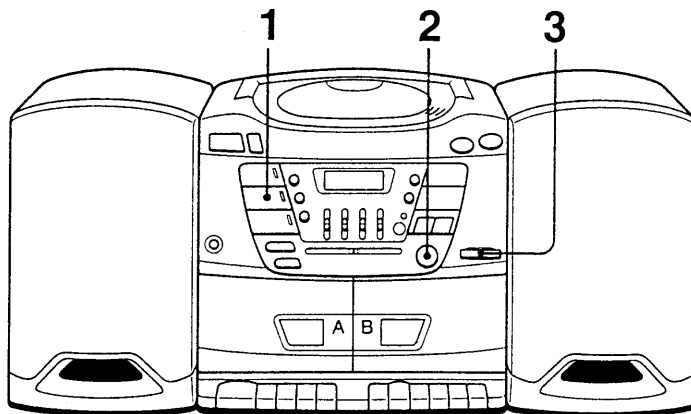


For hookup instructions, see pages 20 – 22.

1		<p>Press RADIO (direct power-on).</p>	<p>Display</p> 
2	<p>BAND</p> 	<p>Turn BAND to select the band you want.</p>	
3	<p>TUNING</p> 	<p>Turn TUNING to tune in the station you want.</p>	

Tips

- If the FM broadcast is noisy, set FM MODE/ISS at the rear to "MONO". Radio will play in monaural.
- Next time you want to listen to the radio, just press the RADIO button. The player turns on automatically and starts playing the previous station.


Use these buttons for additional operations

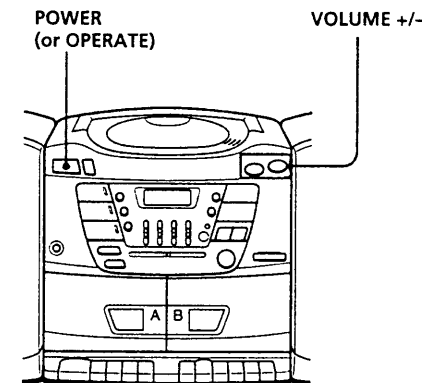


To	Press
Adjust the volume	VOLUME +/-
Turn on/off the radio	POWER (or OPERATE, see page 2)

To improve broadcast reception

Reorient the antenna for FM. Reorient the player itself for MW/LW.

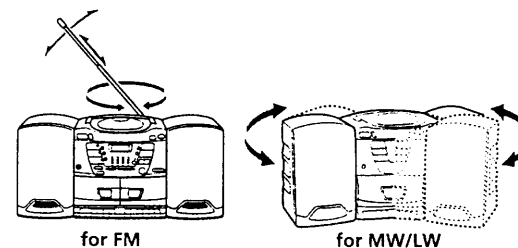

Playing a tape

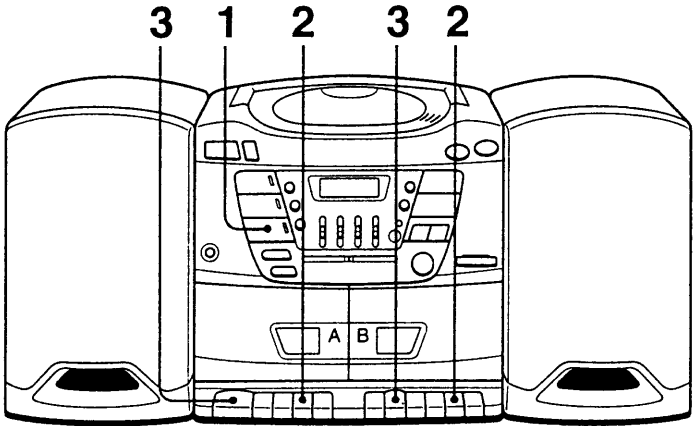

For hookup instructions, see pages 20 – 22.

- Press TAPE (direct power-on).

Display
- Press to open tape compartment and insert a recorded tape. Close the compartment.


With the side you want to play facing forward
- Press .

The player starts playing.

Note
During playback, do not press buttons on the other deck. Otherwise the playback speed may change.

Tip
For the best results, use TYPE I (normal) tape.

Use these buttons for additional operations

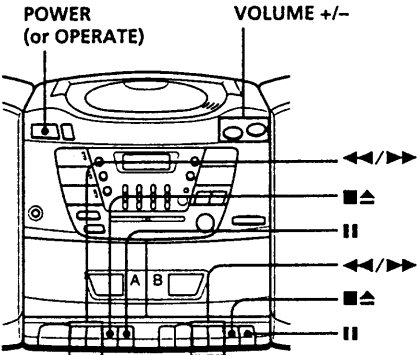


To	Press or slide
Adjust the volume	VOLUME +/-
Stop playback	
Fast-forward or rewind the tape	or
Pause playback	
	Press the button again to resume play after pause.
Play the opposite side of the tape	DIR in the direction of the arrow. The or in the display indicates the tape direction of deck A.
Eject the cassette	
Turn on/off the player	POWER (or OPERATE, see page 2)

To select the direction of the tape (deck A only)

To play	Switch DIRECTION MODE to
Both sides of the tape repeatedly	
Both sides of the tape from the front side to reverse side only*	


* If play begins from the reverse side, the tape stops at the end of that side.

Recording on a tape

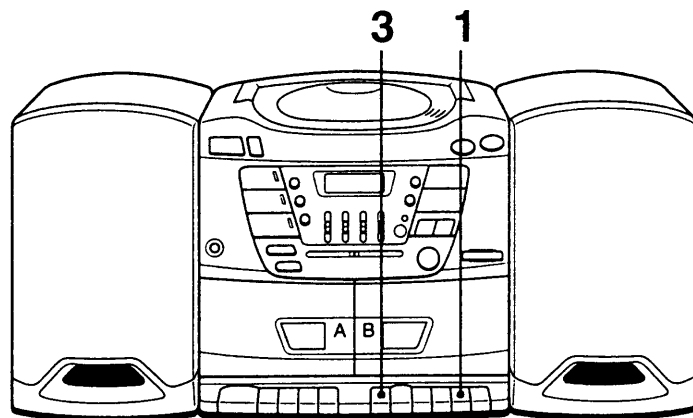


For hookup instructions, see pages 20 – 22.

1




Press to open the tape compartment on deck B and insert a blank tape.

With the side you want to record on facing forward

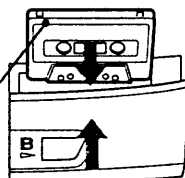

2

Select the program source you want to record.



To record from the CD player, insert a CD (see page 4) and press CD.







To record from the radio, press RADIO and tune in the station you want using TUNING (see page 6.)



To record from a tape, press TAPE, insert a recorded tape into deck A and press and on deck A.

Display



3 Deck B



HI-SPEED
DUBBING



Start recording.

To record, press on deck B (is depressed automatically).

For high speed dubbing, after depressing HI-SPEED DUBBING, press on deck B (is depressed automatically).

Note


When recording a CD, press after the total track number and the total playing number of the CD have been displayed.

Tips

- Adjusting the volume or the audio emphasis (see page 23) will not affect the recording level.
- If the MW/LW program makes a whistling sound after you've pressed in step 3, set the FM MODE/ISS (Interference Suppress Switch) at the rear to the position that most decreases the noise.
- For the best results, use the AC power as a power source and use TYPE I(normal) tape for recording.
- To erase a recording, proceed as follows:
 - 1 Press TAPE until "TAPE" appears in the display window.
 - 2 Press on deck B.

Use these buttons for additional operations


POWER
(or OPERATE)

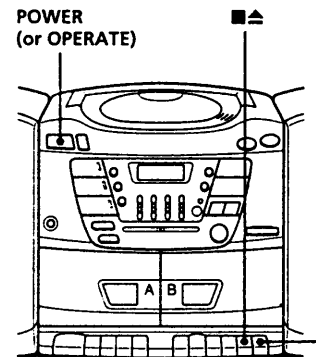

To	Press
Stop recording	on deck B
Pause recording	on deck B Press the button again to resume recording.
Turn on/off the player	POWER (or OPERATE, see page 2)


Using the display

You can check information about the CD using the display.

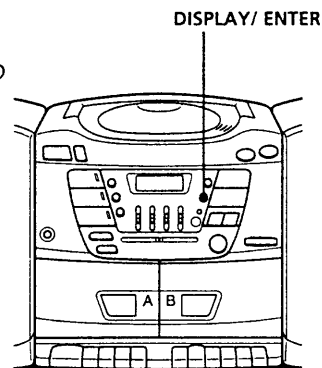

Checking the total track numbers and playing time

Press DISPLAY/ENTER in stop mode.




Checking the remaining time

Press DISPLAY/ENTER while playing a CD.

To display	Press DISPLAY/ENTER
Remaining time on the CD and the number of tracks left	Once
The current track number and playing time	Twice

Locating a specific track

You can quickly locate any track using the number buttons. You can also find a specific point in a track while playing a CD.

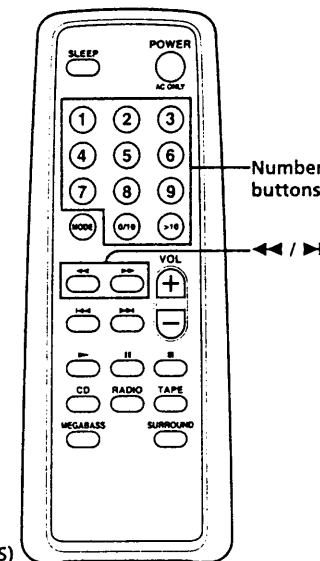

The CD Player

(Excluding CFD-ZW150S)

Note

You cannot locate a specific track if "SHUF REP" or "PGM" is lit in the display. Turn off the indication by pressing ■.

Tip


When you locate a track numbered over 10, press >10 first, then the corresponding number buttons.
Example:
To play track number 23, press >10 first, then 2 and 3.

To locate	Press
a specific track directly	number button of the track.
a point while listening to sound	▶▶ (forward) or ◀◀ (backward) the while playing and hold down until you find the point. When you use the buttons on the player, use AMS/SEARCH ◀◀/▶▶.
a point while observing the display	▶▶ (forward) or ◀◀ (backward) in pause and hold down until you find the point. When you use the buttons on the player, use AMS/SEARCH ◀◀/▶▶.

Playing tracks repeatedly

(Repeat Play)

You can play tracks repeatedly in normal, shuffle or program play modes (see page 15).

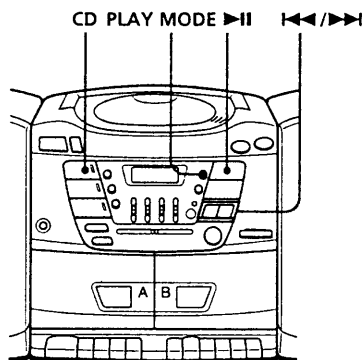

- 1 Press CD.
"Cd" appears in the display.
- 2 Press PLAY MODE until the repeat mode you want appears in the display.

To repeat	Select
a single track	REP 1
all the tracks	REP ALL
tracks in random order	SHUF REP
programed tracks	PGM REP and then program tracks (see step 3 on page 15).

- 3 Do either of the following to start repeat play:
 - When you've selected REP1, select the track by pressing AMS/SEARCH ◀◀ or ▶▶ and press ▶II.
 - When you've selected REP ALL, SHUF REP or PGM REP, press ▶II.


To cancel Repeat Play

Press PLAY MODE until "REP" disappears from the display.

Creating your own program

(Program Play)


You can make a program of up to 20 tracks in the order you want them to be played.

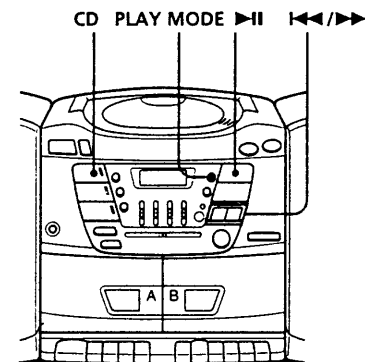

Tips

- When using the remote, you can select the track by pressing the number buttons instead of AMS/SEARCH ◀◀/▶▶ and DISPLAY/ENTER.
- You can play the same program again, since the program is saved until you open the disc compartment.
- You can record your own program. After you've created the program, insert a blank tape into deck B and press ● on deck B to start recording.

- 1 Press CD.
"Cd" appears in the display.
- 2 Press PLAY MODE until "PGM" appears in the display.
- 3 Press AMS/SEARCH ◀◀ or ▶▶ then press DISPLAY/ENTER for the tracks you want to program in the order you want. You can program up to 20 tracks.

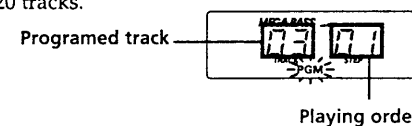

- 4 Press ▶II to start program play.

To cancel Program Play

Press PLAY MODE until "PGM" disappears from the display.

To check the order of tracks before play

Press DISPLAY/ENTER.


Every time you press the button, the track number appears in the programed order.

To change the current program

Press ■ once if the CD is stopped and twice if the CD is playing. The current program will be erased. Then create a new program following the programming procedure.

Setting the clock

Before you set the clock, insert three R6 (size AA) batteries and connect the AC power cord (see page 20 and 21.)
As long as the clock goes, ":" flashes.

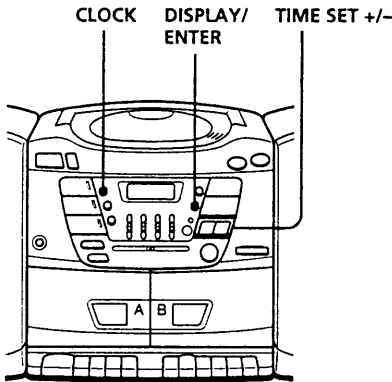

- 1 Press and hold CLOCK for about 2 seconds until the hour digit flash.
- 2 Press TIME SET +/- until you set the current hour. Then press DISPLAY/ENTER.


The minute digits flash. Set the minutes by pressing TIME SET +/- until the current minute is displayed.



- 3 Press DISPLAY/ENTER.
The clock starts from 00 seconds.

Waking up to music


You can wake up to music at a preset time. Make sure you have set the clock ("Setting the clock" on page 16).

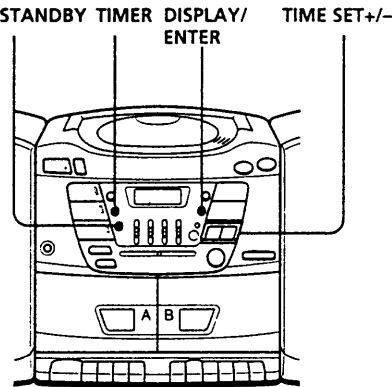

- 1 Prepare the music source you want to play.

To play	Do this
the radio	Tune in a station
a CD	Insert a CD.

- 2 Press TIMER for about 2 seconds.
The ☀ (clock) and the music source ("Cd" or "RADIO") flash.
- 3 Select the music source ("Cd" or "RADIO") by pressing TIME SET +/-, then DISPLAY/ENTER.
- 4 Set the timer to the hour you want the music to start by pressing TIME SET +/- then DISPLAY/ENTER. Set the minutes, then press DISPLAY/ENTER.
- 5 Press TIME SET +/- to set the volume, then DISPLAY/ENTER.



continued

The Timer

Waking up to music (continued)

Tips

- The display window dims while the waking up timer is on.
- You can have the player go on the next day at the same time. Just press **STANDBY** until the ☉ indication appears in the display. The preset settings remain until you reset them.

Note

During the timer mode, you cannot change the tape player to the tape function. To operate the tape player, press **STANDBY** until the ☉ indication disappears from the display first, then operate the tape player.

6 Press **STANDBY**.

The ☉ indication appears in the display and the power goes off.

At the preset time, the power will go on and music will play for 2 hours.

To check/change when the playback will start

Press **TIMER** for about 2 seconds, then **DISPLAY/ENTER**. Each time you press **DISPLAY/ENTER**, a stored setting lights up. Change the setting if you need to when the setting lights up. When you finish checking the setting of volume, press **TIMER** again.

To use the player before a timer playback starts

Just turn on the player, and then you can use it.

If you turn off the player before the preset time, timer playback will start at the preset time.


In case of the radio, however, if you listen to the station which is different from the one you tuned in in step 1 on page 17, you will hear that station at the preset time. Make sure to tune in the station you want to listen to before you turn off the player.

To stop play

Press **POWER** (or **OPERATE**).

Falling asleep to music

You can set the player to turn off automatically after about 2 hours, allowing you to fall asleep while listening to music.

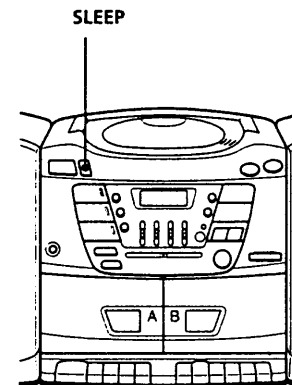

The Timer

Tips

- The display window dims while the sleep timer is on.
- When you are playing radio or CD, make sure that ► of the tape player is not depressed.
- You can fall asleep and wake up to different music. First, set the wake up timer by following steps in "Waking up to music" on page 17. Then, turn the power on and follow the steps on this page to set the sleep timer. When you are listening to the radio, make sure to tune in the station you want to wake up to.

1 Play the music source you want.

2 Press **SLEEP**.


"SLEEP" appears in the display. The player shuts off automatically after about 2 hours.

To cancel the sleep function

Press **SLEEP** again.


Hooking up the system

Make sure you turn off the power before making any connections.

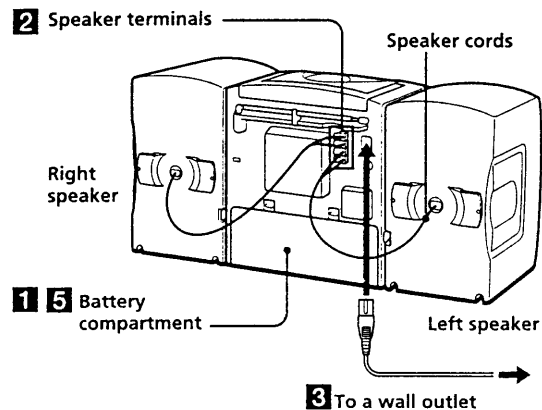


1 Inserting the back-up batteries

Insert three R6 (size AA) batteries (not supplied) into the battery compartment. These batteries work to save the memory data.

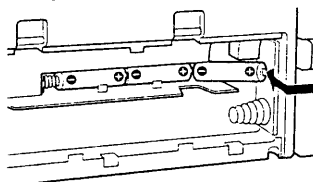

2 Hooking up the speakers

- 1 Align the grooves and slide the speaker box down until it snaps into place A.

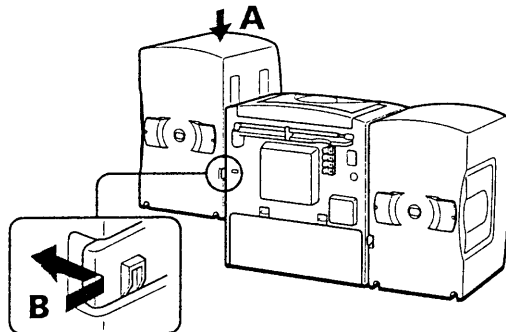


Tips

- To detach the speakers, unlock speaker (see B on the diagram) and slide the speaker box all the way up and away from the player.
- Connect the speakers for this unit only to the speaker terminals of this unit. If you connect any other speakers or equipment, malfunction may occur.

- 2 Twist the speaker cable coating and strip it from the end of the cable.



- 3 Connect the black wires to (-) minus and the red wires to (+) plus terminals; the right speaker wires to the R and the left speaker wires to the L terminals.

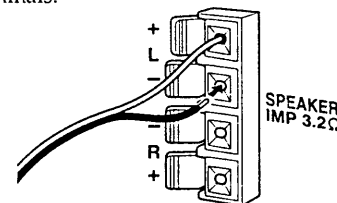

Tip

Only for the customers supplied with an AC plug adaptor:

Use the supplied AC plug adaptor if the plug of the AC power cord does not match your outlet.

3 Connecting the AC power cord

Insert one end of the supplied AC power cord to the AC IN socket located at the rear of the player, and the other end to the wall outlet.


Setting Up

continued

Hooking up the system (continued)

Note
When you operate the player with the batteries, you cannot turn on the player using the remote.

4 Inserting batteries into the remote

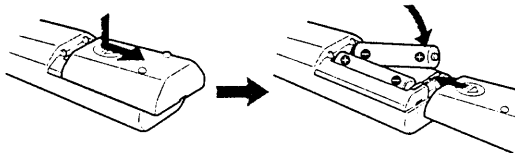

Insert two R6 (size AA) batteries (not supplied)


Replacing batteries

With normal use, the batteries should last for about six months. When the remote no longer operates the player, replace all the batteries with new ones.

5 Using the player on batteries

Insert eight R20 (size D) batteries (not supplied) into the battery compartment.

To use the player on batteries, disconnect the AC power cord from the player.

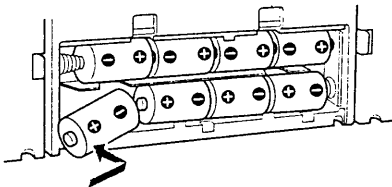


Note
When you operate the player with batteries, the backlight does not work even if the player is on.

Tip
Replace the batteries when the OPR/BATT indicator dims or when the player stops operating. Replace all the batteries with new ones. Before you replace the batteries, be sure to take out the CD from the player.

Adjusting the audio emphasis
(MEGA BASS/4 BAND GRAPHIC EQUALIZER/SURROUND)

You can adjust the audio emphasis of the sound you are listening to.

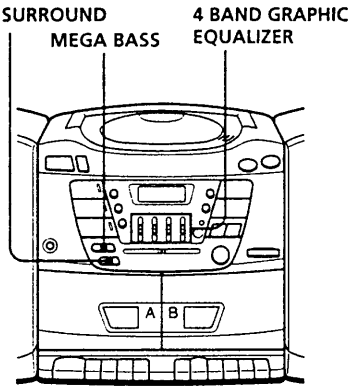

Selecting the sound characteristic

Slide 4 BAND GRAPHIC EQUALIZER to select the audio emphasis you want.

Frequency coverage	Slide the control up (to +10)	Slide the control down (to -10)
400 Hz	to emphasize speaking voice, middle frequencies of instrumental music	to de-emphasize speaking voice, middle frequencies of instrumental music
1 kHz	to provide more presence of vocals	to provide less presence of vocals
4 kHz	to heighten overall brightness of sound	to lessen overall brightness of sound
10 kHz	to increase high treble sounds	to decrease high treble sounds or reduce high frequency noise/tape hiss

Reinforcing the bass sound

Press MEGA BASS.

"MEGA BASS" appears in the display. You can reinforce the bass sound in two steps. To return to normal sound, press the button until "MEGA BASS" disappears from the display.

continued

Getting the surround effect

Press SURROUND.

The "SURROUND" indication appears in the display.

You can get the surround effect without connecting surround speakers.

Precautions

On safety

- As the laser beam used in the CD player section is harmful to the eyes, do not attempt to disassemble the casing. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

On power sources

- For AC operation use the supplied AC power cord; do not use any other type.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- For battery operation, use eight R20 (size D) batteries.
- When the batteries are not to be used, remove them to avoid damage that can be caused by battery leakage or corrosion.
- The nameplate indicating operating voltage, power consumption, etc. is located at the rear.

On placement

- Do not leave the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 10 mm of the side of the cabinet. The ventilation holes must be unobstructed for the player to operate properly and prolong the life of its components.
- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the player to prevent possible damage from the magnet.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- If the player has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

continued

Precautions (continued)

Notes on CDs

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.




- Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or sticker on the CD, nor scratch the surface of the CD.
- After playing, store the CD in its case.

If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.

Notes on cassettes


- Break off the cassette tab from side A or B to prevent accidental recording. If you want to reuse the tape for recording, cover the broken tab with adhesive tape.

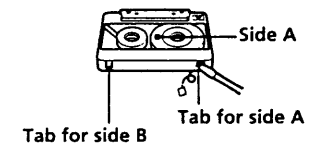

- To record on a tape with its tab broken off, cover the respective tab hole for side A or B with adhesive tape.
- The use of a cassette with more than 90 minutes of play time is not recommended except for long, continuous recording or playback.


SECTION 3 DISASSEMBLY

• This set can be disassembled in the order shown below.

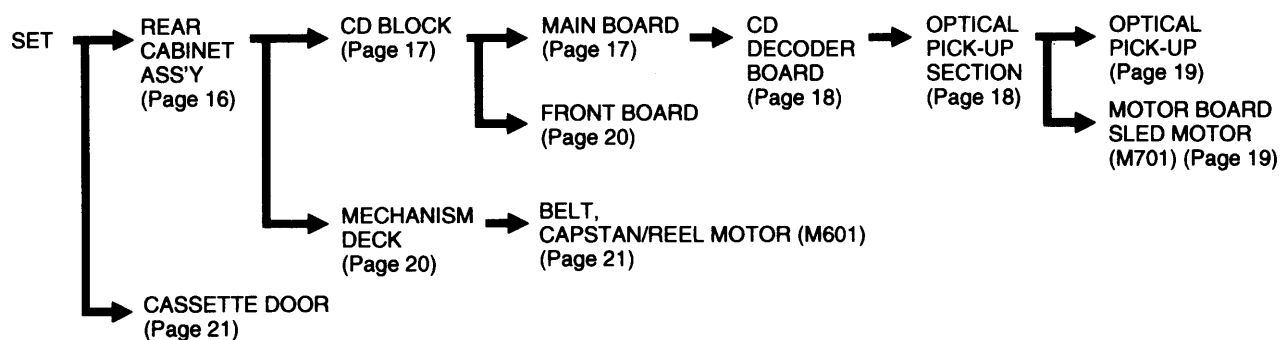


Note: Follow the disassembly procedure in the numerical order given.


REAR CABINET ASS'Y

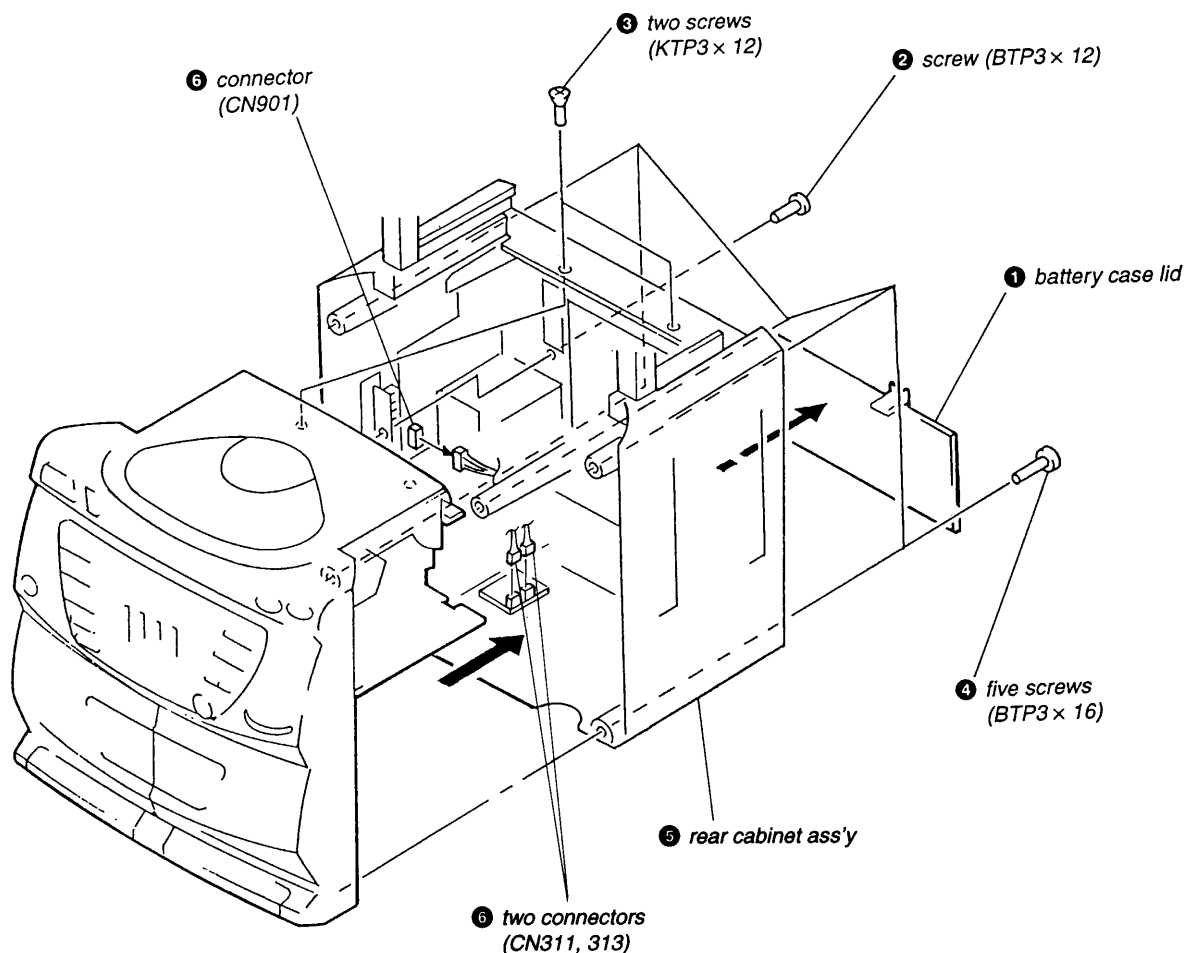


CD BLOCK ASS'Y

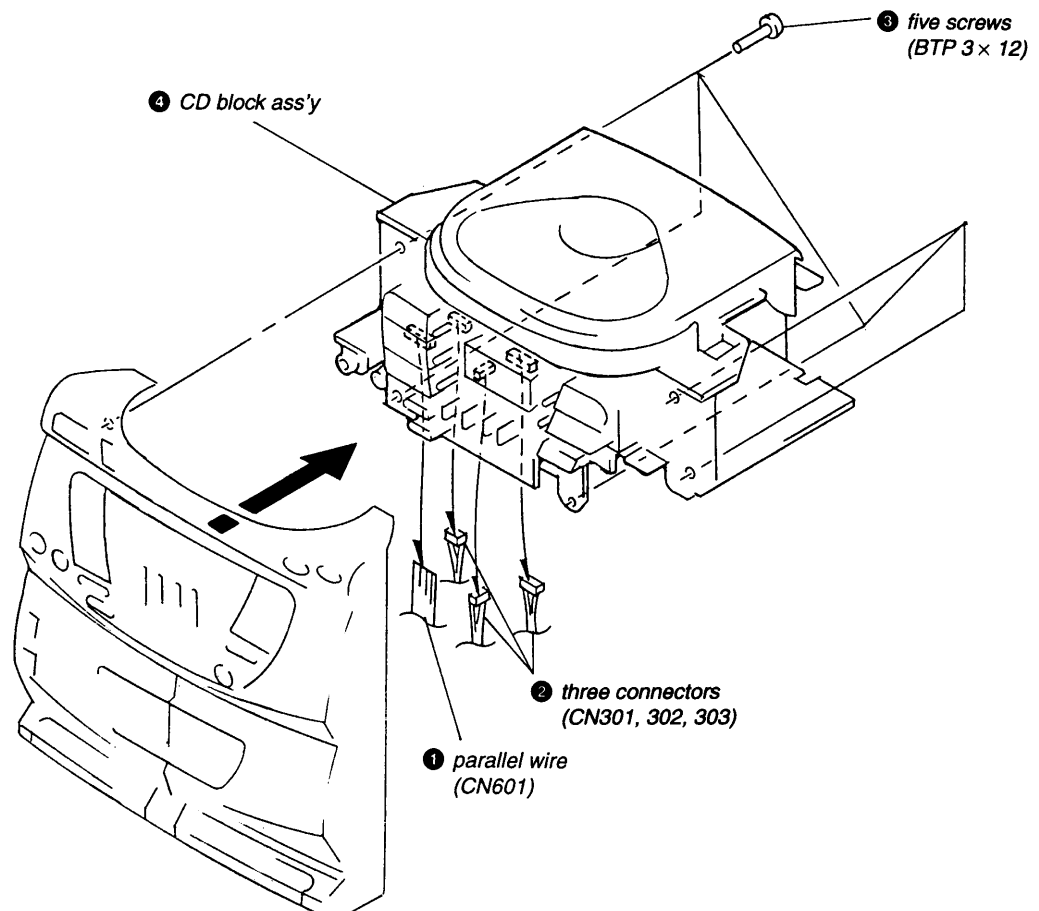


MAIN BOARD

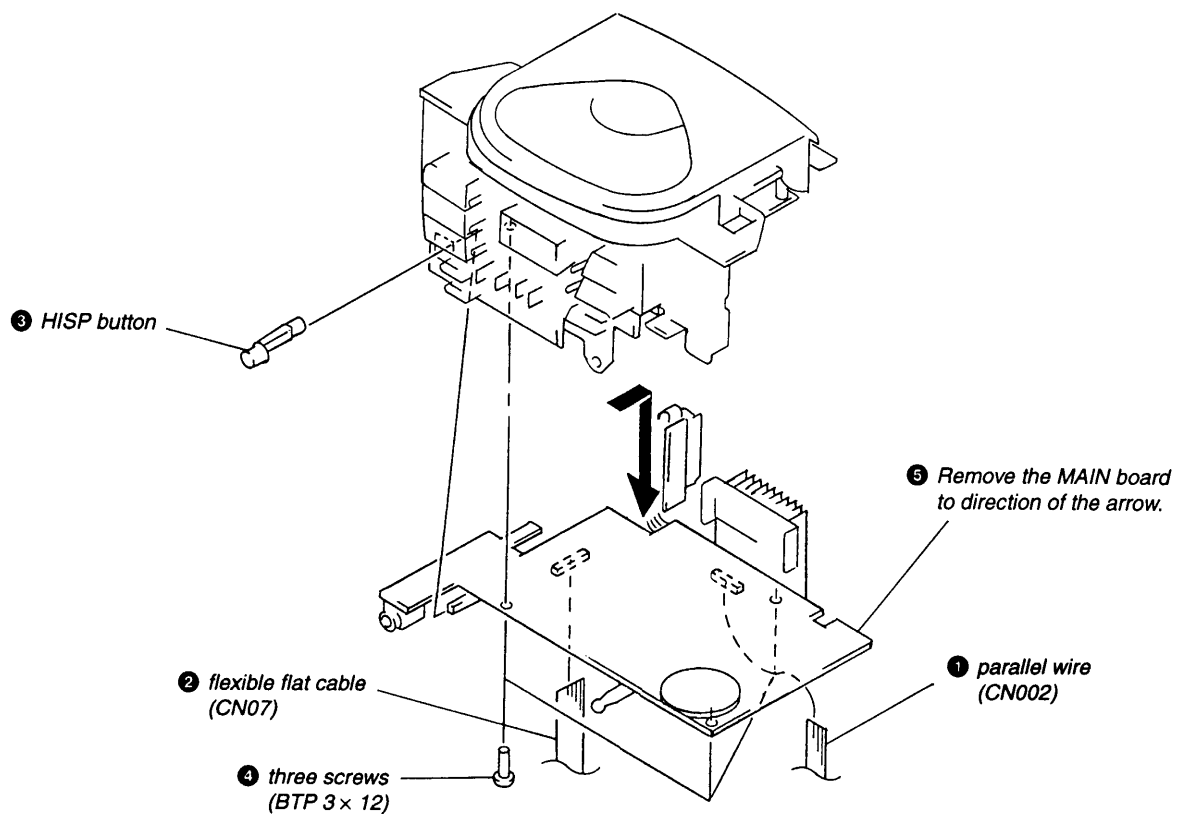


CD DECODER BOARD

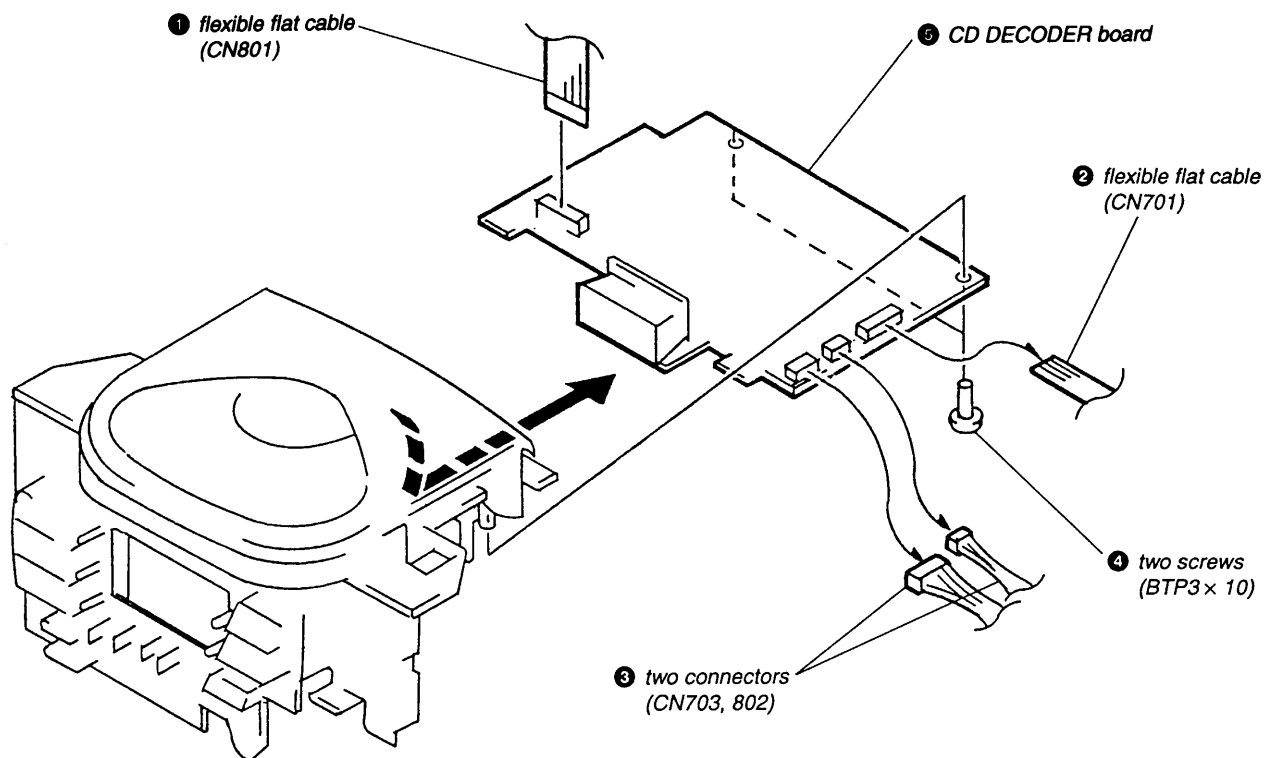


OPTICAL PICK-UP SECTION (KSM-213CAM/C2NP)

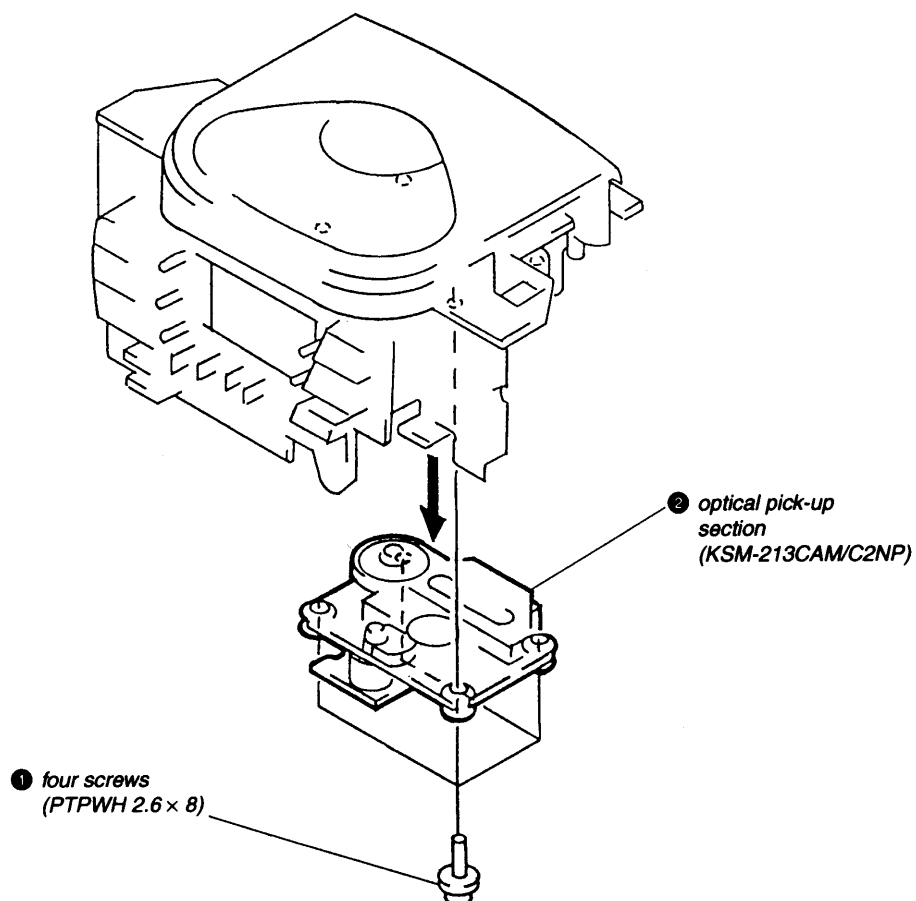


OPTICAL PICK-UP (KSS-213C/C2N)

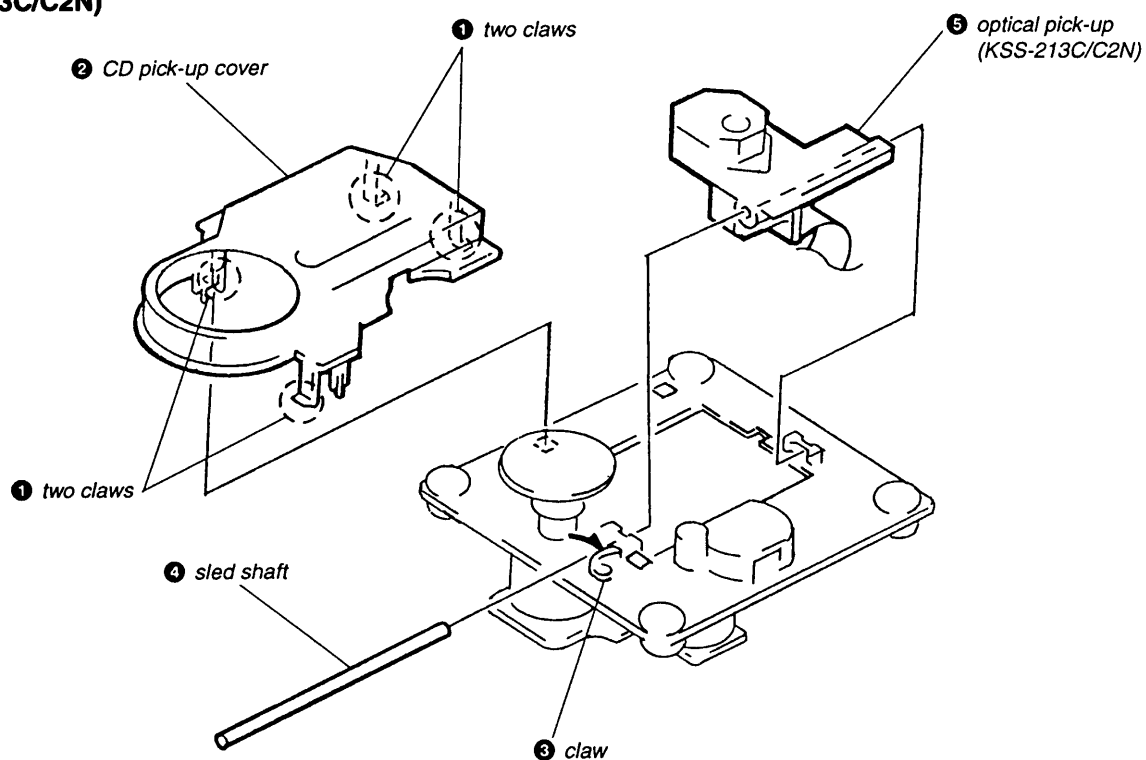


MOTOR BOARD, SLED MOTOR (M701)

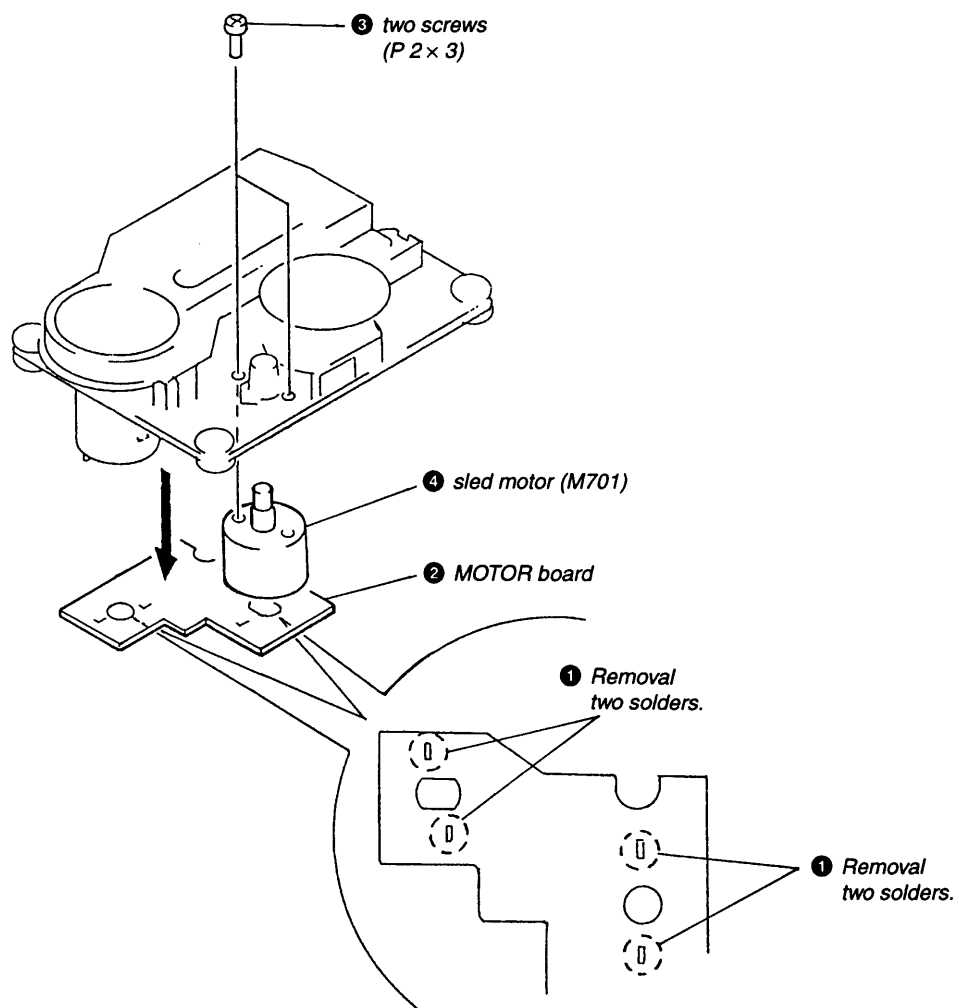


FRONT BOARD

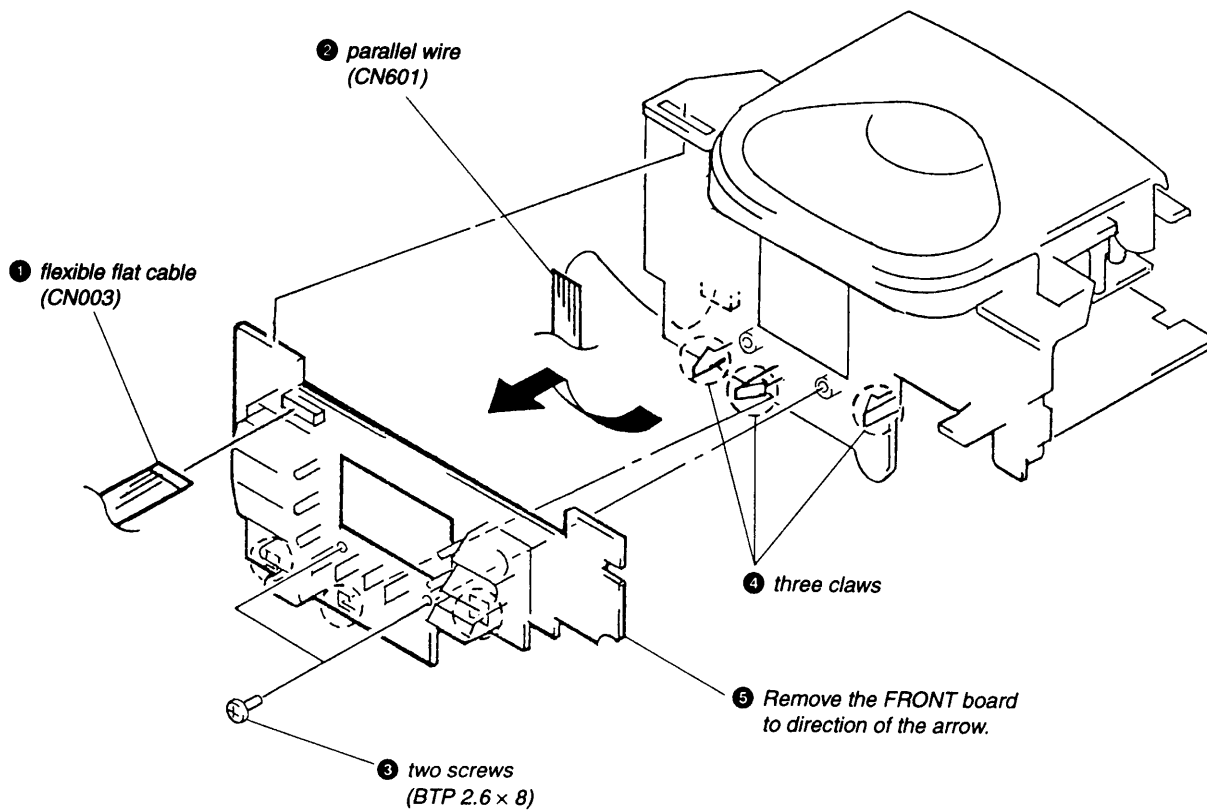


MECHANISM DECK (MF-ZW200)

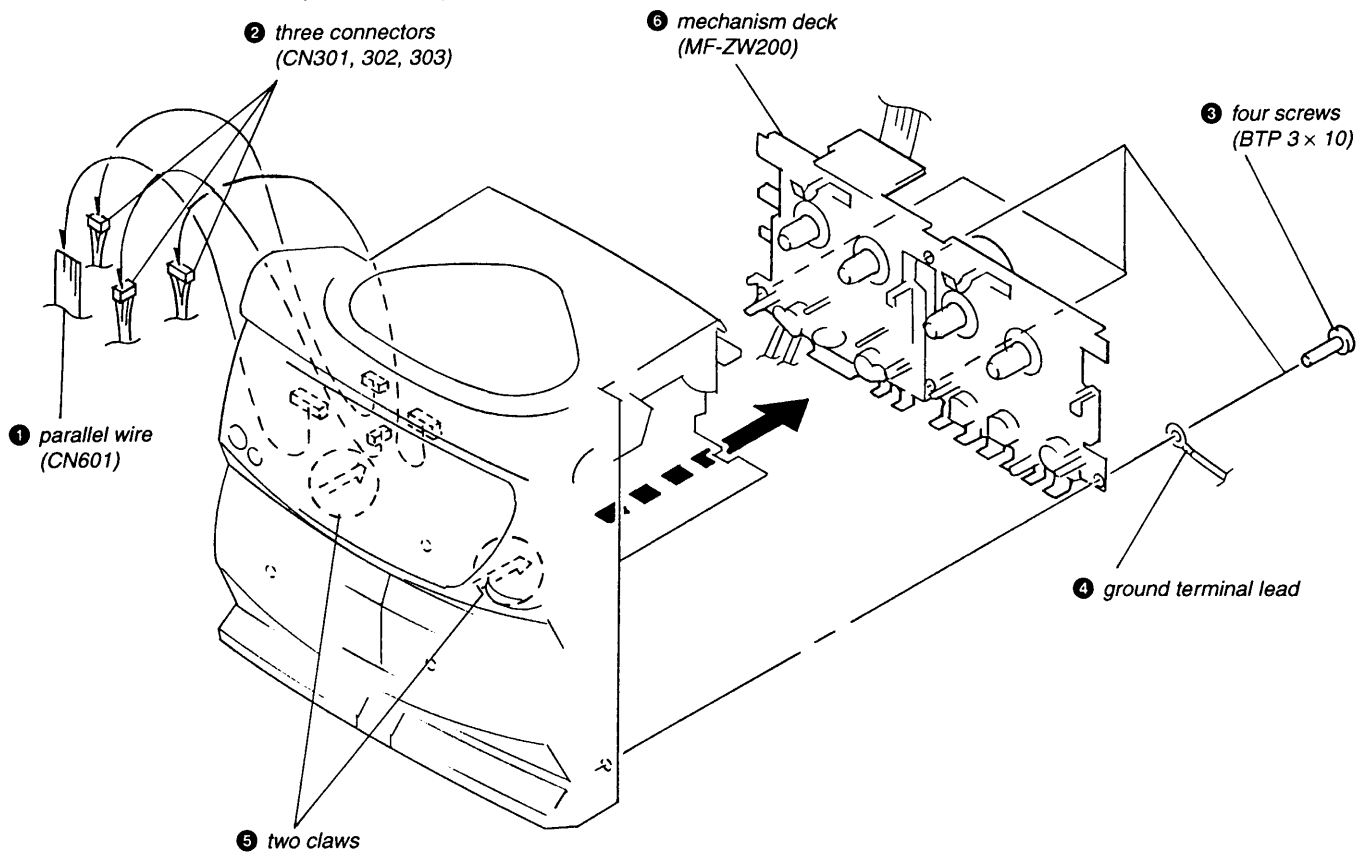

BELT, CAPSTAN/REEL MOTOR (M601)

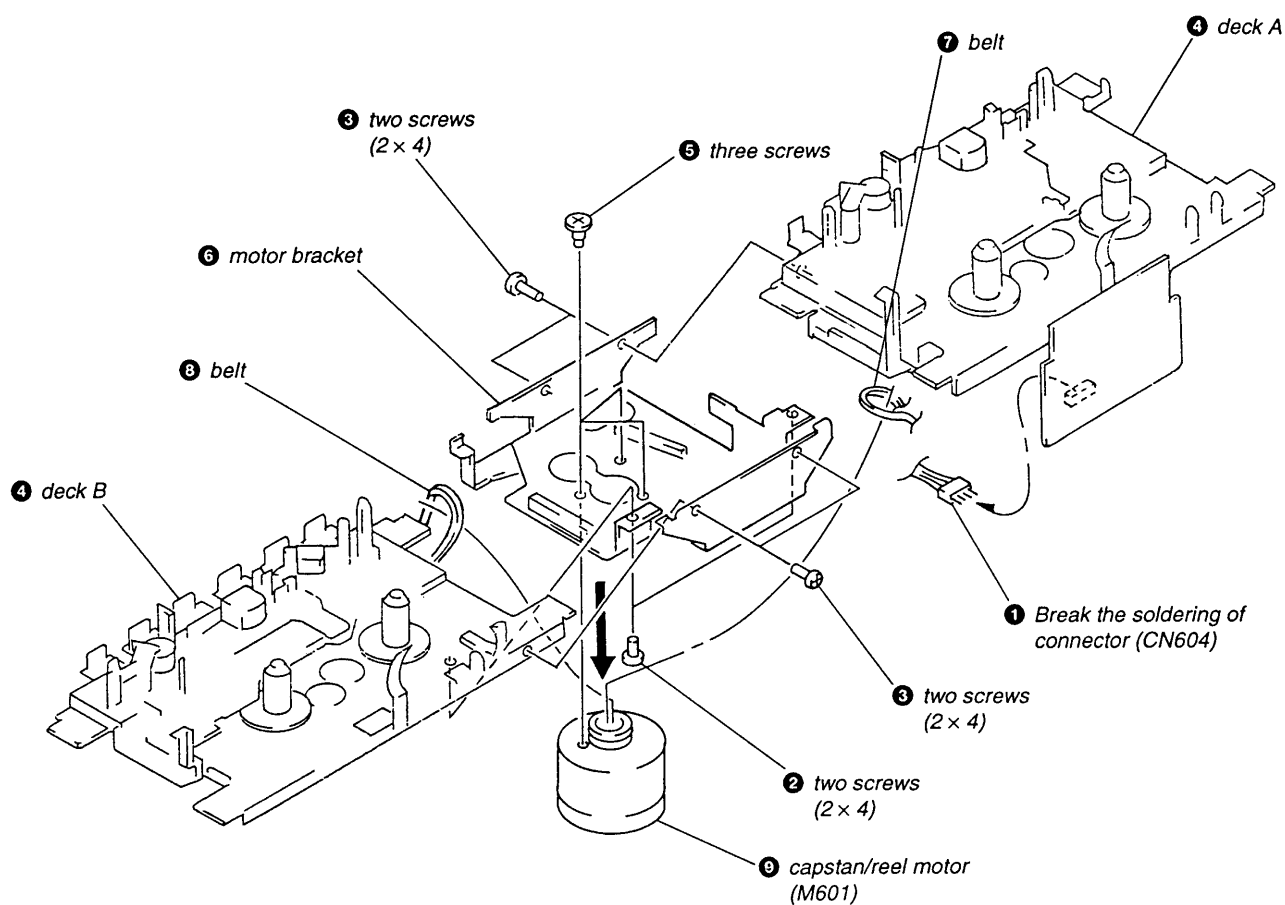


CASSETTE DOOR

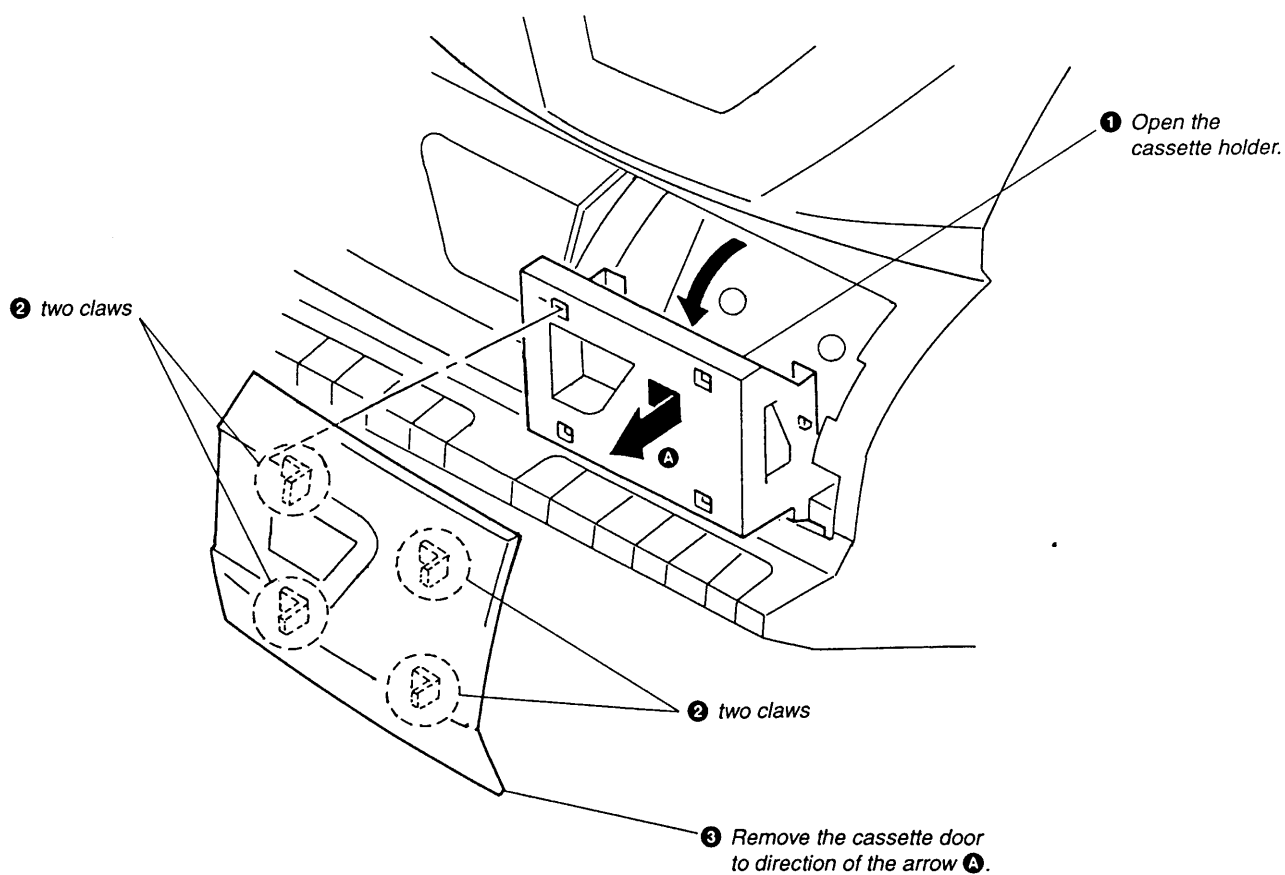

SECTION 4 DIAL POINTER SETTING

Note: Follow the assembly procedure in the numerical order given.

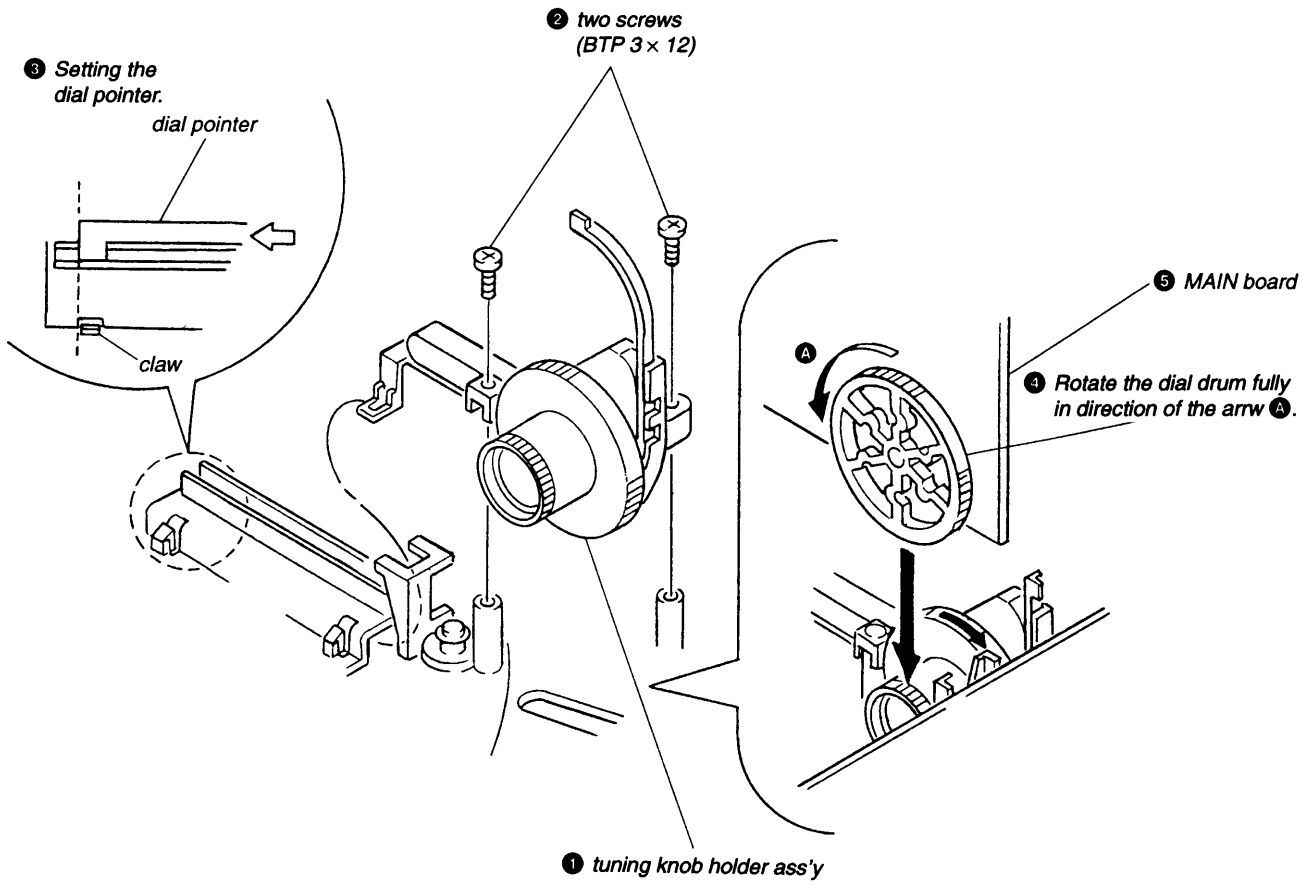

SECTION 5 ADJUSTMENTS

5-1. MECHANICAL ADJUSTMENTS

PRECAUTION

- Clean the following parts with a denatured-alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	idlers
- Demagnetize the record/playback head with a head demagnetizer. (Do not bring the head demagnetizer close to the erase head.)
- Do not use a magnetized screwdriver for the adjustments.
- After the adjustments, apply suitable locking compound to the parts adjusted.
- The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

DECK-A

DECK-B

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	30 – 75 g•cm (0.42 – 0.98 oz•inch)
FWD back tension		1 – 5 g•cm (0.021 – 0.084 oz•inch)
REV	CQ-102RC	30 – 75 g•cm (0.42 – 0.98 oz•inch)
REV back tension		1 – 6 g•cm (0.021 – 0.069 oz•inch)
FF	CQ-201B	55 – 130 g•cm
Rewind		(0.834 – 1.874 oz•inch)

Tape Tension Measurement

DECK-A

DECK-B

Mode	Tension Meter	Meter Reading
FWD	CQ-403A	more than 100 g
REV (Deck A)	CQ-403R	(3.53 oz)

5-2. ELECTRICAL ADJUSTMENTS

TAPE DECK SECTION

0 dB=0.775 V

- The adjustments should be performed in the order given in the service manual. (As a general rule, Playback circuit adjustment should be completed before performing recording circuit adjustment.)
- The adjustments should be performed for both L-ch and R-ch unless otherwise indicated.
 - Switch Location

FUNCTION switch	TAPE
MEGA BASS switch	OFF
SURROUND switch	OFF
VOLUME switch	maximum

Standard Output Level

	SP OUT	PHONES
Load impedance	3.2W	32W
Output level	0.775 V (0 dB)	0.25 V (–10 dB)

Test Tape


Type	Signal	Used for
WS-48B	3 kHz, 0 dB	Tape speed adjustment
P-4-A063	6.3 kHz, –10 dB	Head azimuth adjustment

Record/Playback Head Azimuth Adjustment **DECK-A**


DECK-B

Procedure:

- Mode: FWD/REV playback (DECK A)
FWD playback (DECK B)

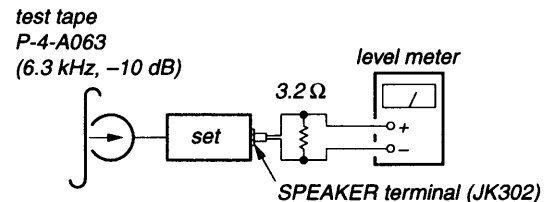

- Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1 dB.


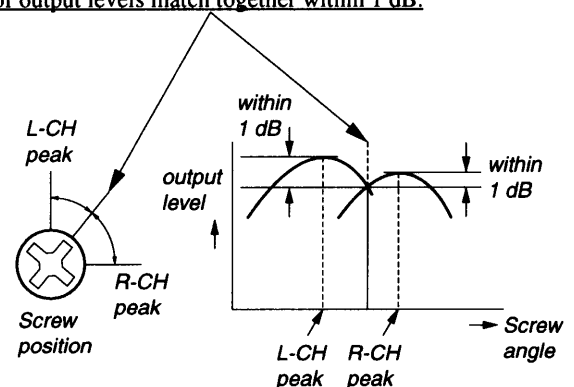


3. Phase Check

Mode: FWD/REV playback (DECK A)
FWD playback (DECK B)


test tape
P-4-A063

(6.3 kHz, -10 dB)

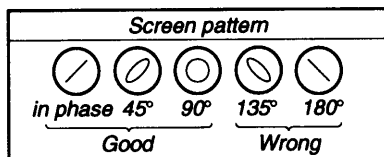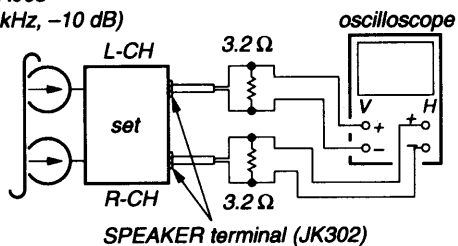

4. Set in the REV mode and repeat the step 1 to 3.
5. After the adjustment, lock the screws with locking compound.

Adjustment Location:

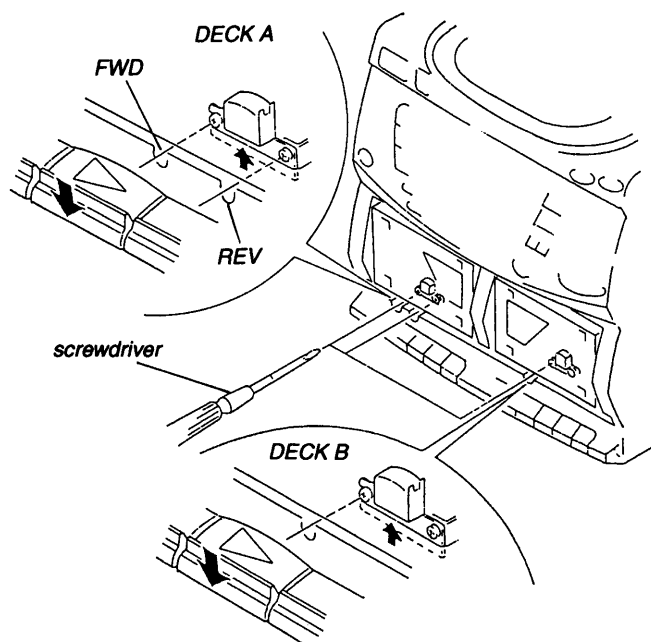


Tape Speed Adjustment

DECK-A

DECK-B

Procedure:

Mode: FWD/REV playback (DECK A)
FWD playback (DECK B)

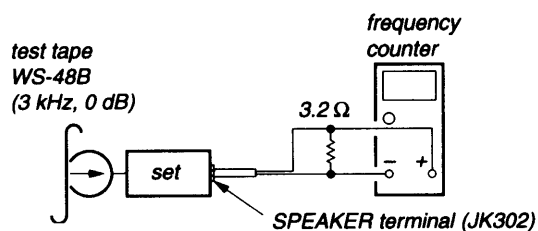

Adjustment Values:


Adjustment part	Frequency counter
SFR301	3,000 Hz

Note: (High speed: non Adjustment)

Adjustment Location: MAIN board (See page 26.)


TUNER SECTION

[AM]

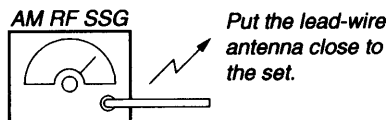


30% amplitude modulation by
400 Hz signal
output level: as low as possible

[FM]

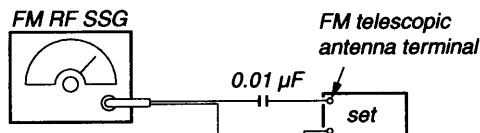

75 kHz frequency deviation
by 1 kHz signal.
output level: as low as possible

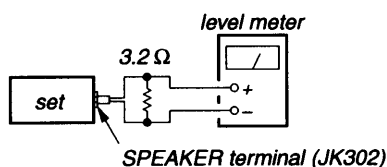

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

(): East European Model

AM IF ADJUSTMENT	
Adjust for a maximum reading on level meter.	
T1	455 kHz

LW FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on level meter.	
L8	145 kHz
CT10	295 kHz

LW TRACKING ADJUSTMENT	
Adjust for a maximum reading on level meter.	
L3-2	160 kHz
CT5	260 kHz

MW FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on level meter.	
L4	520 kHz
CT4	1,680 kHz

MW TRACKING ADJUSTMENT	
Adjust for a maximum reading on level meter.	
L3-1	600 kHz
CT3	1,400 kHz

FM FREQUENCY COVERAGE ADJUSTMENT

Adjust for a maximum reading on level meter.

L2	87.6 MHz (64.0 MHz)
CT2	107.0 MHz (109.5 MHz)

FM TRACKING ADJUSTMENT

Adjust for a maximum reading on level meter.


L1	87.6 MHz (68.0 MHz)
CT1	107.87 MHz (102 MHz)

Adjustment Location: MAIN board (See page 26.)

FM VCO Adjustment


Procedure:

STEREO MODE switch (SW301): STEREO

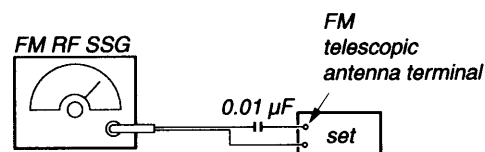


Carrier frequency : 98 MHz
Modulation : no modulation
Output level : 0.1 V (100 dB)

- Connect the frequency counter to pin ④ of IC1 as shown the figure below.
- Tune the set to 98 MHz.
- Adjust RV1 for 76 kHz \pm 500 Hz reading on the frequency counter.

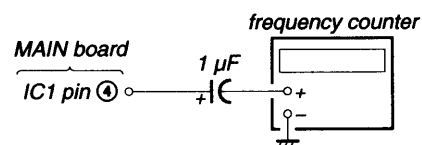

Adjustment Location: MAIN board (See page 26.)

Adjustment Location:

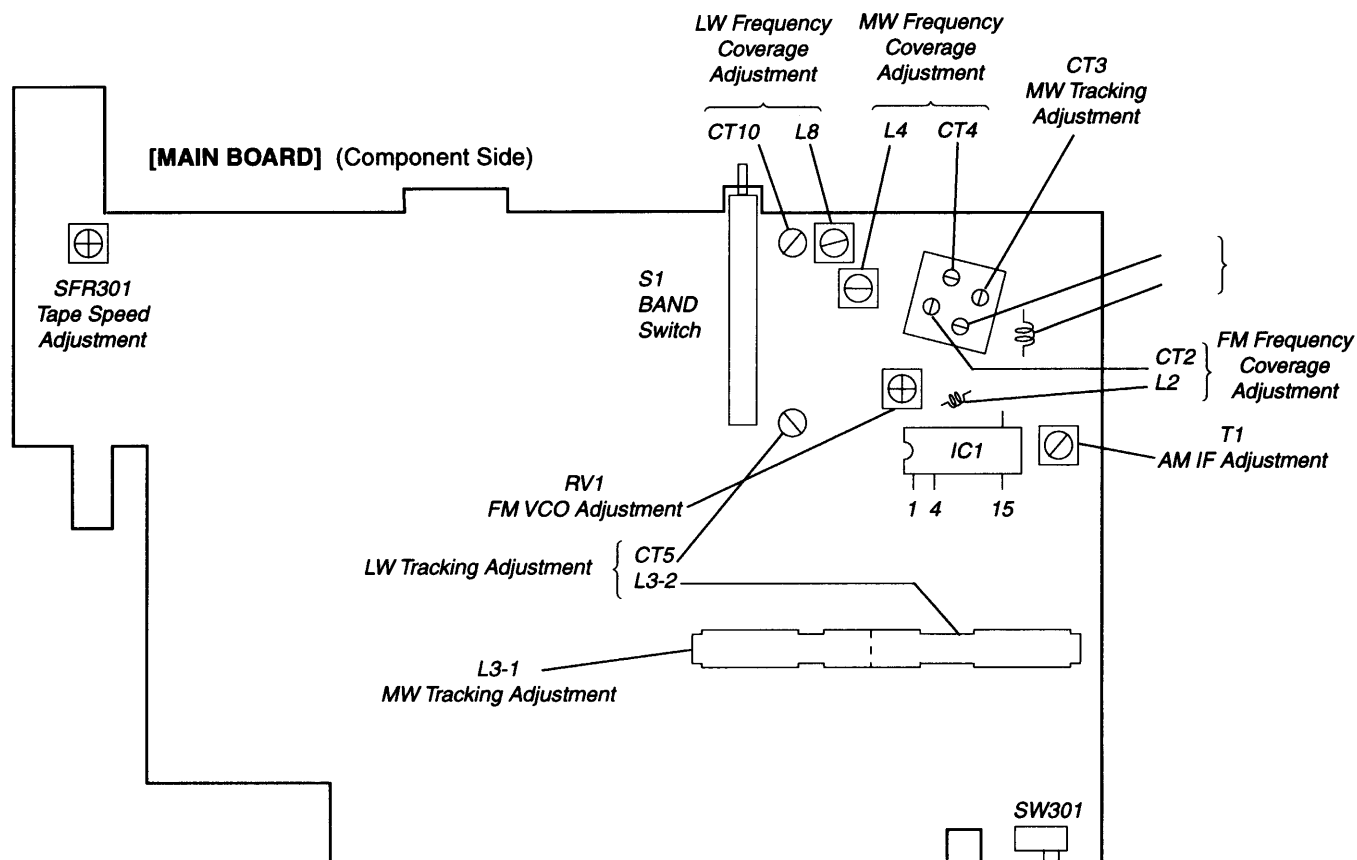

CD SECTION

Notes on Adjustment

1. Perform adjustment in test mode.
After adjustments, be sure to release test mode.
2. Perform adjustments in the order given.
3. Use the disc (YEDS-18, Part No. 3-702-101-01) only when so indicated.

How to Put the Set into Test Mode

1. Short-circuit the TP (TEST1) and TP (TEST2) on the FRONT board.
2. Insert the AC plug cord into the power outlet and turned ON the power switch.
3. The LCD display change in 5 ways, and stop when they all light up. (The unit sets in the test mode after the above steps.)
4. Remove the short-circuit connected in step 1.

How to Release the Test Mode

1. Turn OFF the power switch (S851).
2. The set thus becomes available for normal operation.

Before Beginning Adjustment

Put the set into test mode and perform the following checks. Repair if there are any problems.

• Sled Motor Check

Press the ►►, ◄◄ buttons and confirm that the optical pick-up moves smoothly from the innermost to outermost circumference and back smoothly and with no catching or abnormal noises.


►► : Optical pick-up moves to the outer circumference

◄◄ : Optical pick-up moves to the inner circumference

• Focus Search Check

1. Press the ► button. (Focus search operation is performed continuously.)
2. Look at the optical pick-up objective lens and confirm that it moves up and down smoothly, when no catching or abnormal noises.
3. Press the □ button.
Confirm that focus search operation stops. If it does not, press the □ button again longer.


[FRONT BOARD] (Conductor Side)

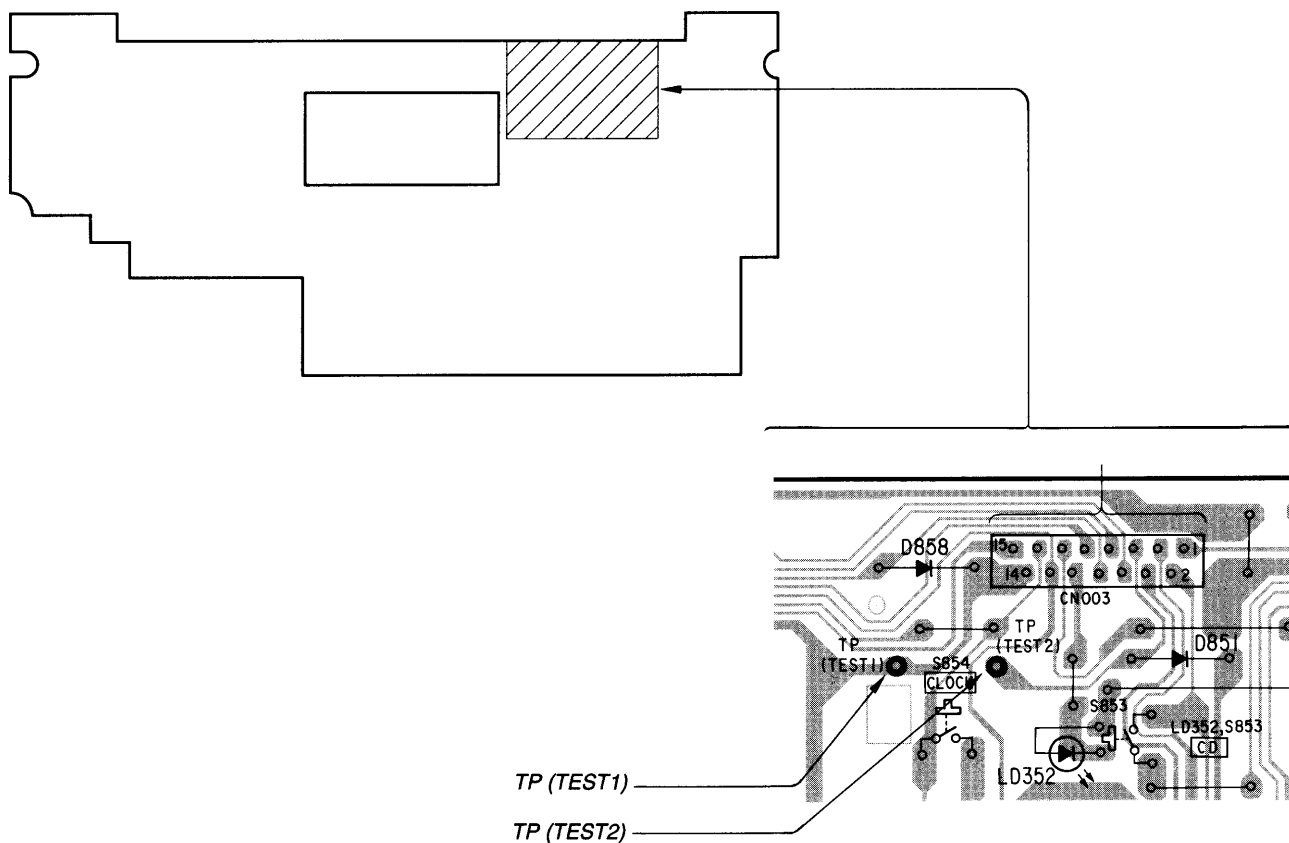


E-F Balance Adjustment

This adjustment is to be done when the optical pick-up is replaced.

Procedure:

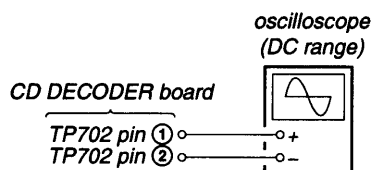

1. Connect the oscilloscope to TP702 pin ① and pin ② on the CD DECODER board.
2. Put the disc (YEDS-18).
3. Put the set into test mode. (See page 27.)
4. Press the $\triangleright\triangleright$ and $\triangleleft\triangleleft$ buttons to move the optical pick-up to the center.
5. Press the $\triangleright\parallel$ button.
[From focus searching, focus is turned ON while entering CLV drawing-in mode. Tracking and sled are turned OFF.]
6. Adjust VR702 so that the oscilloscope traverse waveform is symmetrical, as shown in the figure below.

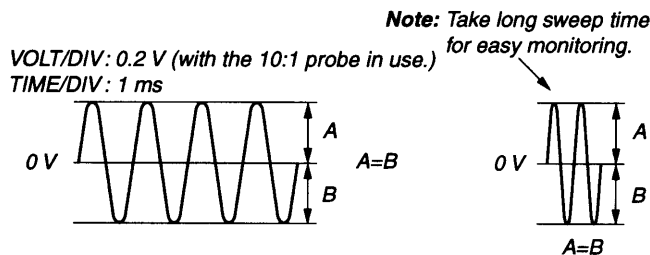

Adjustment value: 0.5 ± 0.2 Vp-p (A + B)


7. Release the test mode after adjustment is completed.

Adjustment Location: CD DECODER board (See page 29.)

Focus Bias Adjustment


This adjustment is to be done when the optical pick-up is replaced.

Procedure:

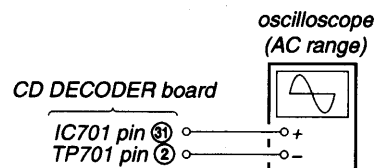

1. Connect the oscilloscope IC701 pin ③ and TP701 pin ② on the CD DECODER board.
2. Put the disc (YEDS-18).
3. Put the set into test mode. (See page 27.)
4. Press $\triangleright\triangleright$ and $\triangleleft\triangleleft$ buttons to move the optical pick-up to the center. (Move the optical pick-up to the music area on the disc to enable easy visibility of the eye pattern.)
5. Press the $\triangleright\parallel$ button.
[From focus searching, focus is turned ON while entering CLV drawing-in mode. Tracking and sled are turned OFF.]
6. Press the $\triangleright\parallel$ button.
[Both tracking and sled are turned ON.]
7. Adjust VR701 so that the oscilloscope waveform is as shown in the figure below. (eye pattern)
A good eye pattern means that the diamond shape (\diamond) in the center of the waveform can be clearly distinguished.

• RF signal reference waveform (eye pattern)

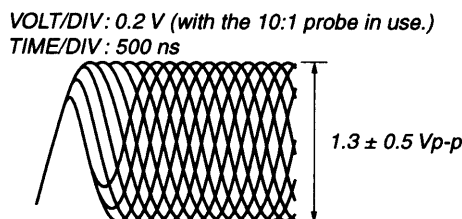


When observing the eye pattern, set the oscilloscope for AC range and raise vertical sensitivity.

8. Release the test mode after adjustment is completed.

Adjustment Location: CD DECODER board (See page 29.)


Adjustment Location:

[CD DECODER BOARD] (Component Side)

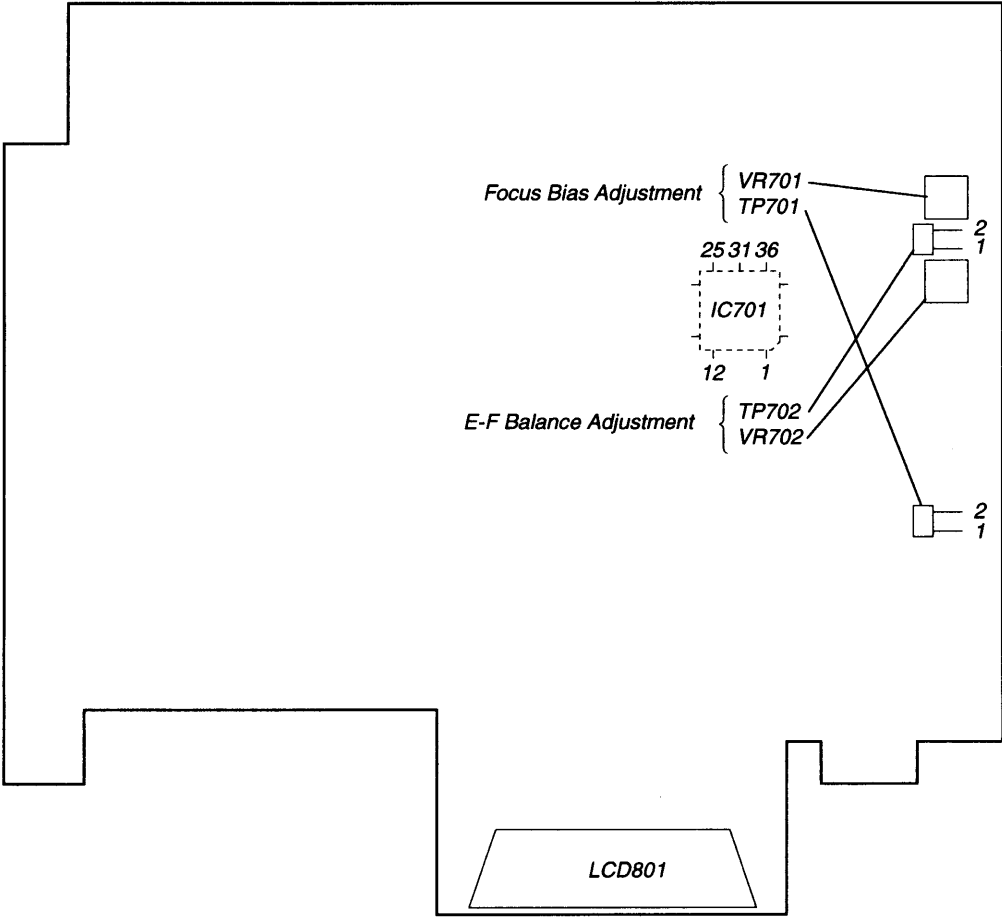

SECTION 6
DIAGRAMS

• Circuit Boards Location

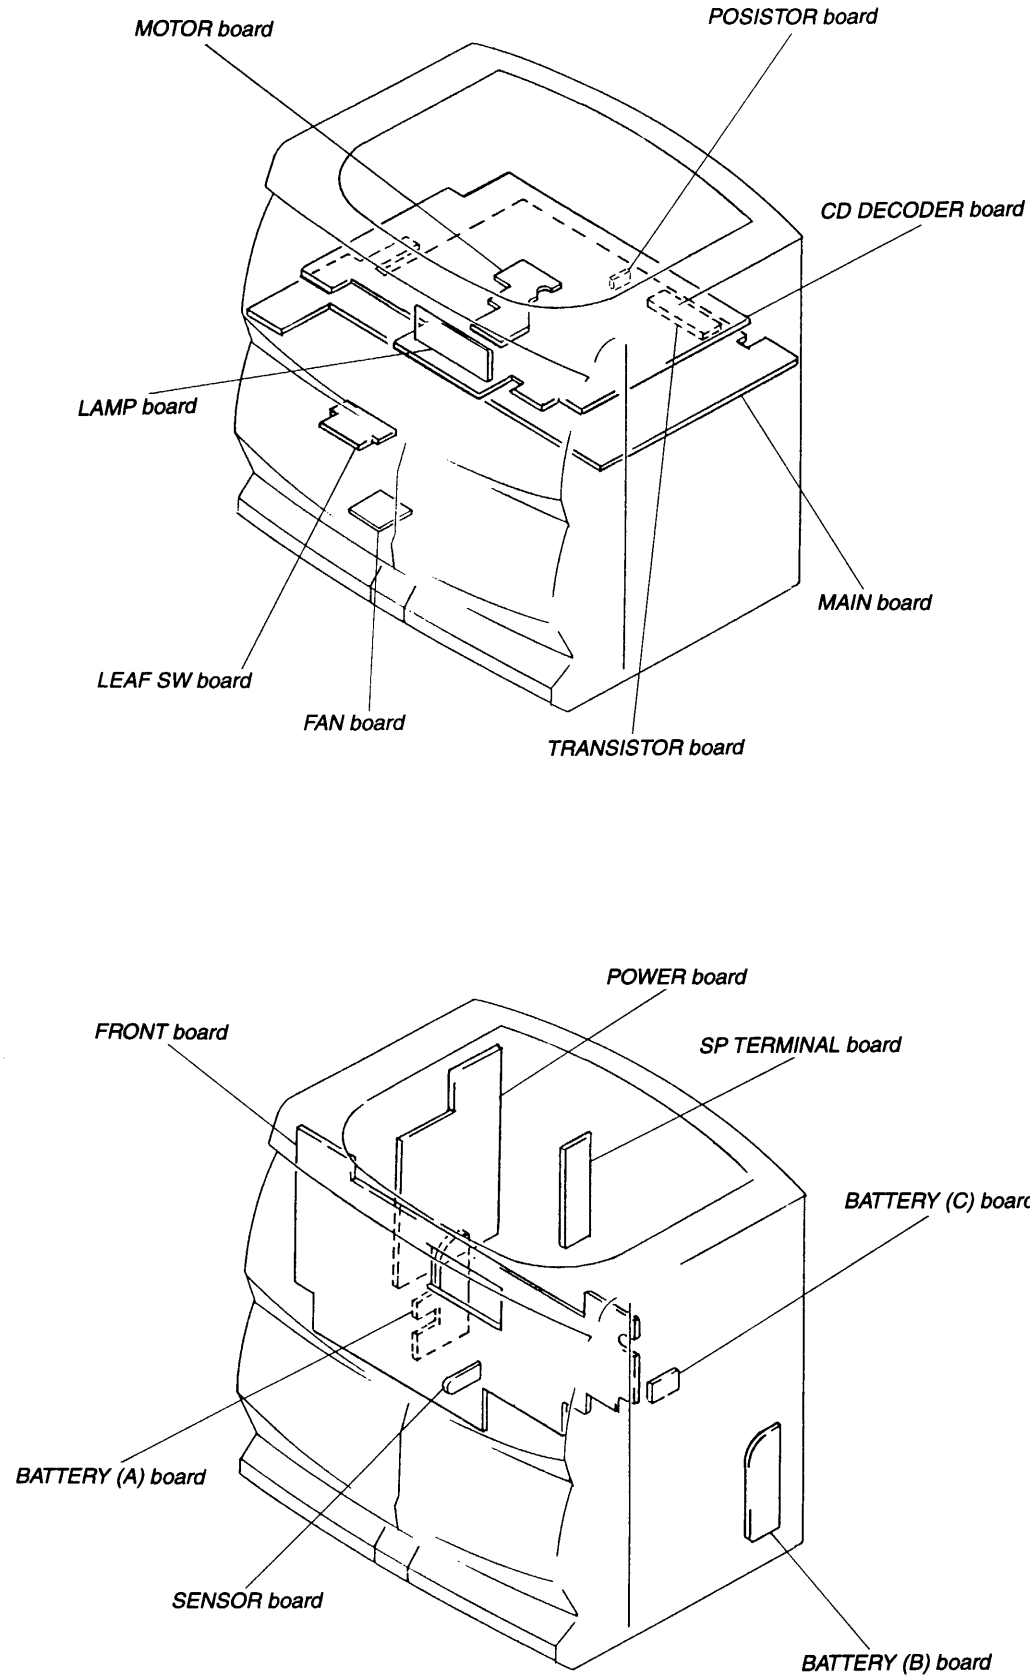

6-1. PIN FUNCTION DESCRIPTION

• CD DECODER BOARD IC801 LC5876-1J64
(SYSTEM CONTROLLER, LED/LIQUID CRYSTAL DISPLAY DRIVER, KEY CONTROL)

Pin No.	Pin Name	I/O	Function
1	COM 2	O	Common drive signal output to the liquid crystal display (LCD801)
2	COM 1	O	Common drive signal output to the liquid crystal display (LCD801)
3	CUP1	—	Connected to coupling capacitor for the liquid crystal display (LCD801) of power supply
4	CUP2	—	Connected to coupling capacitor for the liquid crystal display (LCD801) of power supply
5	RESET	I	Reset signal input from the reset signal generator (IC802) "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
6	REM IN	I	Remote control signal input from the remote control receiver (SEN851) "L" active
7	SQSO	I	Sub-code Q data signal input from the CXD2508Q (IC702)
8	DATA	O	Serial data output to the CXD2508Q (IC702)
9	SQCK, CLOK	O	Sub-code Q data reading clock signal and serial data transfer clock signal output to the CXD2508Q (IC702)
10	COUNT	I	Track number count signal input terminal Not used (fixed at "H")
11	SCOR	I	Sub-code sync (S0+S1) detection signal input from the CXD2508Q (IC702)
12	SENS	I	Internal status (SENSE) signal input from the CXD2508Q (IC702)
13	GFS	I	Guard frame sync signal input from the CXD2508Q (IC702) "L": NG, "H": OK
14	FOK	I	Focus OK signal input from the CXA1782BQ (IC701) "L": NG, "H": OK
15	TAPE DIRECTION	I	Detection signal input of the tape direction "L": REV, "H": FWD
16	STEREO IN	I	Stereo detection signal input from the CXA1238S (IC1) "L": stereo
17	SYNC REC IN	I	Detection signal input from the REC switch (S301) "H": REC
18	WP IN (REG CHECK)	I	Wake-up signal input terminal "H": AC input, "L": using for the dry battery
19	XT OUT	O	Sub system clock output terminal (32.768 kHz) (for clock)
20	XT IN	I	Sub system clock input terminal (32.768 kHz) (for clock)
21	VDD2	—	Power supply terminal (Connected to coupling capacitor)
22	VDD1	—	Power supply terminal (Connected to coupling capacitor)
23	VSS	—	Ground terminal
24	VDD	—	Power supply terminal (+5V)
25	CF IN	I	Main system clock input terminal (4 MHz)
26	CF OUT	O	Main system clock output terminal (4 MHz)
27	KEY IN 1	I	Key return signal input terminal ("L" active) *1
28	KEY IN 2	I	
29	KEY IN 3	I	
30	KEY IN 4	I	
31	KEY IN 5	I	
32	KEY IN 6	I	
33	KEY IN 7	I	
34	KEY IN 8	I	
35	KEY IN 9	I	
36	M2	I	Not used (fixed at "H")
37	M3	I	Not used (fixed at "H")
38	CD SW	I	Detection signal input from the CD lid open/close detect switch (S702) The CD lid is closed when "L"
39	CD	O	LED drive signal output to the CD indicator (LD352) "L": CD, "H": others function
40	TAPE	O	LED drive signal output to the TAPE indicator (LD351) "L": others function, "H": TAPE


Pin No.	Pin Name	I/O	Function
41	RADIO	O	Power on/off control signal output for the tuner circuit power supply "L": others function, "H": RADIO
42	BACK LIGHT	O	Back light on/off control signal output terminal "H": back light on
43	VSS	—	Ground terminal
44	POWER SW OUT	O	Power on/off control signal output for the main power supply "H": power on
45	SYSTEM MUTE OUT	O	Audio mute on/off control signal output terminal "H": mute on
46	MEGA BASS 1	O	Mega bass 1 control signal output terminal "H": on Not used (open)
47	MEGA BASS 2	O	Mega bass 2 control signal output terminal "H": on Not used (open)
48	SURROUND	O	Surround on/off control signal output terminal "H": on
49	CLK OUT	O	Serial data transfer clock signal output to the LC75392 (IC304)
50	DATA OUT	O	Serial data output to the LC75392 (IC304)
51	CE OUT	O	Chip enable signal output to the LC75392 (IC304) "L": address, "H": data
52	XLAT	O	Serial latch pulse signal output to the CXD2508Q (IC702) "H" active
53	XRST	O	Reset signal output to the CXA1782BQ (IC701) and CXD2508Q (IC702) "L": reset
54	MUTE	O	Mute on/off control signal output to the CXD2508Q (IC702) "H": mute on
55	—	O	Not used (open)
56	KEY SCAN OUT 1	O	Key scan signal output terminal ("L" active) *1
57	KEY SCAN OUT 2	O	
58	KEY SCAN OUT 3	O	
59	—	O	Not used (open)
60 to 78	SEG 19 to SEG 1	O	Segment drive signal output to the liquid crystal display (LCD801)
79	COM 4	O	Common drive signal output to the liquid crystal display (LCD801)
80	COM 3	O	Common drive signal output to the liquid crystal display (LCD801)

*1 KEY MATRIX TABLE


	KEY SCAN OUT 1 (pin ㉞)	KEY SCAN OUT 2 (pin ㉟)	KEY SCAN OUT 3 (pin ㊱)
KEY IN 1 (pin ㉟)	POWER	SLEEP	—
KEY IN 2 (pin ㊱)	CD	CLOCK	—
KEY IN 3 (pin ㊲)	TAPE	TIMER	—
KEY IN 4 (pin ㊳)	RADIO	STANDBY	—
KEY IN 5 (pin ㊴)	MEGA BASS	SURROUND	Mode-1
KEY IN 6 (pin ㊵)	VOLUME +	VOLUME -	Mode-2
KEY IN 7 (pin ㊶)	▷	PLAY MODE	Mode-3
KEY IN 8 (pin ㊷)	□	DISPLAY/ENTER	—
KEY IN 9 (pin ㊸)	▷▷ TIME SET +	◁◁ TIME SET -	Mode-4

Mode No.	Function	SHORT	OPEN	In this set
Mode-1	TEST MODE	TEST MODE	NORMAL MODE	Open
Mode-2	SURROUND	Provided	Not provided	Short
Mode-3	AUTO REVERSE	Provided	Not provided	Short
Mode-4	TIME DISPLAY SYSTEM	12H	24H	12H

IC701 CXA1782BQ

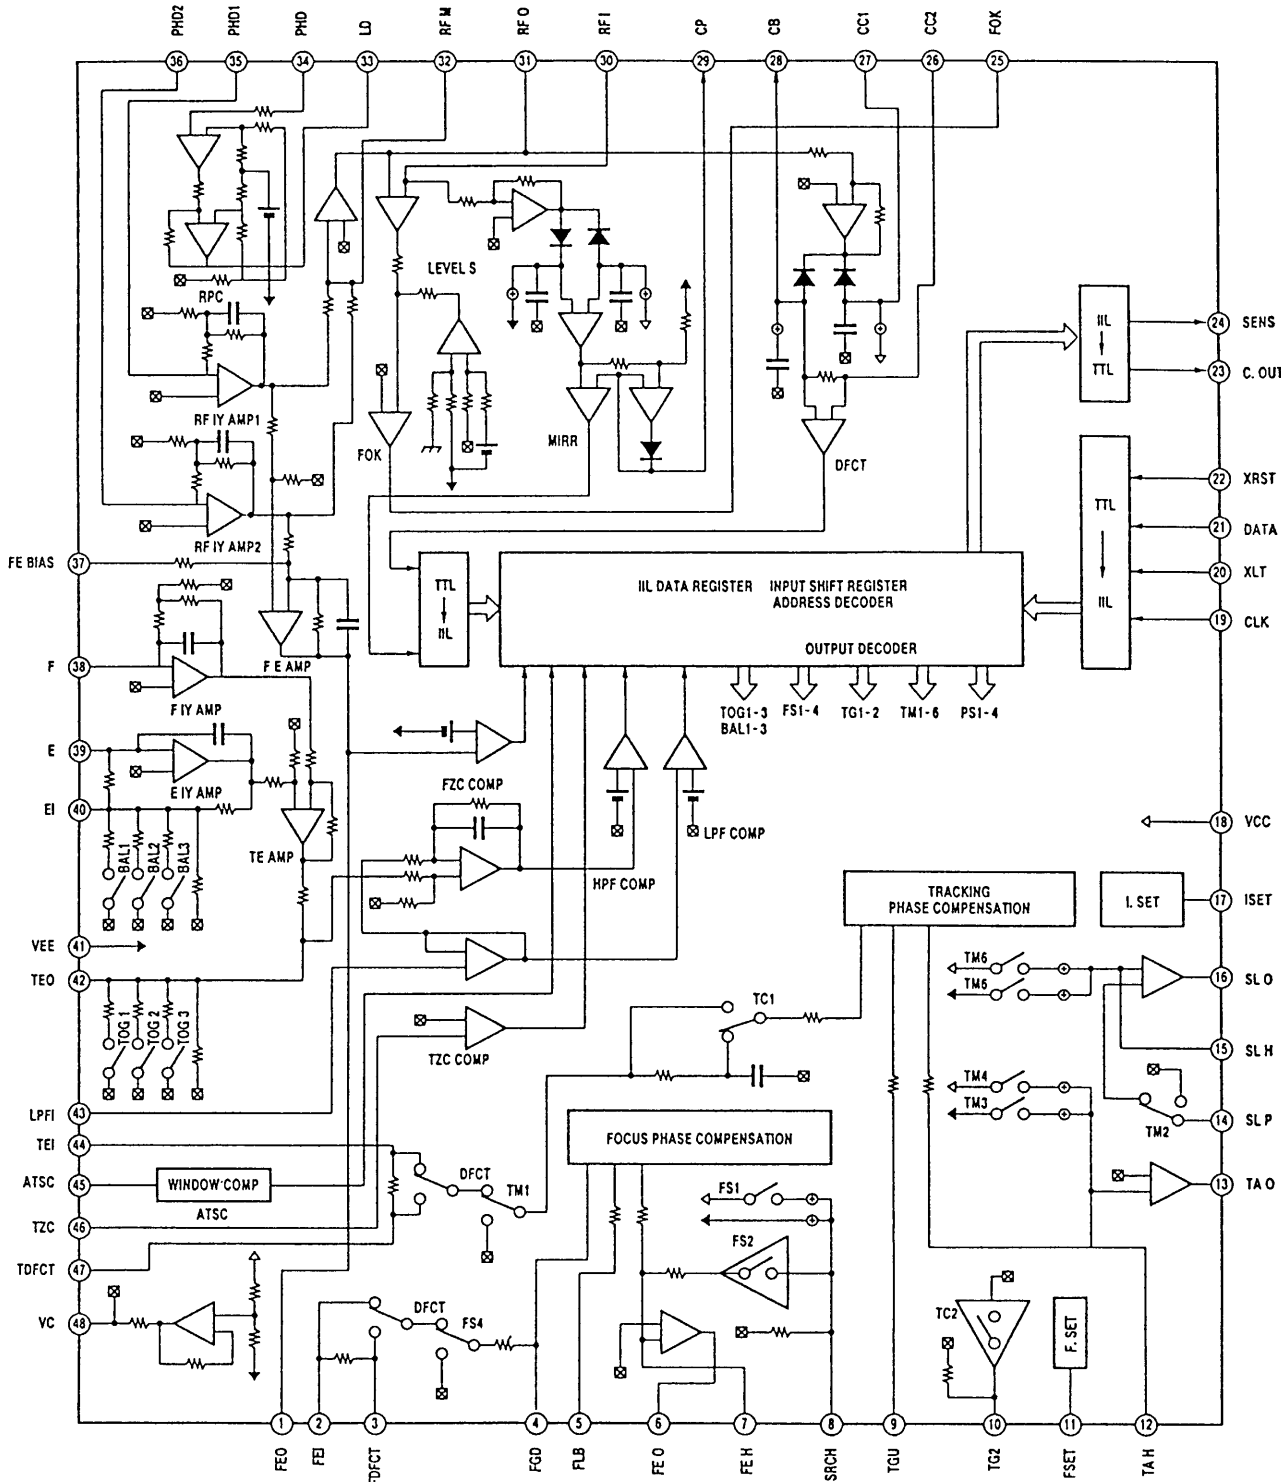

IC702 CXD2508Q

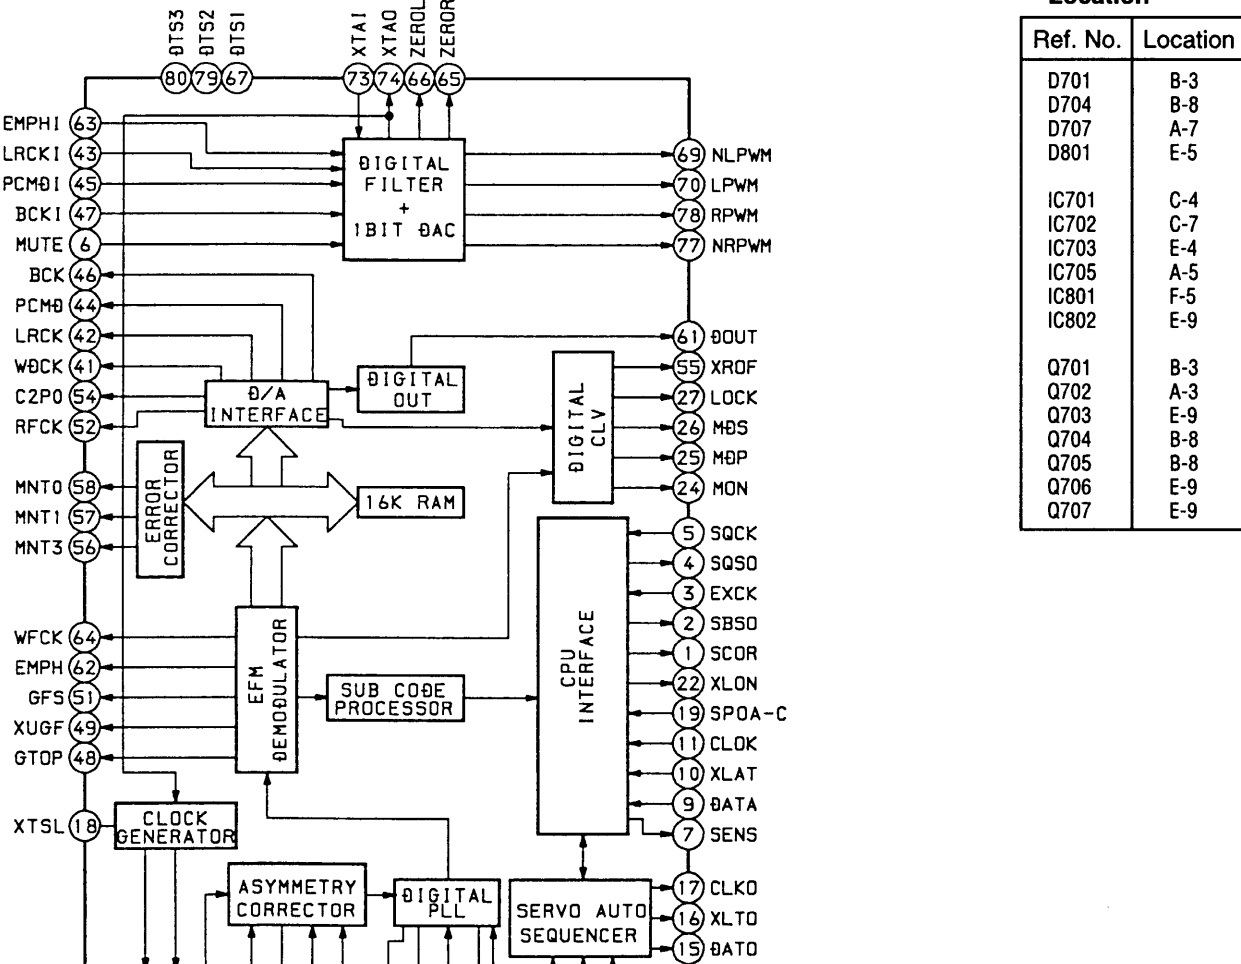


• Semiconductor Location

Ref. No.	Location
D701	B-3
D704	B-8
D707	A-7
D801	E-5
IC701	C-4
IC702	C-7
IC703	E-4
IC705	A-5
IC801	F-5
IC802	E-9
Q701	B-3
Q702	A-3
Q703	E-9
Q704	B-8
Q705	E-9
Q706	E-9
Q707	E-9


Note on Printed Wiring Board:

- : parts extracted from the component side.
- : parts mounted on the conductor side.
- △ : internal component.
- ▨ : Pattern from the side which enables seeing.

IC703 BA5941FP

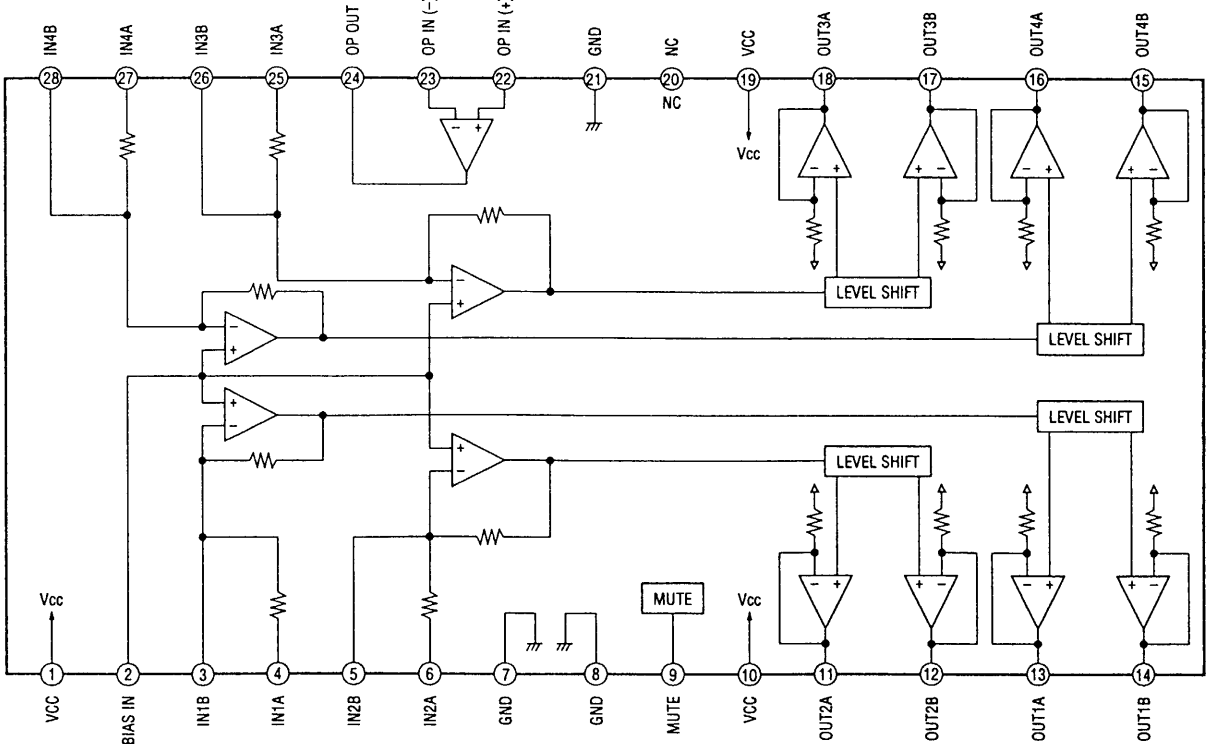

6-2. PRINTED WIRING BOARDS – CD Section – • See page 30 for Circuit Boards Location.

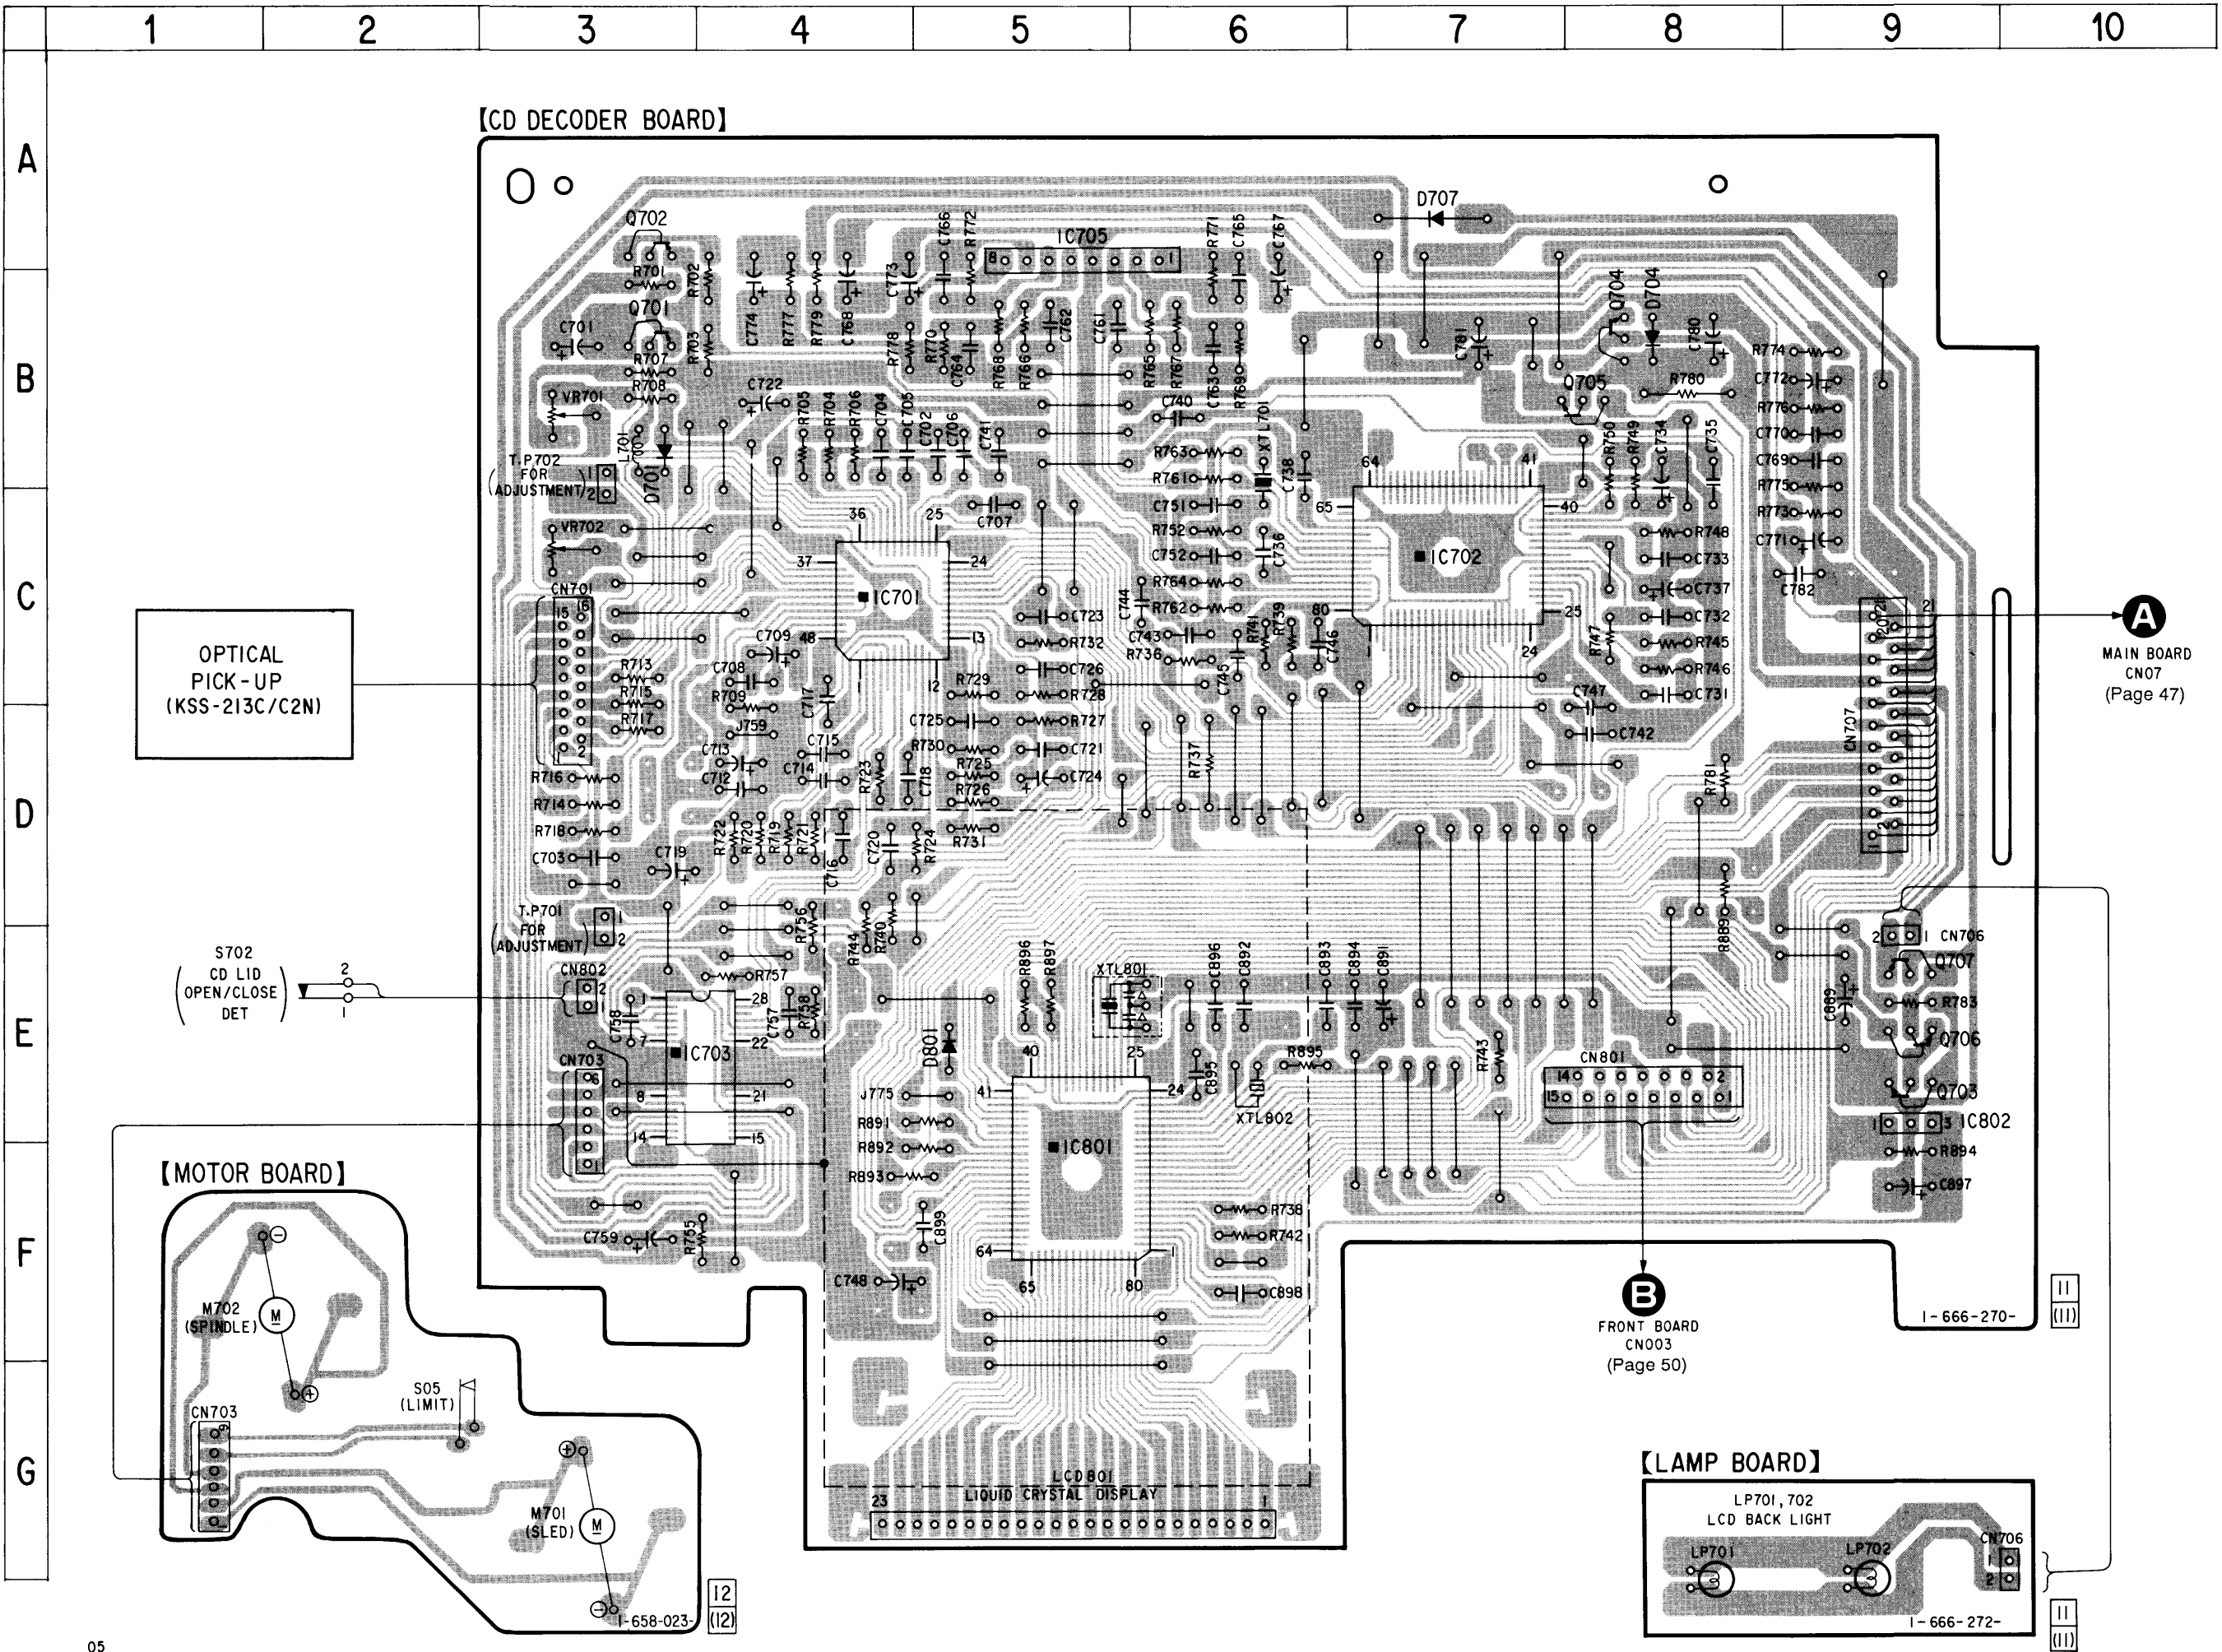

6-3. SCHEMATIC DIAGRAM - CD Section - • See page 31 for IC Pin Function Description, see page 33 for IC Block Diagrams.


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μF : 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.


Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


- B+: B+ Line.
- \square : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark: CD play
- * : impossible to measure
- Voltages are taken with a VOM (input impedance 10 M Ω).
- Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- \Rightarrow : CD

• Waveforms

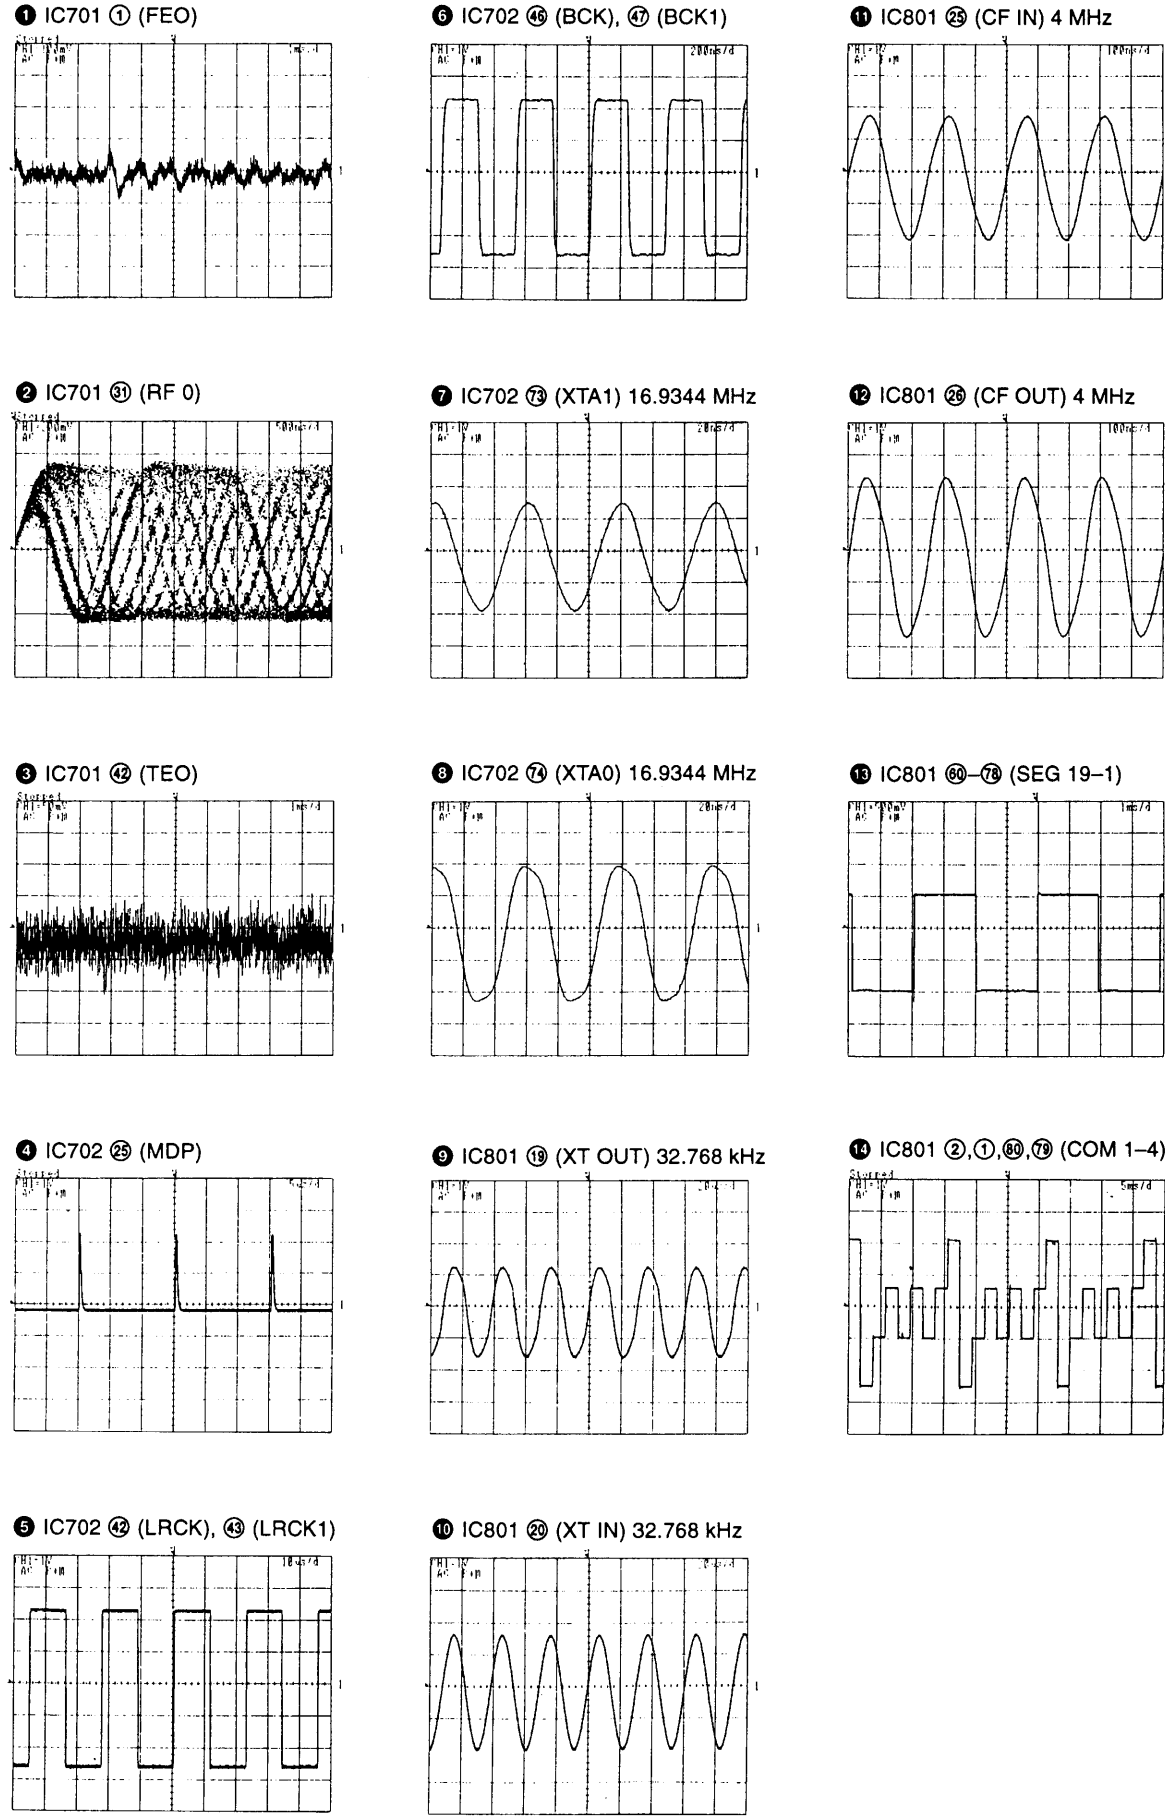


Note: Waveforms are CD PLAY mode.

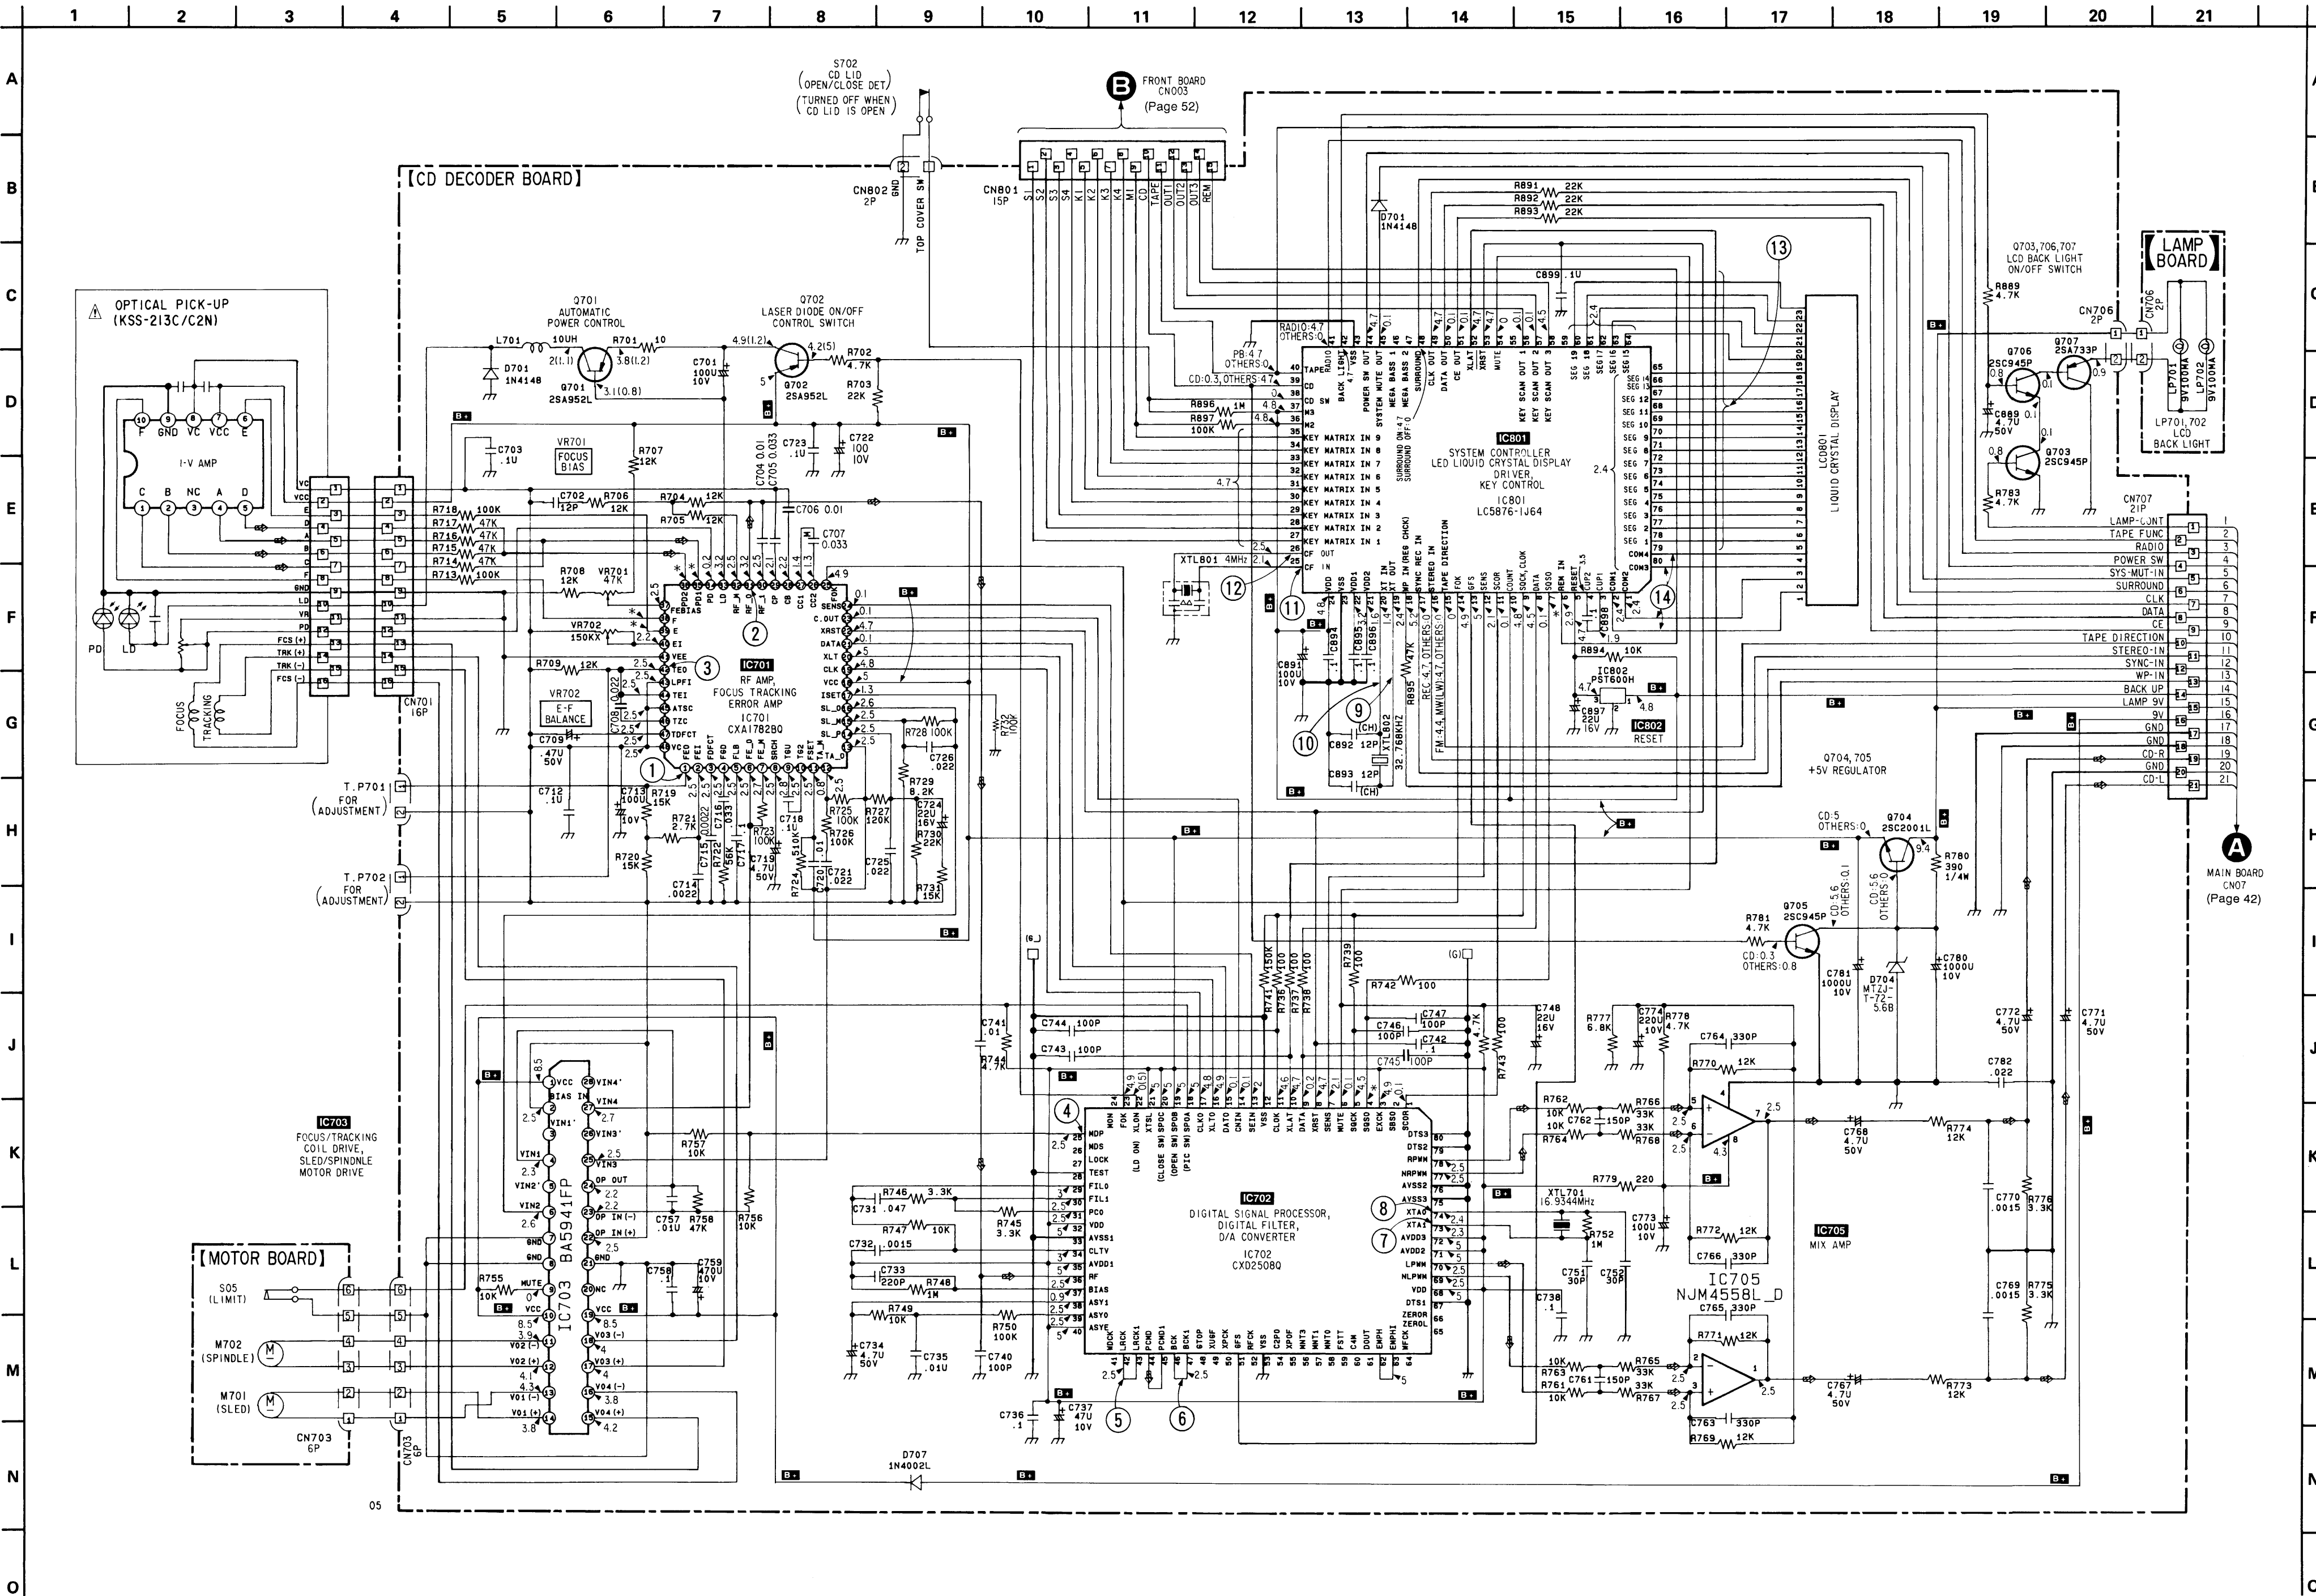

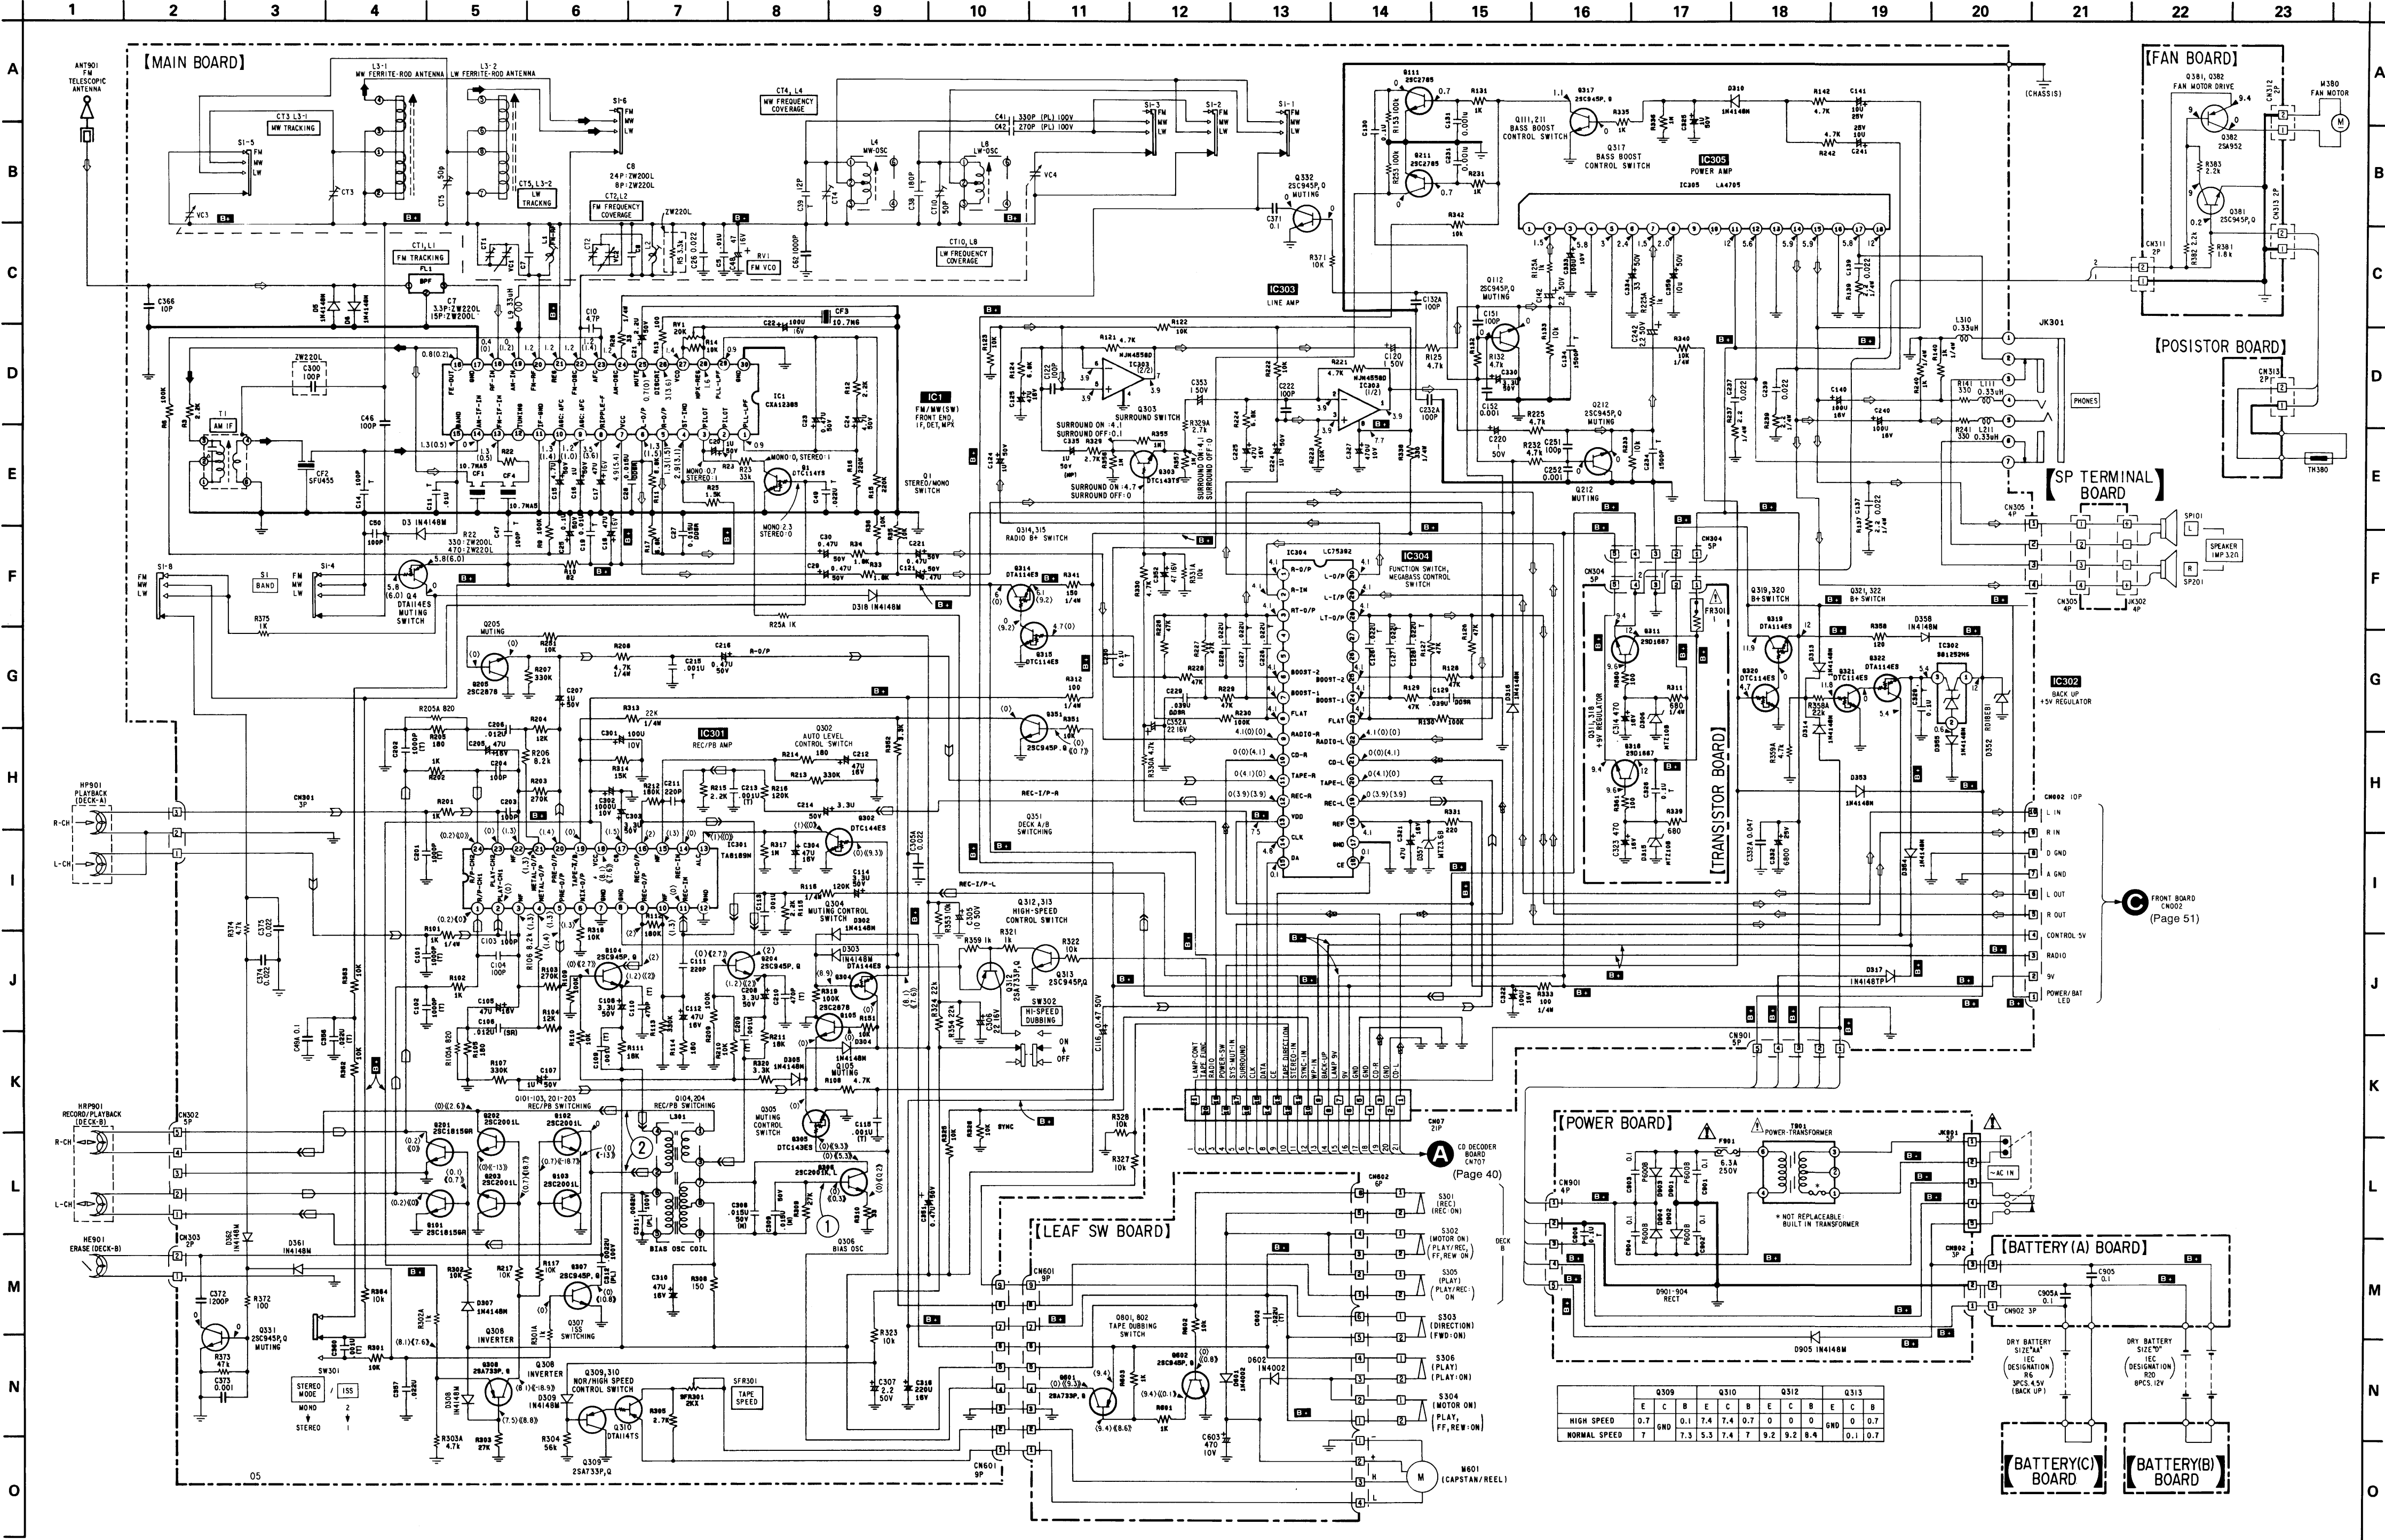


• Waveforms

① Q306 Base (REC mode)

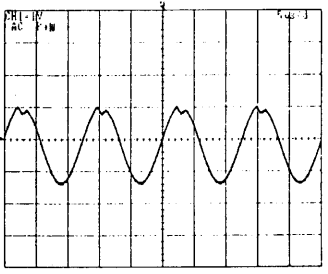

② L301 ①, ② (REC mode)

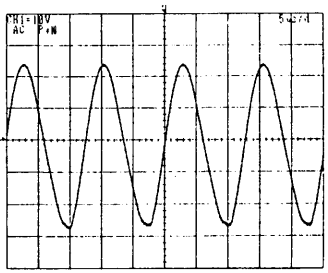

Note on Schematic Diagram:


- All capacitors are in μF unless otherwise noted. pF ; μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : fusible resistor.
- \square : panel designation.


Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- B- : B+ Line.
- \square : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- () : MW (LW)
- > : PB
- < : REC
- >> : CD
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- \square : FM
- \square : MW (LW)
- \square : PB (DECK A)
- \square : PB (DECK B)
- \square : REC (DECK B)
- \square : CD

• IC Block Diagrams -MAIN Section -

IC1 CXA1238S

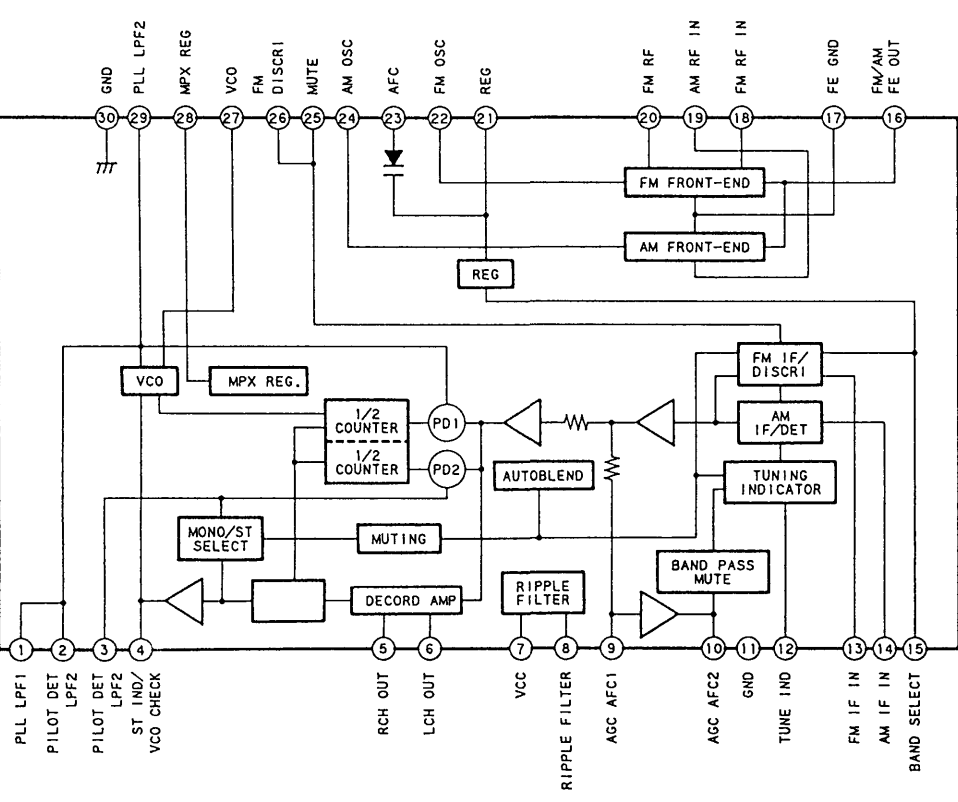

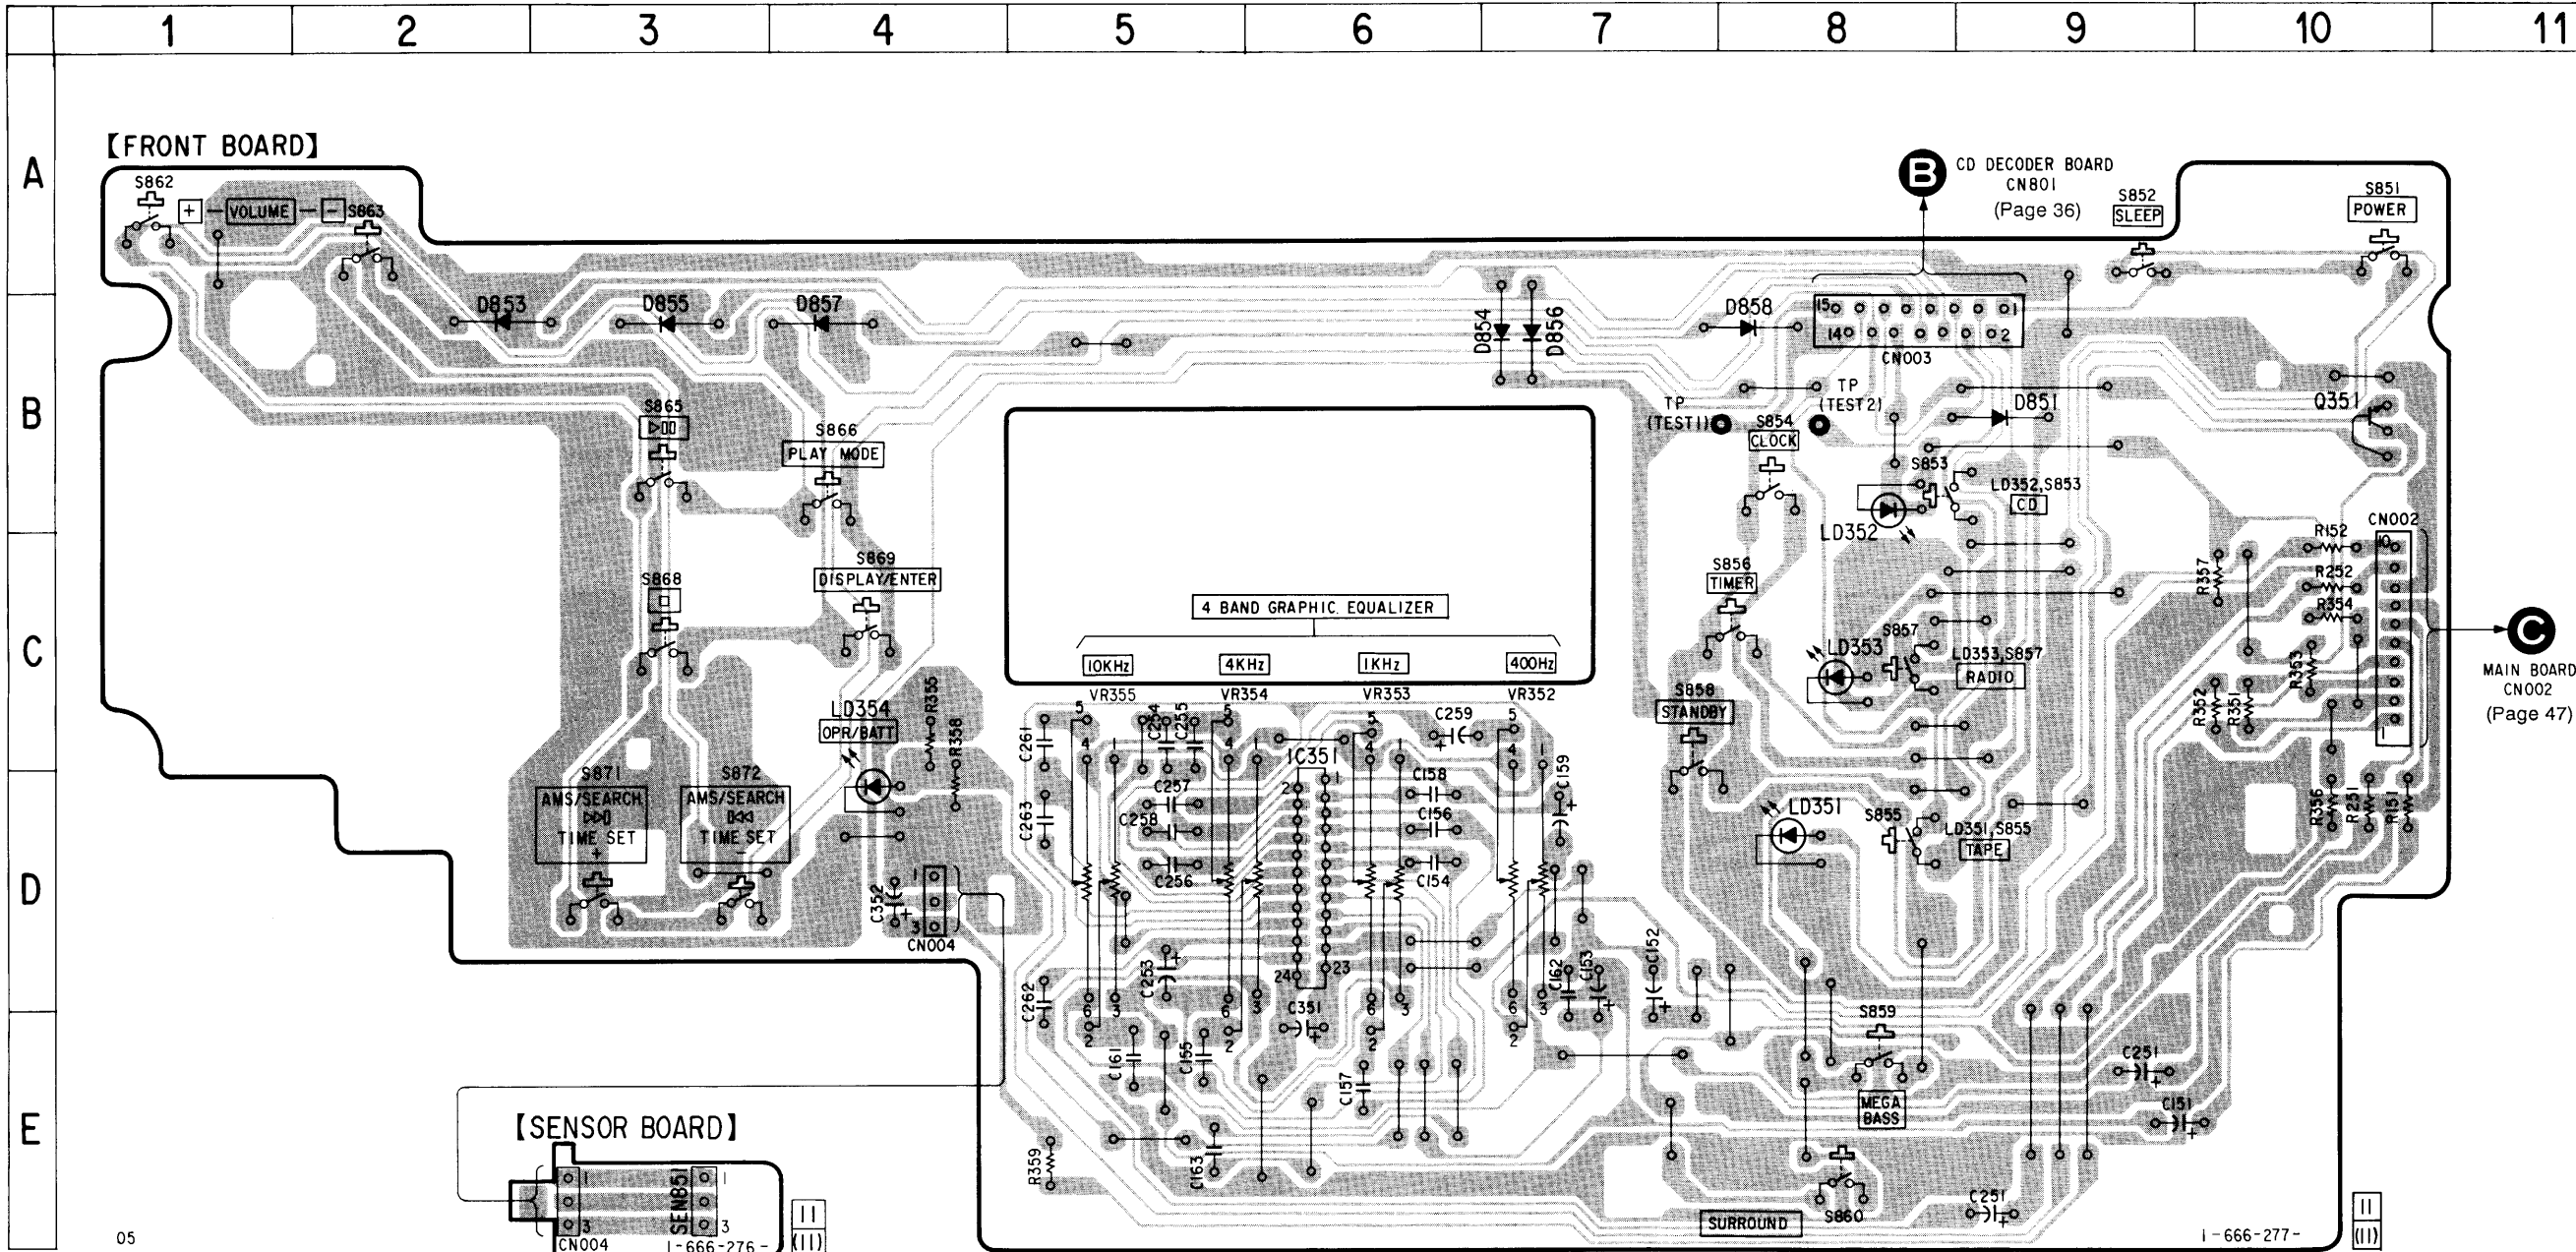

• Semiconductor Location


Ref. No.	Location
D851	B-9
D853	B-2
D854	B-7
D855	B-3
D857	B-4
D858	B-8
IC351	D-6
LD351	D-8
LD352	B-8
LD353	C-8
LD354	D-4
Q351	B-10
SEN851	E-3

Note on Printed Wiring Board:

- : parts extracted from the component side.
- : Pattern from the side which enables seeing.

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μpF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.
- **B+** : B+ Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions. no mark : FM
- Voltages are taken with a VOM (input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- \Rightarrow : FM

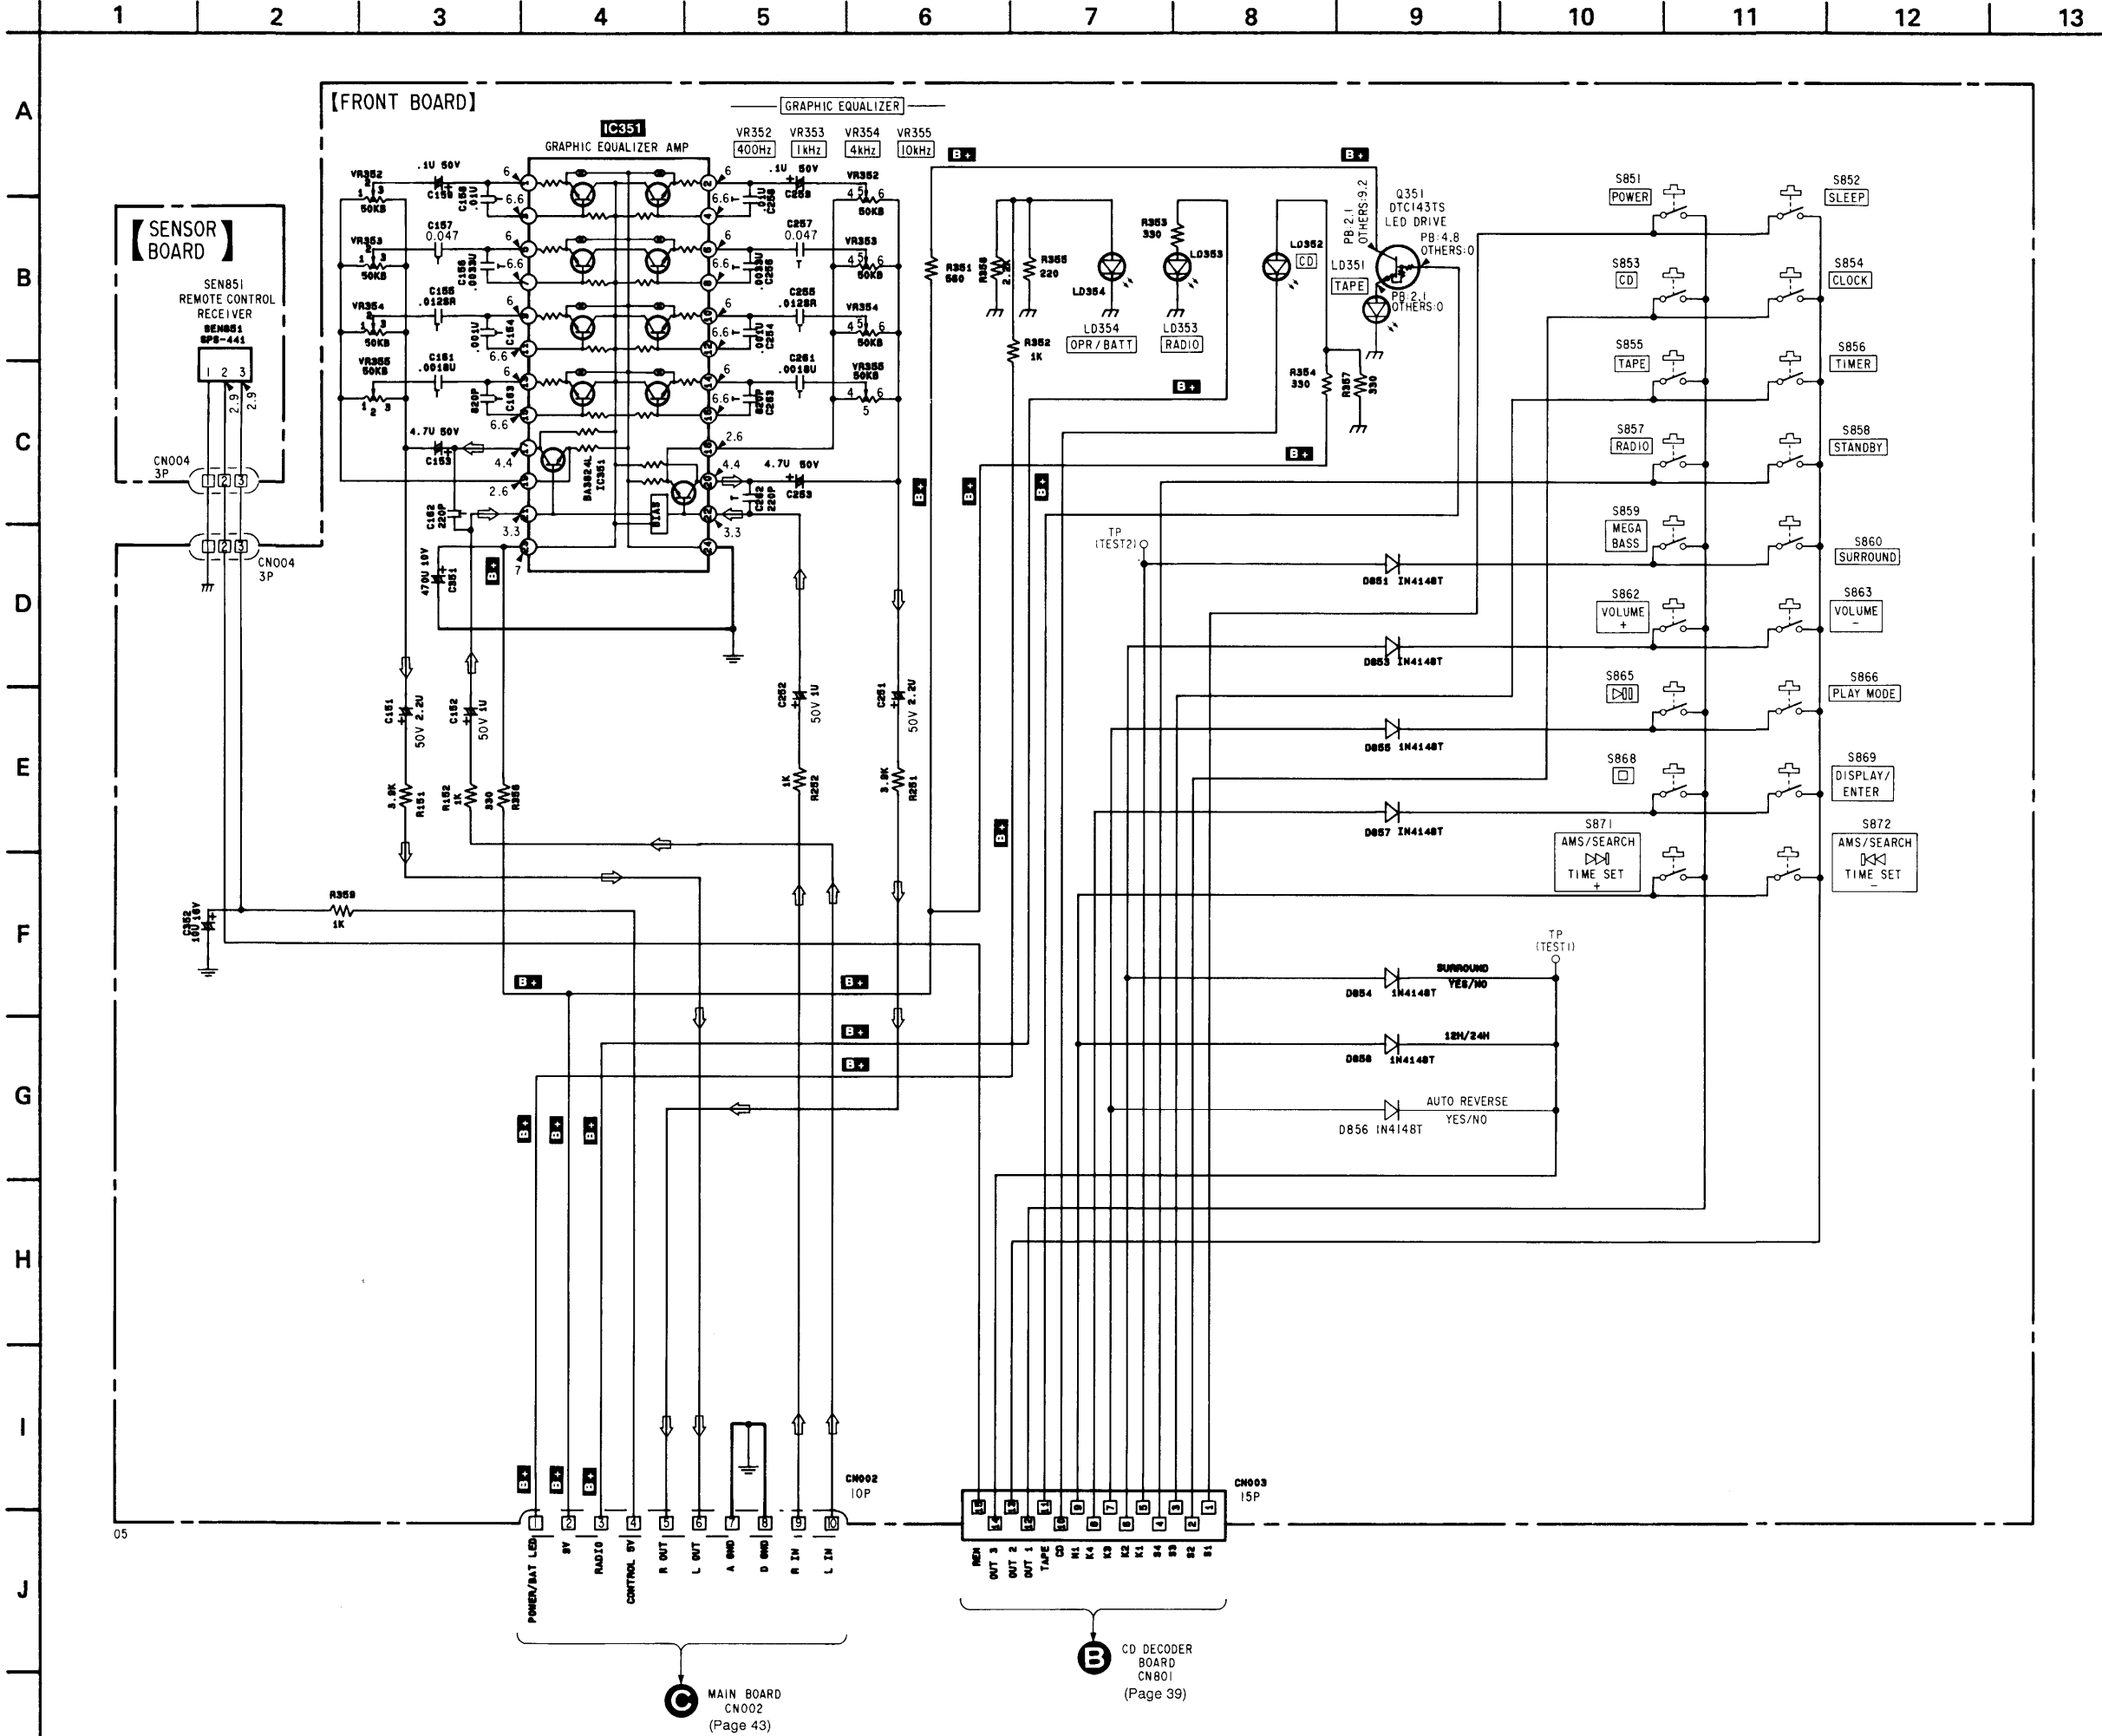

SECTION 7 EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.

• Color Indication of Appearance Parts

Example:

KNOB, BALANCE (WHITE) . . . (RED)

↑
↑
 Parts Color Cabinet's Color


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


(1) BACK CABINET SECTION

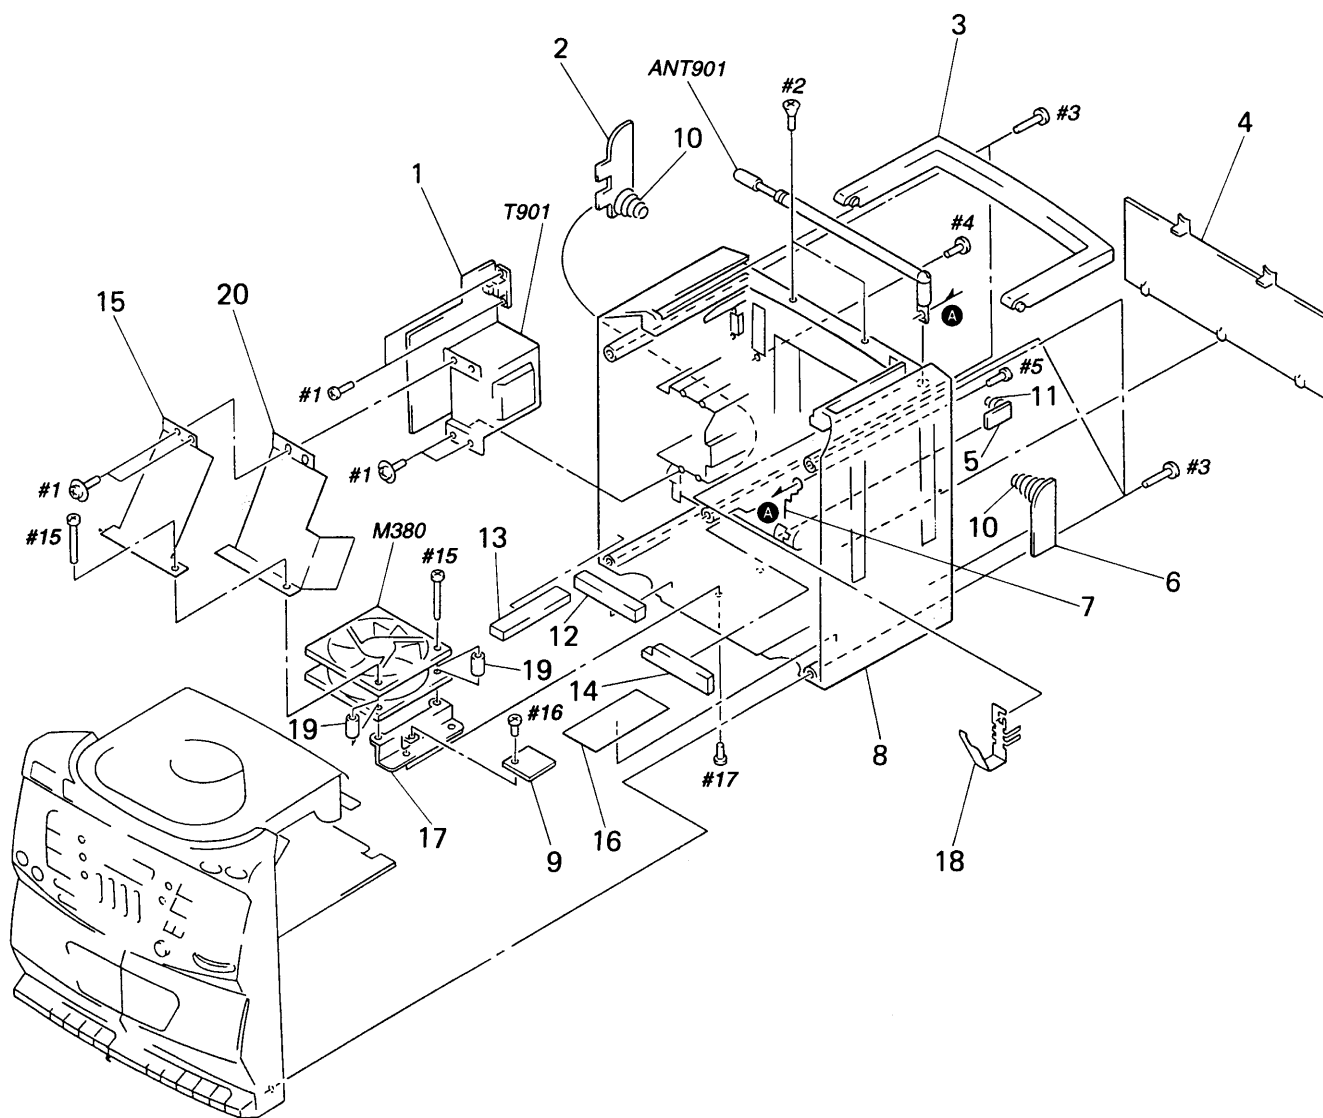

Ref. No.	Part No.	Description	Remark
* 1	1-666-278-11	POWER BOARD	
* 2	1-666-279-11	BATTERY (A) BOARD	
3	3-013-673-01	HANDLE	
4	3-013-674-01	LID, BATTERY CASE	
* 5	1-666-281-11	BATTERY (C) BOARD	
* 6	1-666-280-11	BATTERY (B) BOARD	
7	3-014-421-01	SPRING, ANT CONTACT	
8	3-012-995-71	CABINET, BACK	
* 9	1-669-055-11	FAN BOARD	
10	3-014-422-01	SPRING (3A), BATTERY	
11	3-014-423-01	SPRING (1A), BATTERY	
12	3-020-730-01	CUSHION (A)	


Ref. No.	Part No.	Description	Remark
13	3-020-731-01	CUSHION (B)	
14	3-020-732-01	CUSHION (C)	
* 15	3-020-733-01	SHIELD PLATE	
* 16	3-020-734-01	SHIELD	
* 17	3-020-735-01	BRACKET	
18	3-020-736-01	SPRING, EJECT	
* 19	3-020-737-01	COLLAR	
* 20	3-020-738-01	DUCT	
ANT901	1-501-927-11	ANTENNA, TELESCOPIC (FM)	
M380	1-763-080-11	MOTOR (FAN)	
Δ T901	1-431-543-11	TRANSFORMER, POWER	

(2) FRONT PANEL SECTION

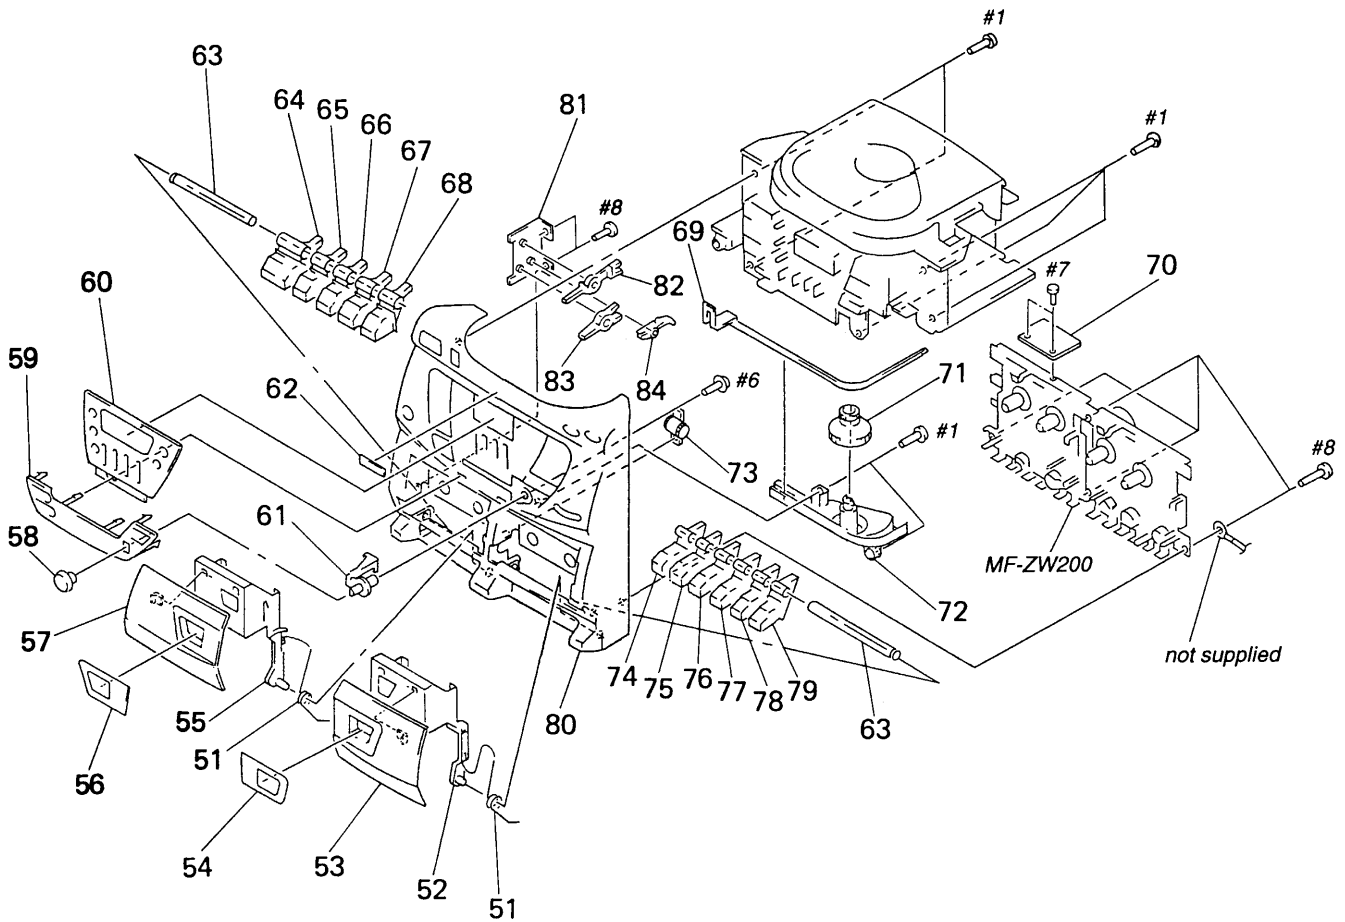


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-014-406-01	SPRING, CASSETTE DOOR		67	3-013-691-01	BUTTON (L), CASSETTE (ST/EJ) (■ ▲)	
52	3-014-404-01	HOLDER (R), CASSETTE		68	3-013-690-01	BUTTON (L), CASSETTE (PAUSE) ()	
53	3-017-706-01	DOOR (R), CASSETTE (ZW200L)		69	3-013-670-01	POINTER, DIAL	
53	3-022-809-01	DOOR (R), CASSETTE (ZW220L)		* 70	1-667-921-11	LEAF SW BOARD	
54	3-013-772-01	WINDOW (R), CASSETTE DOOR		71	3-013-676-01	KNOB, TUNING	
55	3-013-001-01	HOLDER (L), CASSETTE		72	3-013-702-01	HOLDER, TUNING KNOB	
56	3-016-201-01	WINDOW (L), CASSETTE DOOR		73	3-014-407-01	DAMPER (TWIN), GEAR	
57	3-016-200-01	DOOR (L), CASSETTE		74	3-013-689-01	BUTTON, CASSETTE (REC) (●)	
58	3-013-678-01	KNOB, BAND		75	3-013-688-01	BUTTON (R), CASSETTE (PLAY) (▶)	
59	3-015-339-01	WINDOW, DIAL (ZW200L)		76	3-013-687-01	BUTTON (R), CASSETTE (REW) (◀)	
59	3-018-100-01	WINDOW, DIAL (ZW220L)		77	3-013-686-01	BUTTON (R), CASSETTE (FF) (▶▶)	
60	3-015-044-01	WINDOW, DISPLAY		78	3-013-685-01	BUTTON (R), CASSETTE (ST/EJ) (■ ▲)	
* 61	3-013-700-01	SHAFT, BAND KNOB		79	3-013-684-01	BUTTON (R), CASSETTE (PAUSE) ()	
62	3-013-683-01	EMBLEM		80	X-3374-581-1	PANEL ASSY, FRONT	
* 63	3-014-405-01	SHAFT, KEY BUTTON		81	3-016-214-01	BASE, PROGRAM LEVER	
64	3-013-694-01	BUTTON (L), CASSETTE (PLAY) (▶)		82	3-016-209-01	KNOB, MOLD LEVER	
65	3-013-693-01	BUTTON (L), CASSETTE (REW) (◀)		83	3-016-210-01	KNOB, PROGRAM LEVER	
66	3-013-692-01	BUTTON (L), CASSETTE (FF) (▶▶)		84	3-016-213-01	LEVER, PROGRAM	

(3) CD BLOCK SECTION
(●A: SP TERMINAL board)

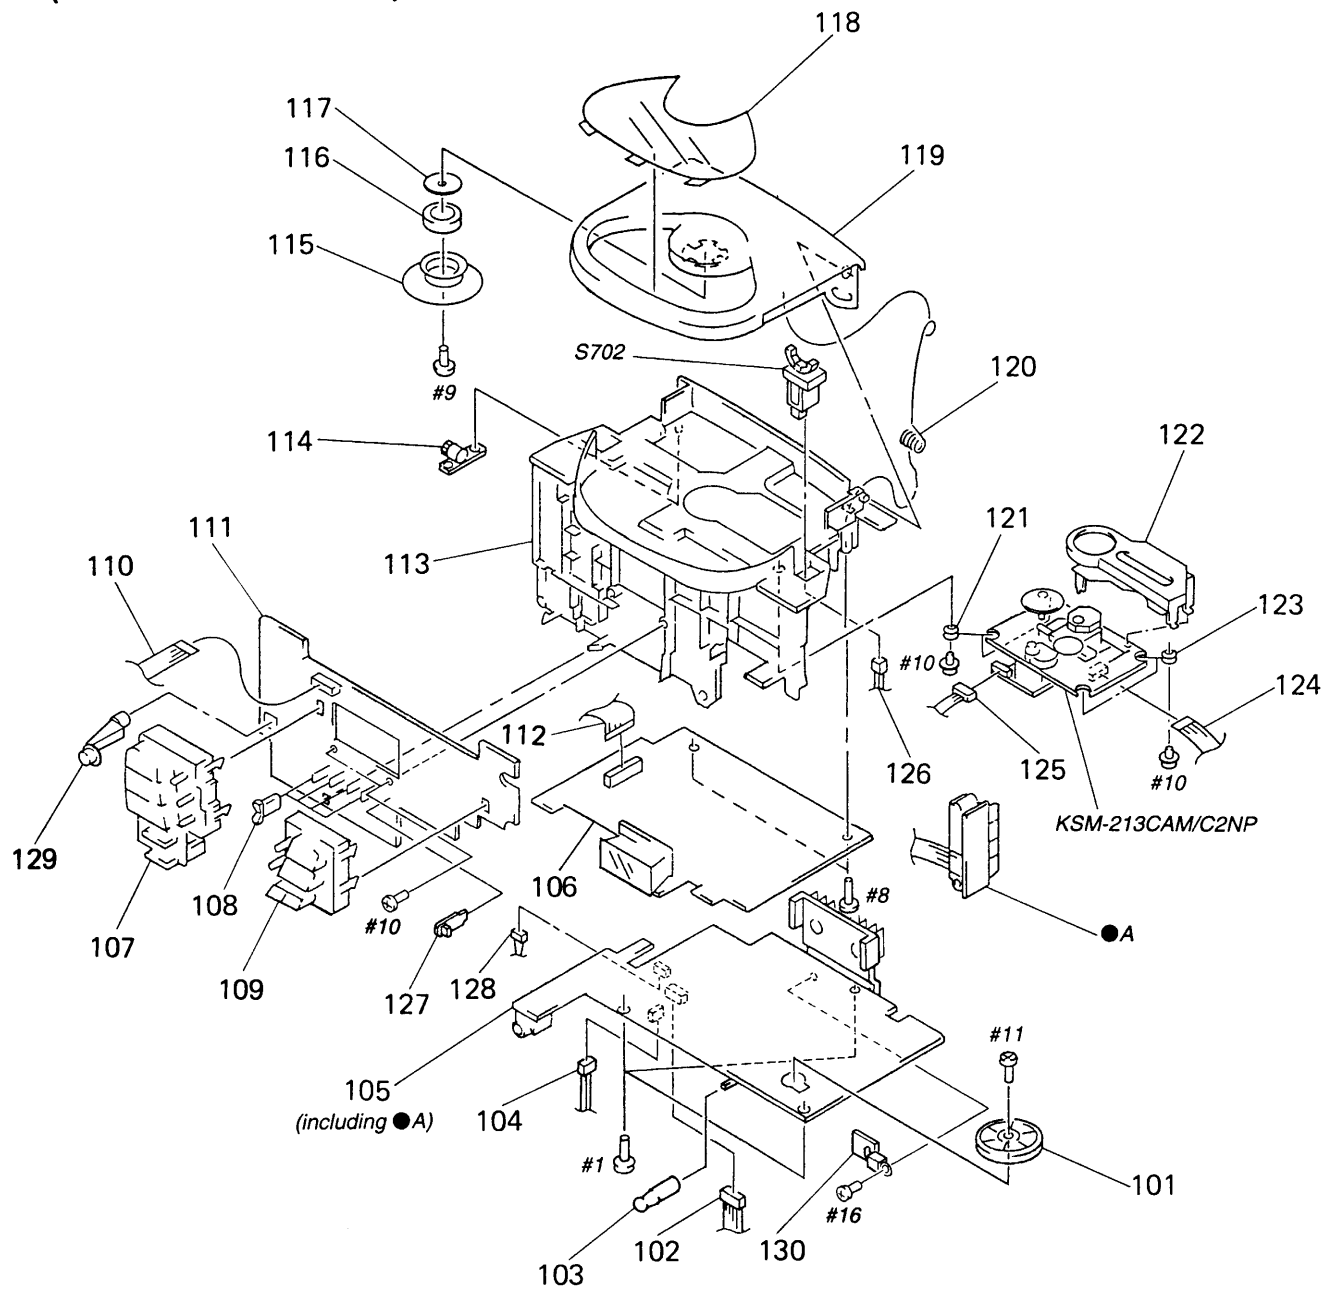

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 101	3-014-413-01	DRUM, DIAL		116	1-452-732-11	MAGNET	
102	1-782-391-11	LEAD, CONNECTOR (300mm) 5P		* 117	3-013-775-01	PLATE, MAGNET	
* 103	3-013-704-01	SPACER, LEVER (SW)		118	3-013-667-01	WINDOW, CD DOOR	
104	1-782-390-11	LEAD, CONNECTOR (300mm) 3P		119	3-013-000-01	DOOR, CD	
* 105	A-3293-691-A	MAIN BOARD, COMPLETE (ZW200L)		120	3-014-409-01	SPRING, CD DOOR	
* 105	A-3293-737-A	MAIN BOARD, COMPLETE (ZW220L)		121	3-014-410-01	DAMPER (GREEN)	
* 106	A-3293-503-A	CD DECODER BOARD, COMPLETE (AEP)		122	3-013-698-01	COVER, CD PICK UP	
107	X-3375-231-1	BUTTON ASSY, FUNCTION (CD. RADIO. TAPE)		123	3-014-411-01	DAMPER (RED)	
108	3-013-675-01	KNOB, EQUALIZER		124	1-782-392-11	CABLE, FLEXIBLE FLAT (80mm) 16P	
109	3-013-680-01	BUTTON, CD (▶◀◻◻◻◻◻◻)		125	1-779-607-11	LEAD, CONNECTOR (160mm) 6P	
110	1-782-393-11	CABLE, FLEXIBLE FLAT (120mm) 15P		126	1-779-608-11	LEAD, CONNECTOR (100mm) 2P	
* 111	A-3293-695-A	FRONT BOARD, COMPLETE		* 127	1-666-276-11	SENSOR BOARD	
112	1-782-394-11	CABLE, FLEXIBLE FLAT (160mm) 21P		128	1-782-580-11	LEAD, CONNECTOR (300mm) 2P	
113	3-013-002-01	CHASSIS, CD		129	3-016-211-01	BUTTON, HISP	
114	3-016-434-01	DAMPER (BLACK), GEAR		* 130	1-669-077-11	POSISTOR BOARD	
115	3-013-701-01	COVER, MAGNET		S702	1-692-960-11	SWITCH, PUSH (1 KEY) (CD LID OPEN/CLOSE DET)	

**(4) OPTICAL PICK-UP SECTION
(KSM-213CAM/C2NP)**

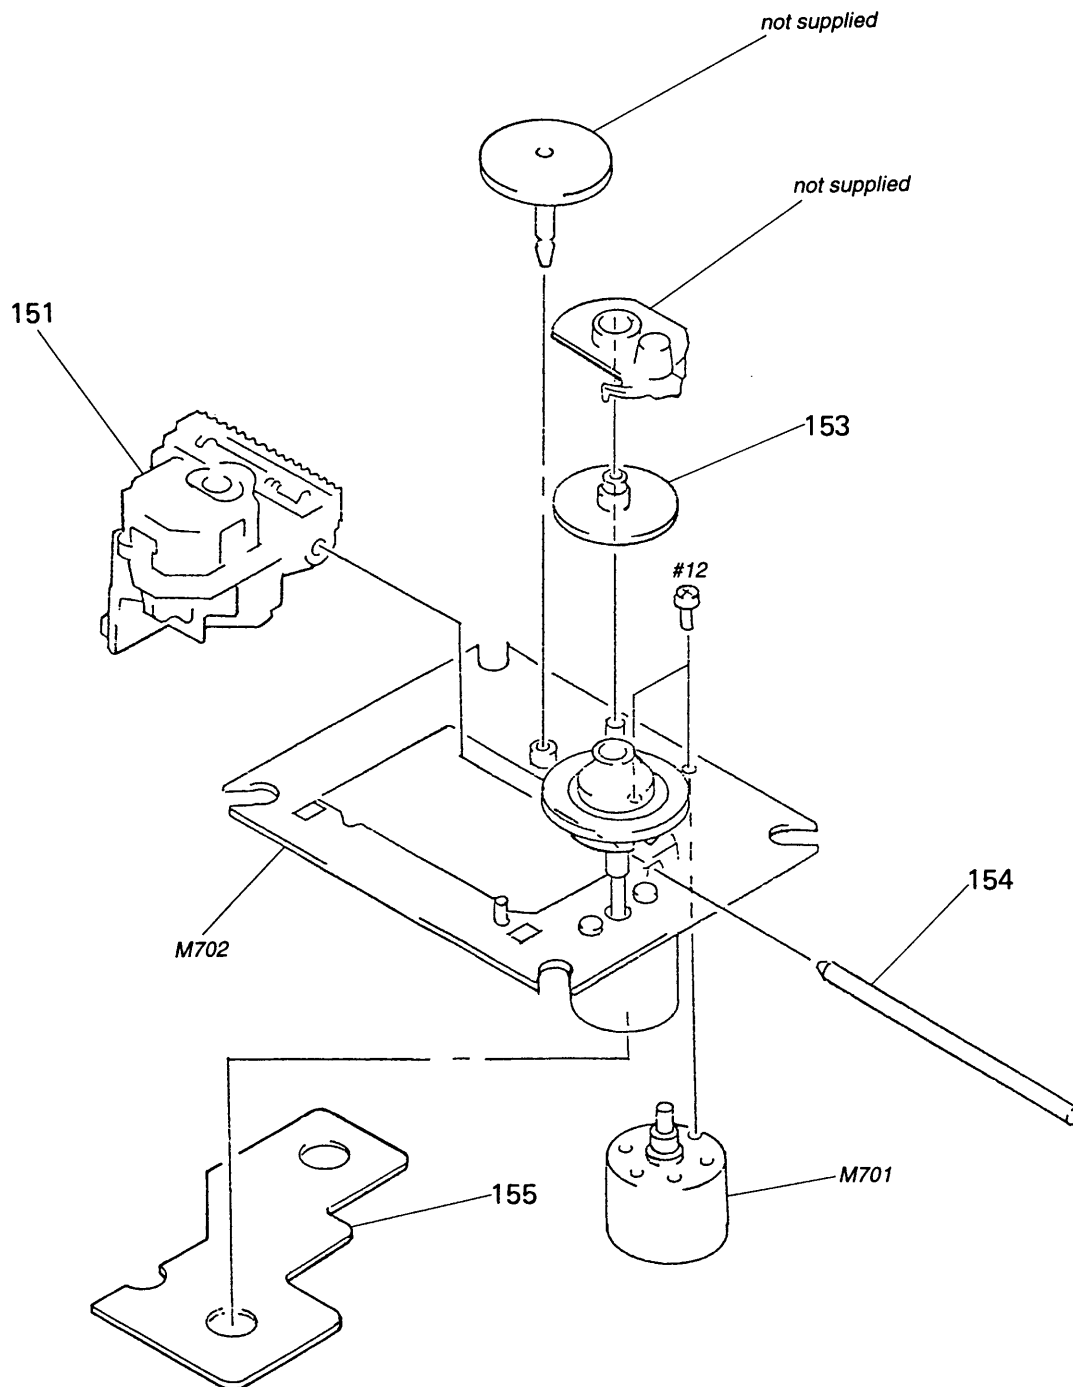


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
Δ 151	8-848-379-31	OPTICAL PICK-UP KSS-213B/F-NP	
153	2-627-003-01	GEAR (B) (RP)	
154	2-626-908-01	SHAFT, SLED	


Ref. No.	Part No.	Description	Remark
* 155	1-658-023-12	MOTOR BOARD	
M701	X-2625-769-1	GEAR ASSY (MB), MOTOR (SLED)	
M702	X-2625-770-1	CHASSIS ASSY (MB) (RP), MOTOR (SPINDLE)	

(5) MECHANISM DECK SECTION-1
(MF-ZW200)

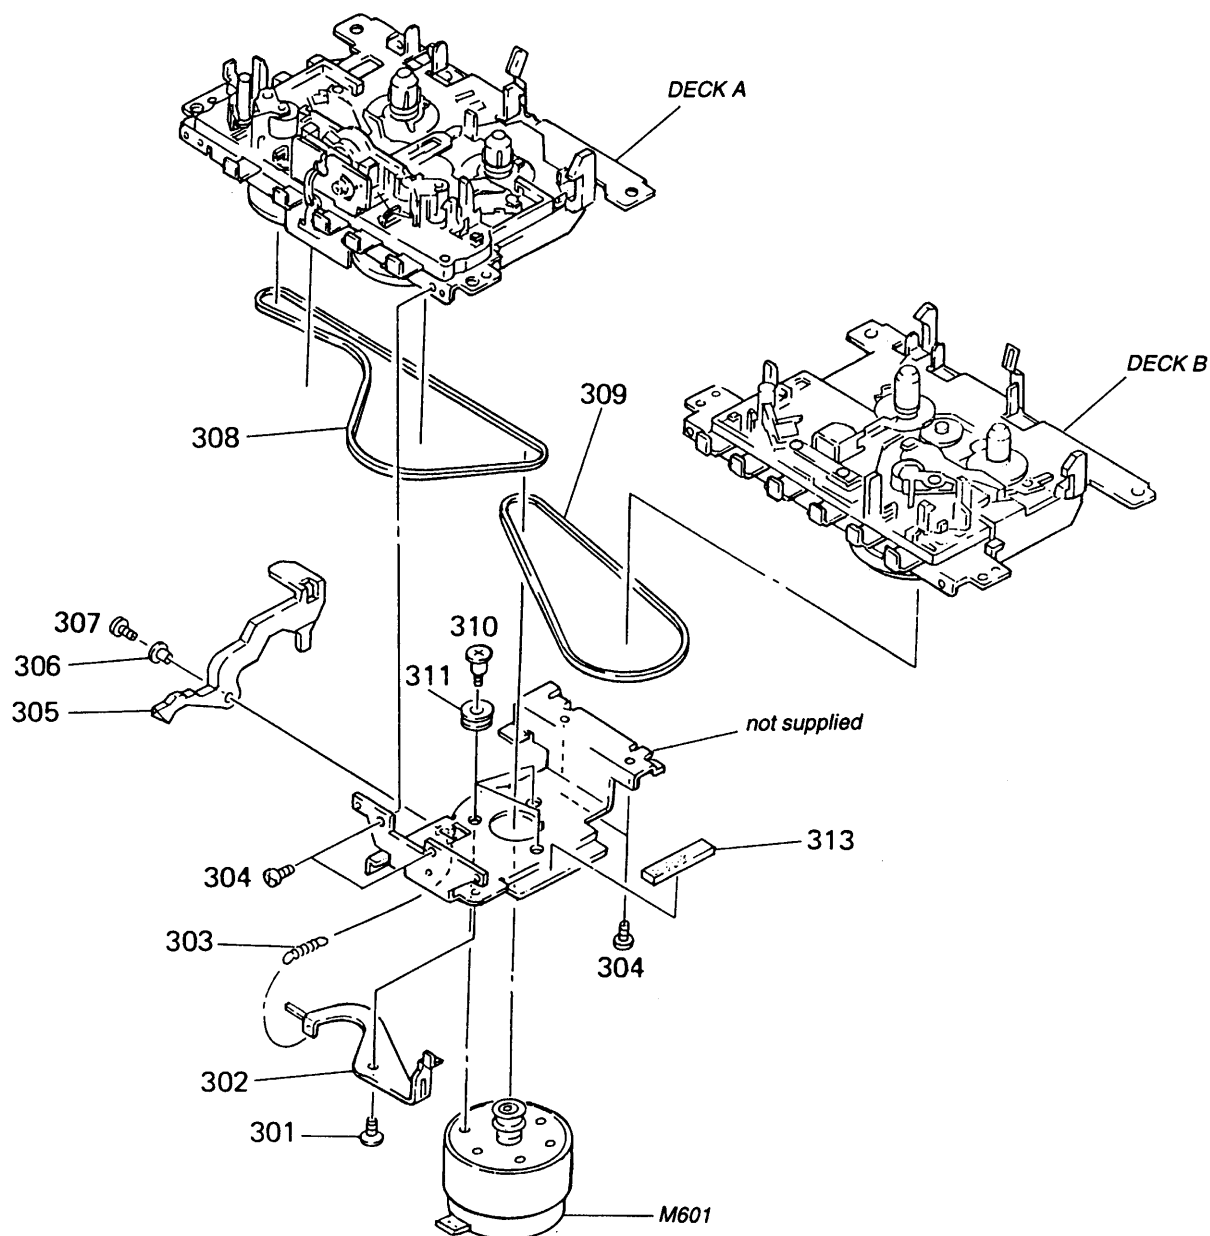


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	3-915-826-01	SCREW (A), PK COLLAR		308	3-920-455-01	BELT, M	
* 302	3-920-465-01	LEVER, P KICK		309	3-920-403-01	BELT, MAIN	
303	3-920-466-01	SPRING, P KICK LEVER		310	3-920-402-01	SCREW, MOTOR COLLAR	
304	3-915-809-01	SCREW (M2X4), C TIGHT		311	3-920-401-01	RUBBER, MOTOR	
305	3-920-467-01	LEVER (B), P KICK		313	3-920-469-01	MAT, VIBRATION PROOF	
306	3-915-827-01	COLLAR (B)		M601	X-3369-757-1	MOTOR ASSY (REEL/CAPSTAN)	
307	3-920-341-01	SCREW (M2X6), C TIGHT					

**(6) MECHANISM DECK SECTION-2 (DECK B)
(MF-ZW200)**

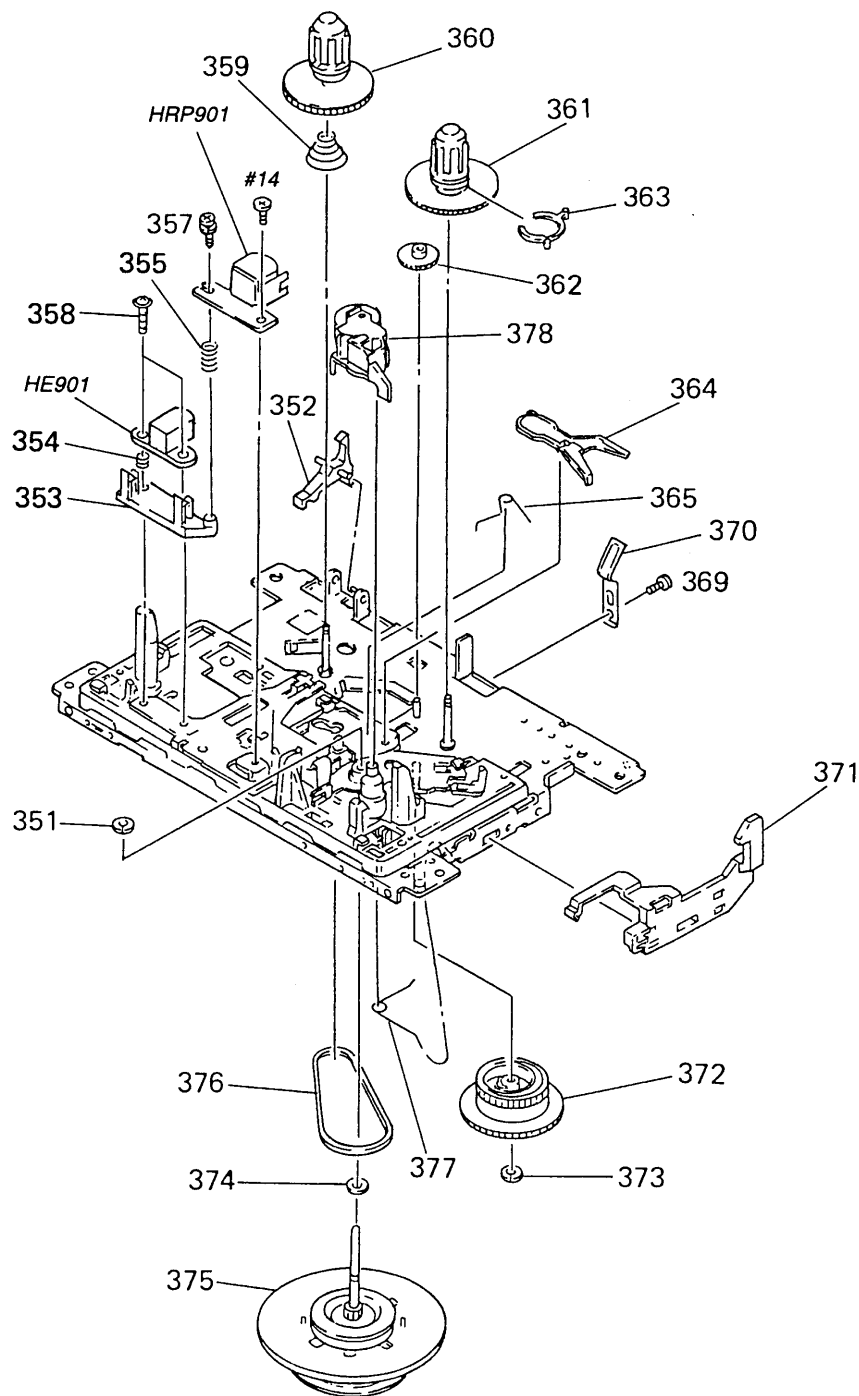


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
351	3-920-346-01	WASHER		365	3-915-781-01	SPRING, M CONTROL	
* 352	3-920-405-01	LEVER, REC SAFETY		369	3-915-808-01	SCREW (M2X3), C TIGHT	
353	3-019-335-01	BASE, HEAD		370	3-920-406-01	SPRING, PACK	
354	3-019-336-01	SPRING		* 371	3-920-404-01	LEVER, EJECT SLIDE	
355	3-920-395-01	SPRING, AZIMUTH		372	3-915-792-01	GEAR, CAM	
357	3-920-351-01	SCREW (M2X7)		373	3-920-348-01	WASHER	
358	3-019-231-01	SCREW A		374	3-920-350-01	WASHER	
359	3-920-399-01	GEAR, BACK TENSION		375	3-915-788-01	FLYWHEEL ASSY	
360	3-915-795-01	REEL ASSY, SUPPLY		376	3-915-787-01	BELT, RF	
361	3-915-796-01	REEL ASSY, TAKE-UP		377	3-915-758-01	SPRING, E ACTUATOR	
362	3-915-793-01	GEAR, FF		378	3-915-784-01	ARM ASSY, PINCH ROLLER	
363	3-915-797-01	SENSOR		HE901	1-500-492-11	HEAD, E (ERASE) (DECK B)	
364	3-915-785-01	LEVER, SENSING		HRP901	1-500-138-11	HEAD, R/P (REC/PB) (DECK B)	

(7) MECHANISM DECK SECTION-3 (DECK B)
(MF-ZW200)

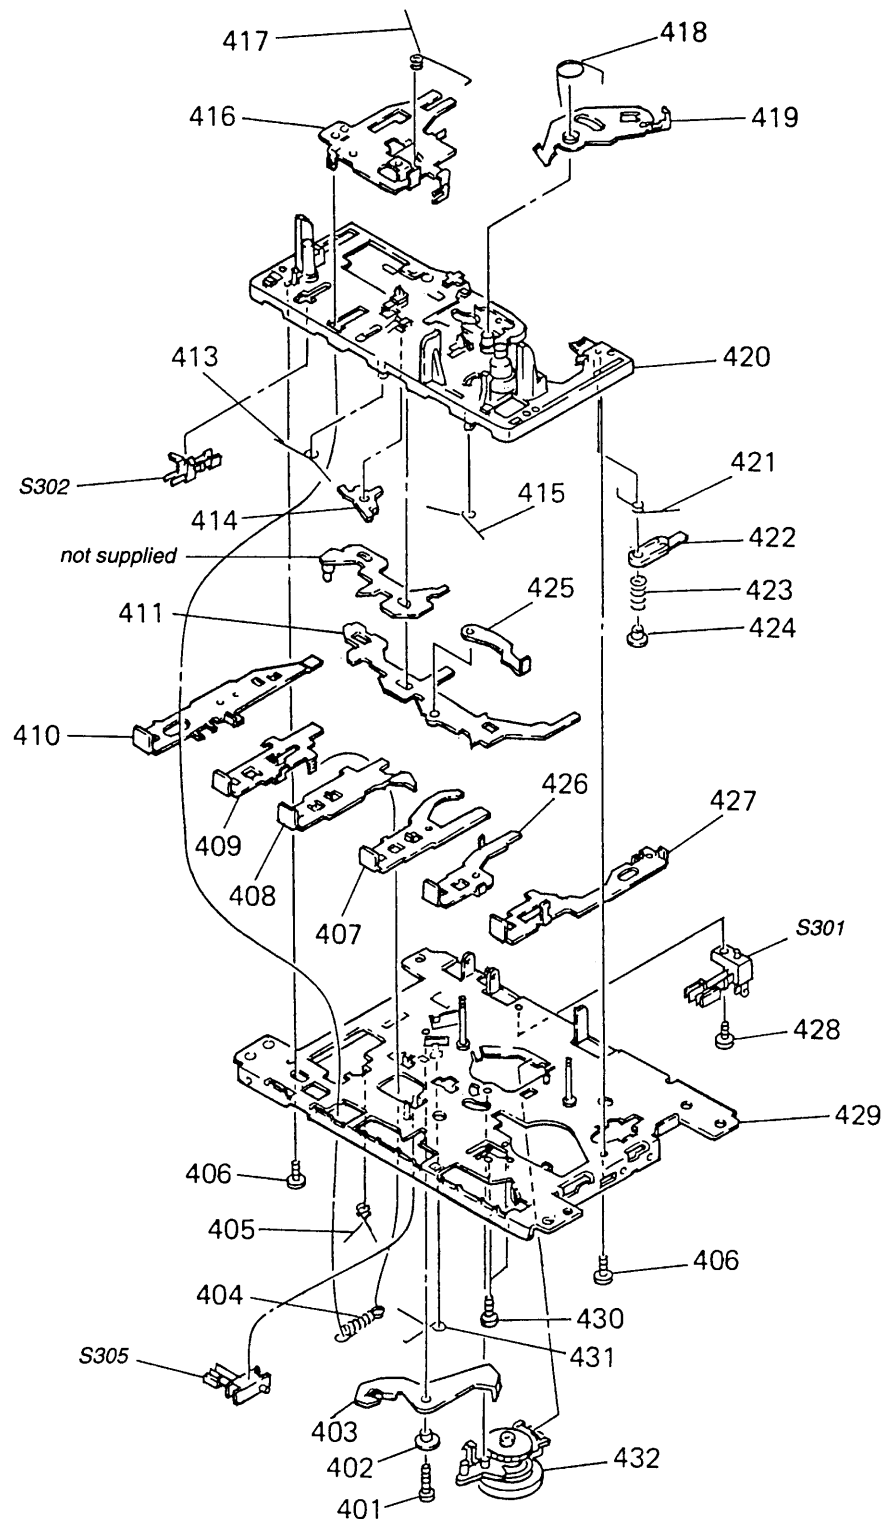


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
401	3-014-780-01	SCREW (2X4), C		419	3-920-398-01	PLATE ASSY, GEAR	
402	3-014-759-01	COLLAR, P ARM		420	3-915-740-01	BASE ASSY (A)	
403	3-014-758-01	ARM, REC		421	3-915-752-01	SPRING, P CONTROL	
404	3-014-754-01	SPRING, PLAY BUTTON LEVER		* 422	3-920-393-01	LEVER, PAUSE	
405	3-915-759-01	SPRING, PS LEVER		423	3-915-754-01	SPRING, PAUSE LEVER	
406	3-915-810-01	SCREW (M2X5), P TIGHT BIND		424	3-915-755-01	STOPPER, PAUSE	
* 407	3-915-749-01	LEVER, FF BUTTON		* 425	3-915-760-01	LEVER, E KICK	
* 408	3-915-745-01	LEVER, REW BUTTON		* 426	3-915-750-01	LEVER, STOP BUTTON	
* 409	3-915-744-01	LEVER, PLAY BUTTON		* 427	3-915-751-01	LEVER, PAUSE BUTTON	
* 410	3-915-743-01	LEVER, REC BUTTON		428	3-014-784-01	SCREW (2X5), C	
* 411	3-915-742-01	PLATE, FUNCTION, PUSH BUTTON		* 429	3-915-757-01	CHASSIS ASSY	
413	3-915-756-01	SPRING (A), BUTTON LEVER		430	3-915-811-01	SCREW (M2X4.5), CAMERA TAPPING	
* 414	3-915-772-01	STOPPER, PR		431	3-915-773-01	SPRING, REC BUTTON LEVER	
415	3-915-774-01	SPRING (B), BUTTON LEVER		432	3-920-397-01	CLUTCH ASSY, RF	
416	3-915-776-01	PANEL, HEAD		S301	1-762-024-11	SWITCH, LEAF (REC) (DECK B)	
417	3-920-396-01	SPRING, PANEL (P)		S302	1-762-022-11	SWITCH, LEAF (MOTOR ON) (DECK B)	
418	3-915-790-01	SPRING, GEAR PLATE		S305	1-762-023-11	SWITCH, LEAF (PLAY) (DECK A)	

(8) MECHANISM DECK SECTION-4 (DECK A)
(MF-ZW200)

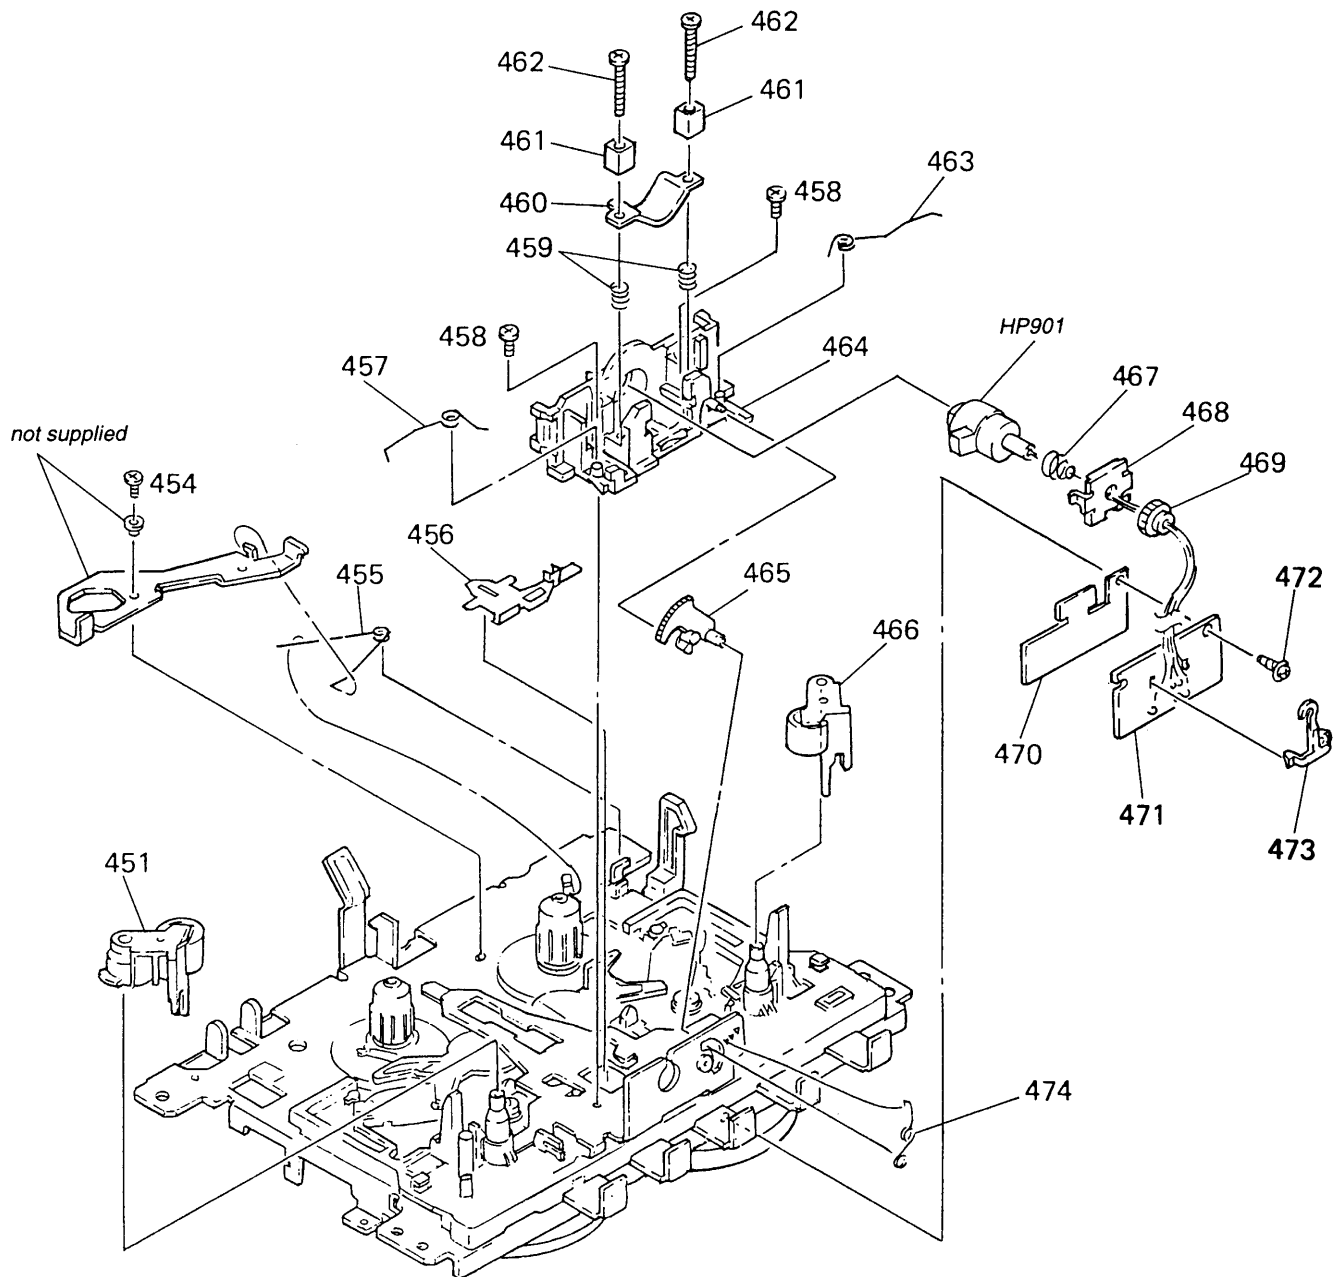


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
451	3-920-457-01	PINCH ROLLER (F) ASSY		465	3-920-427-01	GEAR, REPLACEMENT	
454	3-920-342-01	SCREW, CAMERA (S) TAPPING		466	3-920-456-01	PINCH ROLLER (F) ASSY	
455	3-920-450-01	SPRING, PAUSE ARM (B)		467	3-920-416-01	SPRING, HEAD HOLDER	
* 456	3-920-428-01	PLATE, REPLACEMENT		468	3-920-417-01	HOLDER	
457	3-920-423-01	SPRING (R), PINCH ROLLER ARM		469	3-920-418-01	GEAR, PINION	
458	3-920-340-01	SCREW, CAMERA (S) TAPPING		* 470	3-920-458-01	PLATE, SHIELD, H	
459	3-920-424-01	SPRING, AZIMUTH		* 471	3-920-419-01	PLATE, TERMINAL, H. W	
460	3-920-425-01	PLATE, SPRING, HEAD		472	3-920-344-01	SCREW (M2X4)	
461	3-920-426-01	HOLDER, SCREW		473	3-920-420-01	CLAMP, WIRE	
462	3-920-339-01	SCREW (M2X13.5), +-		474	3-920-474-01	SPRING, H REPLACEMENT	
463	3-920-422-01	SPRING (F), PINCH ROLLER ARM		HP901	1-500-187-11	HEAD (PLAYBACK) (DECK A)	
* 464	3-920-421-01	HEAD MOUNT					

**(9) MECHANISM DECK SECTION-5 (DECK A)
(MF-ZW200)**

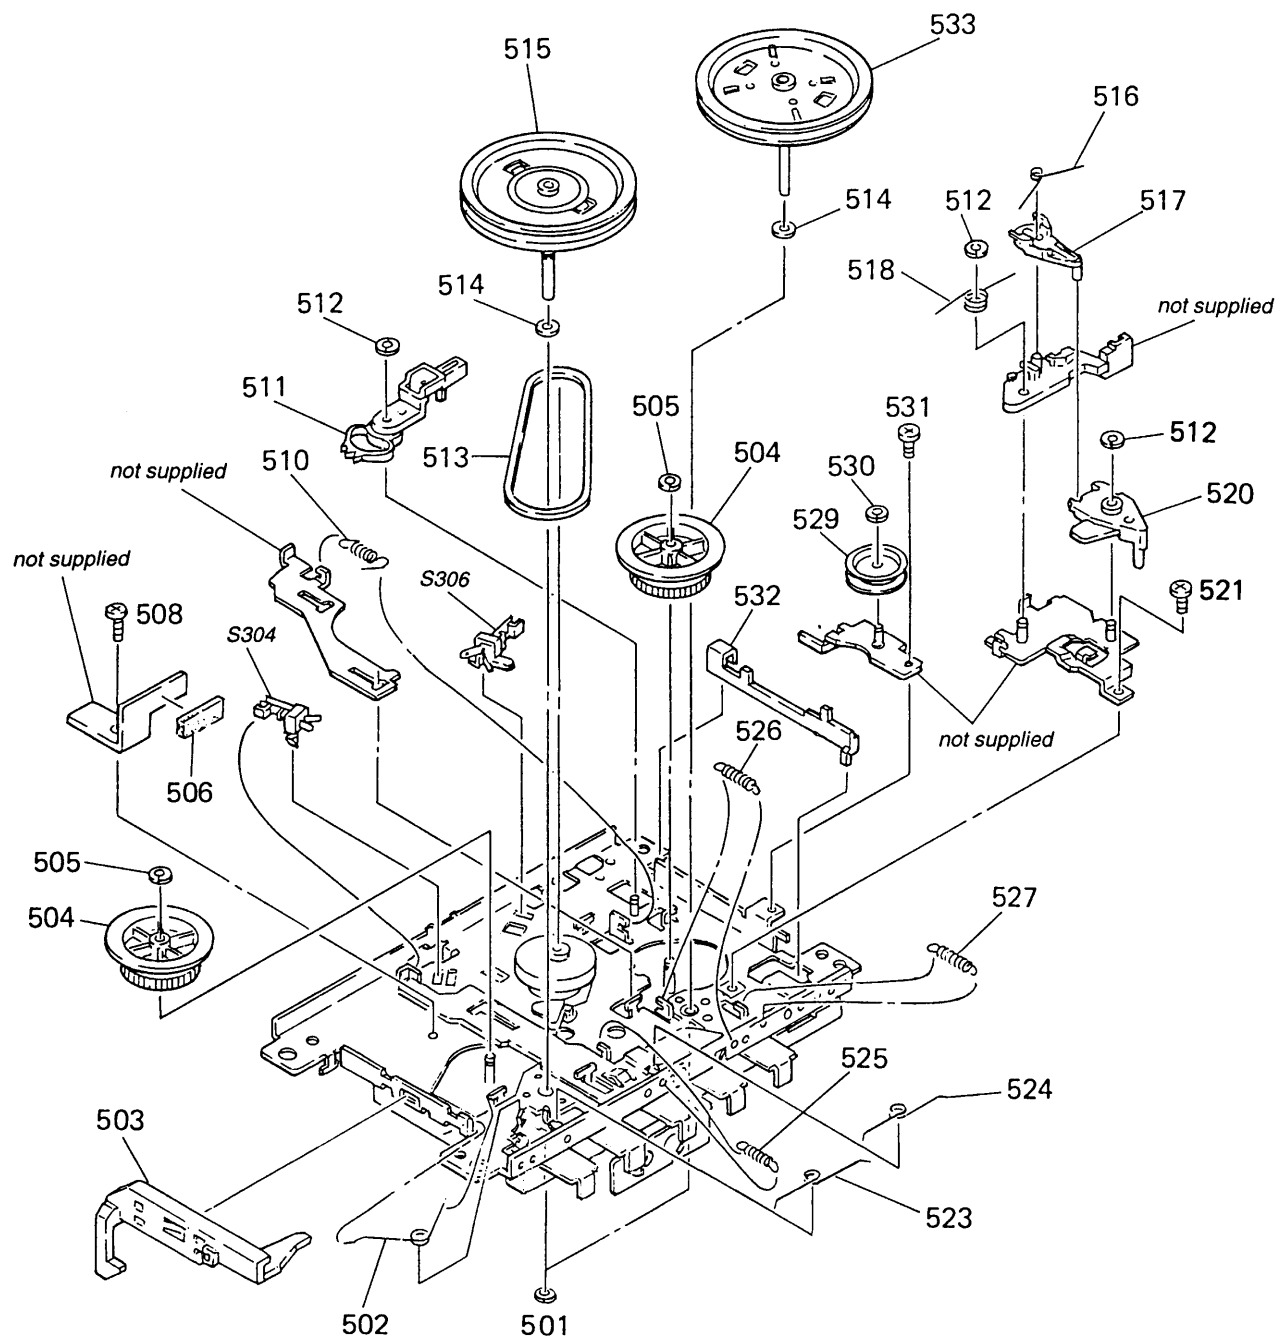


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	3-920-346-01	WASHER		518	3-920-444-01	SPRING, PRG	
502	3-920-436-01	SPRING, E ACTUATOR		* 520	3-920-443-01	LEVER, TURN	
* 503	3-920-437-01	LEVER (S), EJECT SLIDE		521	3-920-338-01	SCREW, CAMERA (S) TAPPING	
504	3-920-439-01	GEAR, CAM		523	3-915-774-01	SPRING (B), BUTTON LEVER	
505	3-920-348-01	WASHER		524	3-915-756-01	SPRING (A), BUTTON LEVER	
506	3-920-469-01	MAT, VIBRATION PROOF		525	3-920-454-01	SPRING, MAIN PLATE	
508	3-920-353-01	SCREW (M2X2.5), CAMELA TAPPING		526	3-920-453-01	SPRING, HEAD PANEL	
510	3-920-471-01	SPRING, MUTE PLATE		527	3-920-452-01	SPRING, PLAY BUTTON	
511	3-920-463-01	LEVER, MODE		529	3-920-431-01	PULLEY	
512	3-920-347-01	POLY-SLIDER		530	3-920-352-01	POLY-SLIDER	
513	3-915-787-01	BELT, RF		531	3-915-808-01	SCREW (M2X3), C TIGHT	
514	3-920-345-01	POLY-SLIDER		532	3-921-417-01	LEVER, MODE SLIDE	
515	3-920-446-01	FLYWHEEL ASSY (F)		533	3-920-451-01	FLYWHEEL ASSY (F)	
516	3-920-445-01	SPRING, PUSH LEVER		S304	1-762-022-11	SWITCH, LEAF (MOTOR ON/PLAY) (DECK B)	
* 517	3-920-442-01	LEVER, PUSH		S306	1-762-255-11	SWITCH, LEAF (PLAYBACK) (DECK A)	

(10) MECHANISM DECK SECTION-6 (DECK A)
(MF-ZW200)

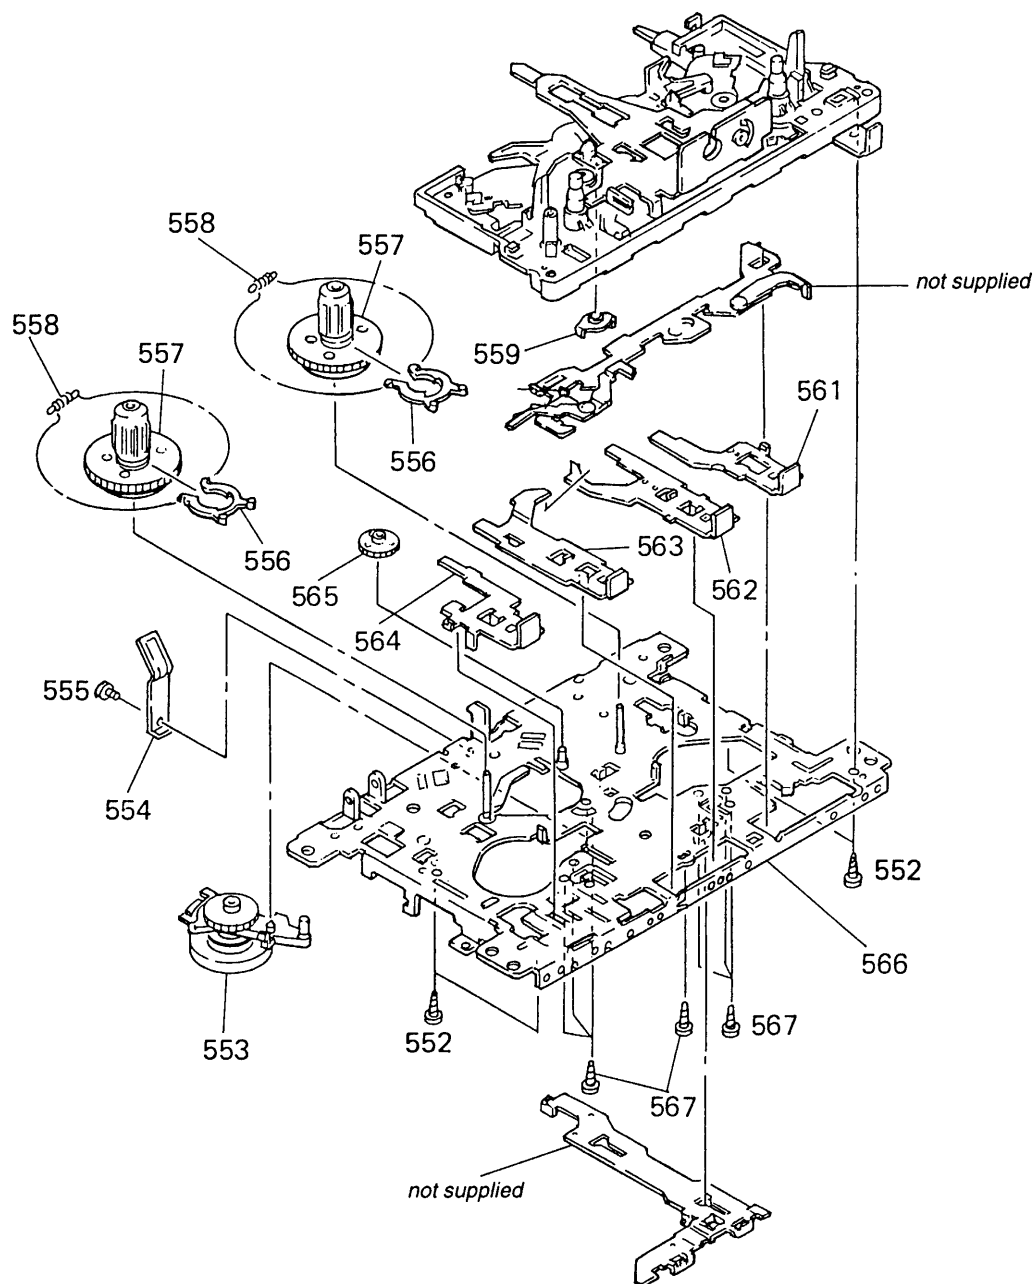


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
552	3-915-810-01	SCREW (M2X5), P TIGHT BIND		* 561	3-920-413-01	LEVER ASSY (RS), STOP BUTTON	
553	3-920-397-01	CLUTCH ASSY, RF		* 562	3-920-412-01	LEVER ASSY (RS), FF BUTTON	
554	3-920-406-01	SPRING, PACK		* 563	3-920-411-01	LEVER ASSY (FS), FF BUTTON	
555	3-915-808-01	SCREW (M2X3), C TIGHT		* 564	3-920-410-01	LEVER ASSY (RS), PLAY BUTTON	
556	3-920-434-01	SENSOR		565	3-915-793-01	GEAR, FF	
557	3-920-433-01	REEL ASSY, T		* 566	3-920-432-01	CHASSIS ASSY	
558	3-920-435-01	SPRING, SENSOR		567	3-915-811-01	SCREW (M2X4.5), CAMERA TAPPING	
* 559	3-920-408-01	STOPPER, PR					

(11) MECHANISM DECK SECTION-7 (DECK A)
(MF-ZW200)

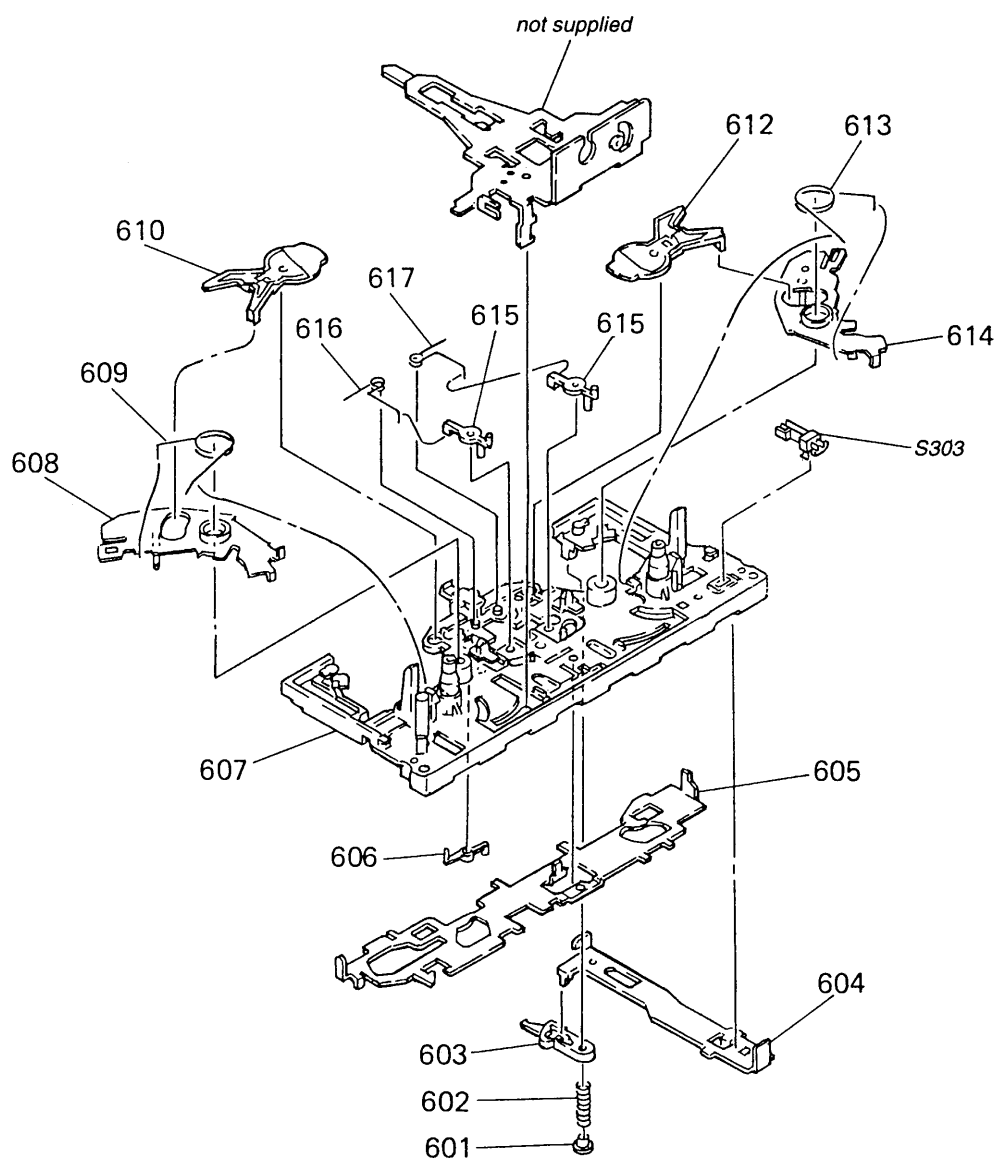

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
601	3-915-755-01	STOPPER, PAUSE		610	3-920-548-01	LEVER (R), SENSING	
602	3-915-754-01	SPRING, PAUSE LEVER		612	3-920-547-01	LEVER (F), SENSING	
* 603	3-920-447-01	LEVER (F), PUSH		613	3-920-542-01	SPRING, GEAR PLATE (F)	
* 604	3-920-414-01	LEVER ASSY (S), PAUSE BUTTON		* 614	3-920-541-01	PLATE (F) ASSY, GERA	
* 605	3-920-549-01	PLATE, *SLIDE		* 615	3-920-429-01	ARM, M CONTROL	
* 606	3-920-409-01	LEVER, RF KICK		616	3-920-546-01	SPRING, M CONTROL (R)	
607	3-920-540-01	BASE (B) ASSY		617	3-920-545-01	SPRING, M CONTROL (F)	
* 608	3-920-543-01	PLATE (R) ASSY, GEAR		S303	1-771-256-11	SWITCH, LEAF (DIRECTION) (DECK A)	
609	3-920-544-01	SPRING, GEAR PLATE (R)					

(12) SPEAKER SECTION

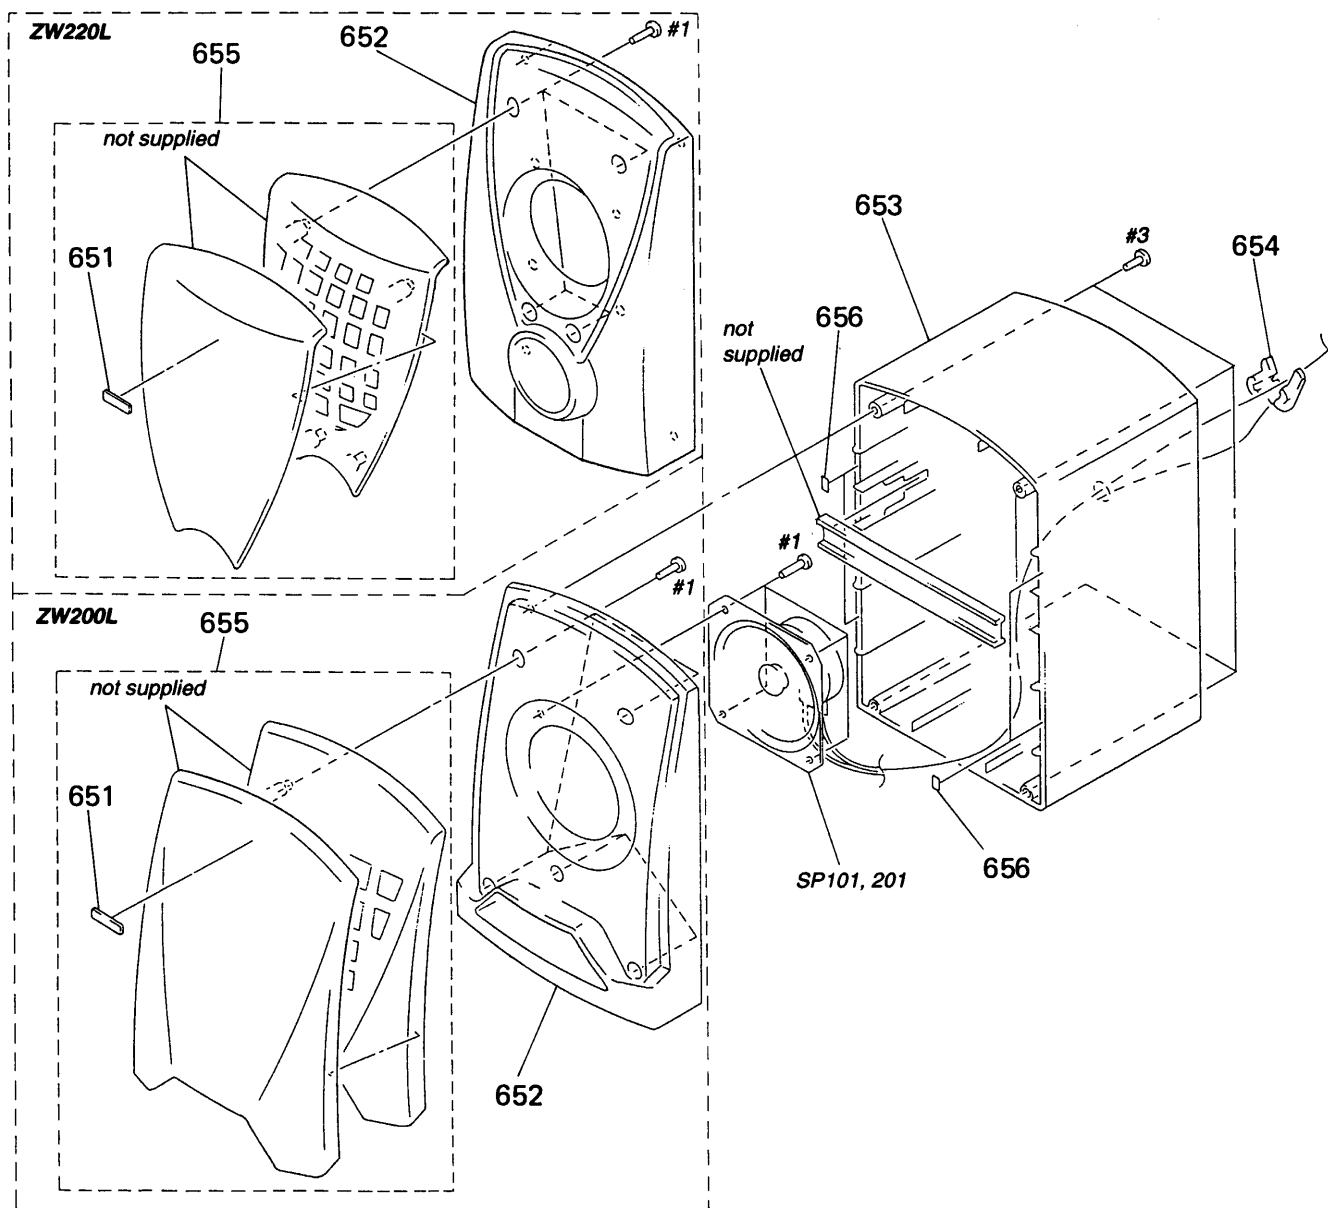

Ref. No.	Part No.	Description	Remark
651	3-013-683-01	EMBLEM	
652	3-012-996-01	PANEL, SPEAKER (FRONT) (ZW200L)	
652	3-016-204-01	PANEL, SPEAKER (FRONT) (ZW220L)	
* 653	3-012-998-01	CABINET (L), SPEAKER (BACK)	
* 653	3-012-999-01	CABINET (R), SPEAKER (BACK)	
654	3-013-666-01	RETAINER, SPK WIRE	

Ref. No.	Part No.	Description	Remark
655	X-3374-115-1	PANEL ASSY, SPK CLOTH (ZW220L)	
655	X-3374-322-1	PANEL ASSY, SPK CLOTH (ZW200L)	
* 656	4-957-258-01	SHEET, ADHESIVE	
SP101	1-505-724-11	SPEAKER (4 inch) (L-CH)	
SP201	1-505-724-11	SPEAKER (4 inch) (R-CH)	

SECTION 8 ELECTRICAL PARTS LIST

BATTERY(A)

BATTERY(B)

BATTERY(C)

CD DECODER

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. . .
uPB. . . : μ PB. . . uPC. . . : μ PC. . .
uPD. . . : μ PD. . .
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
*	1-666-279-11	BATTERY (A) BOARD *****	
	3-014-422-01	SPRING (3A), BATTERY	
	7-612-017-65	WIRE, PARALLEL 3P	
	< CAPACITOR >		
C905	1-117-804-11	CERAMIC 0.1uF	50V
C905A	1-117-804-11	CERAMIC 0.1uF	50V
	< CONNECTOR >		
CN902	1-779-620-11	CONNECTOR (WIRE HOLDER) 3P *****	
*	1-666-280-11	BATTERY (B) BOARD *****	
	3-014-422-01	SPRING (3A), BATTERY *****	
*	1-666-281-11	BATTERY (C) BOARD *****	
	3-014-423-01	SPRING (1A), BATTERY *****	
*	A-3293-503-A	CD DECODER BOARD, COMPLETE *****	
*	3-013-774-01	PLATE, DISPLAY	
*	3-013-776-01	HOLDER, DISPLAY	
	7-612-017-59	WIRE, PARALLEL 2P (160) BLK	
	< CAPACITOR >		
C701	1-126-933-11	ELECT 100uF	20% 10V
C702	1-162-201-31	CERAMIC 12PF	5% 50V
C703	1-117-804-11	CERAMIC 0.1uF	50V
C704	1-162-306-11	CERAMIC 0.01uF	20% 16V
C705	1-130-489-00	MYLAR 0.033uF	5% 50V
C706	1-162-306-11	CERAMIC 0.01uF	20% 16V
C707	1-130-489-00	MYLAR 0.033uF	5% 50V
C708	1-161-494-00	CERAMIC 0.022uF	25V
C709	1-126-959-11	ELECT 0.47uF	20% 50V
C712	1-117-804-11	CERAMIC 0.1uF	50V
C713	1-126-933-11	ELECT 100uF	20% 10V
C714	1-162-302-11	CERAMIC 0.0022uF	30% 16V
C715	1-162-302-11	CERAMIC 0.0022uF	30% 16V
C716	1-136-159-00	MYLAR 0.033uF	10% 50V

Ref. No.	Part No.	Description	Remark
C717	1-117-804-11	CERAMIC 0.1uF	50V
C718	1-117-804-11	CERAMIC 0.1uF	50V
C719	1-126-963-11	ELECT 4.7uF	20% 50V
C720	1-162-306-11	CERAMIC 0.01uF	20% 16V
C721	1-161-494-00	CERAMIC 0.022uF	25V
C722	1-126-933-11	ELECT 100uF	20% 10V
C723	1-117-804-11	CERAMIC 0.1uF	50V
C724	1-126-233-11	ELECT 22uF	20% 50V
C725	1-161-494-00	CERAMIC 0.022uF	25V
C726	1-161-494-00	CERAMIC 0.022uF	25V
C731	1-110-671-31	CERAMIC 47000PF	50V
C732	1-162-301-11	CERAMIC 0.0015uF	30% 16V
C733	1-162-286-31	CERAMIC 220PF	10% 50V
C734	1-126-963-11	ELECT 4.7uF	20% 50V
C735	1-162-306-11	CERAMIC 0.01uF	20% 16V
C736	1-117-804-11	CERAMIC 0.1uF	50V
C737	1-126-967-11	ELECT 47uF	20% 10V
C738	1-117-804-11	CERAMIC 0.1uF	50V
C740	1-162-282-31	CERAMIC 100PF	10% 50V
C741	1-162-306-11	CERAMIC 0.01uF	16V
C742	1-117-804-11	CERAMIC 0.1uF	50V
C743	1-162-282-31	CERAMIC 100PF	10% 50V
C744	1-162-282-31	CERAMIC 100PF	10% 50V
C745	1-162-282-31	CERAMIC 100PF	10% 50V
C746	1-162-282-31	CERAMIC 100PF	10% 50V
C747	1-162-282-31	CERAMIC 100PF	10% 50V
C748	1-126-233-11	ELECT 22uF	20% 50V
C751	1-162-210-31	CERAMIC 30PF	5% 50V
C752	1-162-210-31	CERAMIC 30PF	5% 50V
C757	1-162-306-11	CERAMIC 0.01uF	20% 16V
C758	1-117-804-11	CERAMIC 0.1uF	50V
C759	1-126-373-11	ELECT 470uF	20% 10V
C761	1-162-284-31	CERAMIC 150PF	10% 50V
C762	1-162-284-31	CERAMIC 150PF	10% 50V
C763	1-162-288-31	CERAMIC 330PF	10% 50V
C764	1-162-288-31	CERAMIC 330PF	10% 50V
C765	1-162-288-31	CERAMIC 330PF	10% 50V
C766	1-162-288-31	CERAMIC 330PF	10% 50V
C767	1-126-963-11	ELECT 4.7uF	20% 50V
C768	1-126-963-11	ELECT 4.7uF	20% 50V
C769	1-162-301-11	CERAMIC 0.0015uF	30% 16V
C770	1-162-301-11	CERAMIC 0.0015uF	30% 16V
C771	1-126-963-11	ELECT 4.7uF	20% 50V
C772	1-126-963-11	ELECT 4.7uF	20% 50V

REVISED

CD DECODER

Ref. No.	Part No.	Description	Remark
C773	1-126-177-11	ELECT 100uF	20% 10V
C774	1-126-335-11	ELECT 220uF	20% 10V
C780	1-126-797-11	ELECT 1000uF	20% 10V
C781	1-126-797-11	ELECT 1000uF	20% 10V
C782	1-161-494-00	CERAMIC 0.022uF	25V
C889	1-126-963-11	ELECT 4.7uF	20% 50V
C891	1-126-933-11	ELECT 100uF	20% 10V
C892	1-164-048-11	CERAMIC 12PF	5% 50V
C893	1-164-048-11	CERAMIC 12PF	5% 50V
C894	1-117-804-11	CERAMIC 0.1uF	50V
C895	1-117-804-11	CERAMIC 0.1uF	50V
C896	1-117-804-11	CERAMIC 0.1uF	50V
C897	1-126-233-11	ELECT 22uF	20% 50V
C898	1-117-804-11	CERAMIC 0.1uF	50V
C899	1-117-804-11	CERAMIC 0.1uF	50V

< CONNECTOR >

CN701	1-782-397-11	SOCKET, CONNECTOR 16P
CN703	1-779-609-11	CONNECTOR (BASE) 6P
CN706	1-779-606-11	CONNECTOR (WIRE HOLDER) 2P
CN707	1-782-396-11	SOCKET, CONNECTOR 21P
CN801	1-782-395-11	SOCKET, CONNECTOR 15P
CN802	1-779-621-11	CONNECTOR (BASE) 2P

< DIODE >

D701	8-719-987-63	DIODE 1N4148M
D704	8-719-109-89	DIODE RD5.6ESB2
D707	8-719-031-85	DIODE 1N4002L
D801	8-719-987-63	DIODE 1N4148M

< IC >

IC701	8-752-069-56	IC CXA1782BQ
IC702	8-752-372-91	IC CXD2508Q
IC703	8-759-429-31	IC BA5941FP
IC705	8-759-505-55	IC NJM4558L
IC801	8-759-524-89	IC LC5876-1J64
IC802	8-759-165-85	IC PST600H-T

< INDUCTOR >

L701	1-410-509-11	INDUCTOR 10uH
------	--------------	---------------

< LIQUID CRYSTAL DISPLAY >

LCD801	1-803-291-11	DISPLAY PANEL, LIQUID CRYSTAL
--------	--------------	-------------------------------

< TRANSISTOR >

Q701	8-729-195-23	TRANSISTOR 2SA952
Q702	8-729-195-23	TRANSISTOR 2SA952
Q703	8-729-119-78	TRANSISTOR 2SC403SP-51
Q704	8-729-142-46	TRANSISTOR 2SC2001-LK
Q705	8-729-119-78	TRANSISTOR 2SC403SP-51
Q706	8-729-119-78	TRANSISTOR 2SC403SP-51

Ref. No.	Part No.	Description	Remark
Q707	8-729-119-76	TRANSISTOR 2SA1175-HFE	

< RESISTOR >

R701	1-249-393-11	CARBON 10 5% 1/4W
R702	1-247-847-11	CARBON 4.7K 5% 1/4W
R703	1-247-863-11	CARBON 22K 5% 1/4W
R704	1-249-430-11	CARBON 12K 5% 1/4W
R705	1-249-430-11	CARBON 12K 5% 1/4W
R706	1-249-430-11	CARBON 12K 5% 1/4W
R707	1-249-430-11	CARBON 12K 5% 1/4W
R708	1-249-430-11	CARBON 12K 5% 1/4W
R709	1-249-430-11	CARBON 12K 5% 1/4W
R713	1-247-879-11	CARBON 100K 5% 1/4W
R714	1-247-871-11	CARBON 47K 5% 1/4W
R715	1-247-871-11	CARBON 47K 5% 1/4W
R716	1-247-871-11	CARBON 47K 5% 1/4W
R717	1-247-871-11	CARBON 47K 5% 1/4W
R718	1-247-879-11	CARBON 100K 5% 1/4W
R719	1-249-431-11	CARBON 15K 5% 1/4W
R720	1-249-431-11	CARBON 15K 5% 1/4W
R721	1-247-841-11	CARBON 2.7K 5% 1/4W
R722	1-249-438-11	CARBON 56K 5% 1/4W
R723	1-247-879-11	CARBON 100K 5% 1/4W
R724	1-247-896-11	CARBON 510K 5% 1/4W
R725	1-247-879-11	CARBON 100K 5% 1/4W
R726	1-247-879-11	CARBON 100K 5% 1/4W
R727	1-247-881-00	CARBON 120K 5% 1/4W
R728	1-247-879-11	CARBON 100K 5% 1/4W
R729	1-249-428-11	CARBON 8.2K 5% 1/4W
R730	1-247-863-11	CARBON 22K 5% 1/4W
R731	1-249-431-11	CARBON 15K 5% 1/4W
R732	1-247-887-00	CARBON 220K 5% 1/4W
R736	1-247-807-11	CARBON 100 5% 1/4W
R737	1-260-087-11	CARBON 100 5% 1/2W
R738	1-247-807-11	CARBON 100 5% 1/4W
R739	1-247-807-11	CARBON 100 5% 1/4W
R740	1-247-847-11	CARBON 4.7K 5% 1/4W
R741	1-247-883-00	CARBON 150K 5% 1/4W
R742	1-247-807-11	CARBON 100 5% 1/4W
R743	1-247-807-11	CARBON 100 5% 1/4W
R744	1-247-847-11	CARBON 4.7K 5% 1/4W
R745	1-247-843-11	CARBON 3.3K 5% 1/4W
R746	1-247-843-11	CARBON 3.3K 5% 1/4W
R747	1-247-855-11	CARBON 10K 5% 1/4W
R748	1-247-903-00	CARBON 1M 5% 1/4W
R749	1-247-855-11	CARBON 10K 5% 1/4W
R750	1-247-879-11	CARBON 100K 5% 1/4W
R752	1-247-903-00	CARBON 1M 5% 1/4W
R755	1-247-855-11	CARBON 10K 5% 1/4W
R756	1-247-855-11	CARBON 10K 5% 1/4W
R757	1-247-855-11	CARBON 10K 5% 1/4W
R758	1-247-871-11	CARBON 47K 5% 1/4W
R761	1-247-855-11	CARBON 10K 5% 1/4W

CD DECODER

FAN

FRONT

Ref. No.	Part No.	Description	Remark
R762	1-247-855-11	CARBON	10K 5% 1/4W
R763	1-247-855-11	CARBON	10K 5% 1/4W
R764	1-247-855-11	CARBON	10K 5% 1/4W
R765	1-247-867-11	CARBON	33K 5% 1/4W
R766	1-247-867-11	CARBON	33K 5% 1/4W
R767	1-247-867-11	CARBON	33K 5% 1/4W
R768	1-247-867-11	CARBON	33K 5% 1/4W
R769	1-249-430-11	CARBON	12K 5% 1/4W
R770	1-249-430-11	CARBON	12K 5% 1/4W
R771	1-249-430-11	CARBON	12K 5% 1/4W
R772	1-249-430-11	CARBON	12K 5% 1/4W
R773	1-249-430-11	CARBON	12K 5% 1/4W
R774	1-249-430-11	CARBON	12K 5% 1/4W
R775	1-247-843-11	CARBON	3.3K 5% 1/4W
R776	1-247-843-11	CARBON	3.3K 5% 1/4W
R777	1-249-427-11	CARBON	6.8K 5% 1/4W
R778	1-247-847-11	CARBON	4.7K 5% 1/4W
R779	1-249-409-11	CARBON	220 5% 1/4W
R780	1-249-412-11	CARBON	390 5% 1/4W
R781	1-247-847-11	CARBON	4.7K 5% 1/4W
R783	1-247-847-11	CARBON	4.7K 5% 1/4W
R889	1-247-847-11	CARBON	4.7K 5% 1/4W
R891	1-247-863-11	CARBON	22K 5% 1/4W
R892	1-247-863-11	CARBON	22K 5% 1/4W
R893	1-247-863-11	CARBON	22K 5% 1/4W
R894	1-247-855-11	CARBON	10K 5% 1/4W
R895	1-247-871-11	CARBON	47K 5% 1/4W
R896	1-247-903-00	CARBON	1M 5% 1/4W
R897	1-247-879-11	CARBON	100K 5% 1/4W
< VARIABLE RESISTOR >			
VR701	1-241-787-11	RES, ADJ, CARBON 47K	
VR702	1-238-513-11	RES, ADJ, CARBON 150K	
< VIBRATOR >			
XTL701	1-760-793-11	VIBRATOR, CERAMIC (16.9344MHz)	
XTL801	1-767-130-11	VIBRATOR, CERAMIC (4MHz)	
XTL802	1-567-098-61	VIBRATOR, CRYSTAL (32.768KHz)	

*	1-669-055-11	FAN BOARD	

< CONNECTOR >			
CN311	1-784-657-11	CONNECTOR 2P	
CN312	1-779-777-11	CONNECTOR 2P	
CN313	1-784-657-11	CONNECTOR 2P	
< TRANSISTOR >			
Q381	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q382	8-729-195-22	TRANSISTOR 2SA952-L	

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

< RESISTOR >

R381	1-249-420-11	CARBON	1.8K 5% 1/4W
R382	1-247-839-11	CARBON	2.2K 5% 1/4W
R383	1-247-839-11	CARBON	2.2K 5% 1/4W

* A-3293-695-A FRONT BOARD, COMPLETE

3-014-419-01 HOLDER (16MM), LED

3-014-420-01 HOLDER (20MM), LED

3-015-041-01 HOLDER (14MM), LED

7-612-017-64 WIRE, PARALLEL 10P

< CAPACITOR >

C151	1-126-961-11	ELECT	2.2uF	20%	50V
C152	1-126-960-11	ELECT	1uF	20%	50V
C153	1-126-963-11	ELECT	4.7uF	20%	50V
C154	1-162-294-31	CERAMIC	0.001uF	10%	50V
C155	1-161-052-00	CERAMIC	0.012uF	10%	25V

C156	1-162-303-11	CERAMIC	0.0033uF	20%	16V
C157	1-110-671-31	CERAMIC	0.047uF		50V
C158	1-162-306-11	CERAMIC	0.01uF	20%	16V
C159	1-126-956-11	ELECT	0.1uF	20%	50V
C161	1-130-474-11	FILM	0.0018uF	5%	50V

C162	1-162-286-31	CERAMIC	220PF	10%	50V
C163	1-162-293-31	CERAMIC	820PF	10%	50V
C251	1-126-961-11	ELECT	2.2uF	20%	50V
C252	1-126-960-11	ELECT	1uF	20%	50V
C253	1-126-963-11	ELECT	4.7uF	20%	50V

C254	1-162-294-31	CERAMIC	0.001uF	10%	50V
C255	1-161-052-00	CERAMIC	0.012uF	10%	25V
C256	1-162-303-11	CERAMIC	0.0033uF	20%	16V
C257	1-110-671-31	CERAMIC	0.047uF		50V
C258	1-162-306-11	CERAMIC	0.01uF	20%	16V

C259	1-126-956-11	ELECT	0.1uF	20%	50V
C261	1-130-474-11	FILM	0.0018uF	5%	50V
C262	1-162-286-31	CERAMIC	220PF	10%	50V
C263	1-162-293-31	CERAMIC	820PF	10%	50V
C351	1-126-925-11	ELECT	470uF	20%	10V

C352	1-126-964-51	ELECT	10uF	20%	50V
------	--------------	-------	------	-----	-----

< CONNECTOR >

CN002	1-779-617-11	CONNECTOR (WIRE HOLDER) 10P
CN003	1-782-400-11	SOCKET, CONNECTOR 15P

< DIODE >

D851	8-719-911-19	DIODE 1SS119
D853	8-719-911-19	DIODE 1SS119
D854	8-719-911-19	DIODE 1SS119
D855	8-719-911-19	DIODE 1SS119
D856	8-719-911-19	DIODE 1SS119

D857	8-719-911-19	DIODE 1SS119
------	--------------	--------------

FRONT

LAMP

LEAF SW

MAIN

Ref. No.	Part No.	Description	Remark
D858	8-719-911-19	DIODE 1SS119	
		< IC >	
IC351	8-759-970-44	IC BA3824LS	
		< DIODE >	
LD351	1-801-805-11	LED (3Q) (GREEN) (TAPE)	
LD352	1-801-805-11	LED (3Q) (GREEN) (CD)	
LD353	1-801-805-11	LED (3Q) (GREEN) (RADIO)	
LD354	1-801-804-11	LED (3Q) (RED) (OPR/BATT)	
		< TRANSISTOR >	
Q351	8-729-900-74	TRANSISTOR DTC143TS	
		< RESISTOR >	
R151	1-249-424-11	CARBON 3.9K 5% 1/4W	
R152	1-249-417-11	CARBON 1K 5% 1/4W	
R251	1-249-424-11	CARBON 3.9K 5% 1/4W	
R252	1-249-417-11	CARBON 1K 5% 1/4W	
R351	1-247-825-11	CARBON 560 5% 1/4W	
R352	1-249-417-11	CARBON 1K 5% 1/4W	
R353	1-249-411-11	CARBON 330 5% 1/4W	
R354	1-249-411-11	CARBON 330 5% 1/4W	
R355	1-249-409-11	CARBON 220 5% 1/4W	
R356	1-249-411-11	CARBON 330 5% 1/4W	
R357	1-249-411-11	CARBON 330 5% 1/4W	
R358	1-247-839-11	CARBON 2.2K 5% 1/4W	
R359	1-249-417-11	CARBON 1K 5% 1/4W	
		< SWITCH >	
S851	1-762-798-11	SWITCH, KEYBOARD (POWER)	
S852	1-762-798-11	SWITCH, KEYBOARD (SLEEP)	
S853	1-762-798-11	SWITCH, KEYBOARD (CD)	
S854	1-762-798-11	SWITCH, KEYBOARD (CLOCK)	
S855	1-762-798-11	SWITCH, KEYBOARD (TAPE)	
S856	1-762-798-11	SWITCH, KEYBOARD (TIMER)	
S857	1-762-798-11	SWITCH, KEYBOARD (RADIO)	
S858	1-762-798-11	SWITCH, KEYBOARD (STANDBY)	
S859	1-762-798-11	SWITCH, KEYBOARD (MEGA BASS)	
S860	1-762-798-11	SWITCH, KEYBOARD (SURROUND)	
S862	1-762-798-11	SWITCH, KEYBOARD (VOLUME, +)	
S863	1-762-798-11	SWITCH, KEYBOARD (VOLUME, -)	
S865	1-762-798-11	SWITCH, KEYBOARD (▷ ◁)	
S866	1-762-798-11	SWITCH, KEYBOARD (PLAY MODE)	
S868	1-762-798-11	SWITCH, KEYBOARD (□)	
S869	1-762-798-11	SWITCH, KEYBOARD (DISPLAY/ENTER)	
S871	1-762-798-11	SWITCH, KEYBOARD (▶, TIME SET +)	
S872	1-762-798-11	SWITCH, KEYBOARD (◀, TIME SET -)	
		< VARIABLE RESISTOR >	
VR352	1-225-471-11	VOLUME, SLIDE 50K (EQUALIZER, 400Hz)	
VR353	1-225-471-11	VOLUME, SLIDE 50K (EQUALIZER, 1kHz)	

Ref. No.	Part No.	Description	Remark
VR354	1-225-471-11	VOLUME, SLIDE 50K (EQUALIZER, 4kHz)	
VR355	1-225-471-11	VOLUME, SLIDE 50K (EQUALIZER, 10kHz)	

*	1-666-272-11	LAMP BOARD	

	3-014-417-01	COVER, LED	
	3-014-418-01	CAP (BLUE), LAMP	
		< CONNECTOR >	
CN706	1-779-606-11	CONNECTOR (WIRE HOLDER) 2P	
		< PILOT LAMP >	
LP701	1-517-685-11	LAMP, PILOT (LCD BACK LIGHT)	
LP702	1-517-685-11	LAMP, PILOT (LCD BACK LIGHT)	

*	1-667-921-11	LEAF SW BOARD	

	1-782-582-11	WIRE, PARALLEL 9P (260MM)	
	7-612-017-56	WIRE, PARALLEL 6P (200)	
	7-612-017-57	WIRE, PARALLEL 4P (160)	
		< CAPACITOR >	
C602	1-161-494-00	CERAMIC 0.022uF 25V	
C603	1-126-925-11	ELECT 470uF 20% 10V	
		< CONNECTOR >	
CN601	1-779-909-11	CONNECTOR (WIRE HOLDER) 9P	
CN602	1-779-605-11	CONNECTOR (WIRE HOLDER) 6P	
CN603	1-779-605-11	CONNECTOR (WIRE HOLDER) 6P	
CN604	1-779-604-11	CONNECTOR (WIRE HOLDER) 4P	
		< DIODE >	
D601	8-719-031-85	DIODE 1N4002L	
D602	8-719-031-85	DIODE 1N4002L	
		< TRANSISTOR >	
Q601	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q602	8-729-119-78	TRANSISTOR 2SC403SP-51	
		< RESISTOR >	
R601	1-249-417-11	CARBON 1K 5% 1/4W	
R602	1-247-855-11	CARBON 10K 5% 1/4W	
R603	1-249-417-11	CARBON 1K 5% 1/4W	

*	A-3293-691-A	MAIN BOARD, COMPLETE (ZW200L)	
*	A-3293-737-A	MAIN BOARD, COMPLETE (ZW220L)	

	1-779-693-11	LEAD, CONNECTOR (160MM) 5P	
	1-782-583-11	WIRE, PARALLEL (BLK 120MM) 5P	
	7-612-017-62	WIRE, PARALLEL 4P (80MM) BLK	

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
< CAPACITOR >													
C5	1-162-306-11	CERAMIC	0.01uF	20%	16V		C120	1-126-960-11	ELECT	1uF	20%	50V	
C7	1-162-203-31	CERAMIC	15PF	5%	50V (ZW200L)		C121	1-126-959-11	ELECT	0.47uF	20%	50V	
C7	1-162-193-31	CERAMIC	3.3PF	10%	50V (ZW220L)		C122	1-162-282-31	CERAMIC	100PF	10%	50V	
C8	1-162-208-31	CERAMIC	24PF	10%	50V (ZW200L)		C124	1-126-960-11	ELECT	1uF	20%	50V	
C8	1-102-945-00	CERAMIC	8PF	0.5PF	50V (ZW220L)		C125	1-126-967-11	ELECT	47uF	20%	16V	
C10	1-162-195-31	CERAMIC	4.7PF	10%	50V		C126	1-161-494-00	CERAMIC	0.022uF		25V	
C11	1-162-306-11	CERAMIC	0.01uF	20%	16V		C127	1-161-494-00	CERAMIC	0.022uF		25V	
C14	1-162-282-31	CERAMIC	100PF	10%	50V		C128	1-161-494-00	CERAMIC	0.022uF		25V	
C15	1-126-963-11	ELECT	4.7uF	20%	50V		C129	1-161-020-11	CERAMIC	0.039uF	10%	25V	
C16	1-126-960-11	ELECT	1uF	20%	50V		C130	1-117-804-11	CERAMIC	0.1uF		50V	
C17	1-126-967-11	ELECT	47uF	20%	16V		C131	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C18	1-126-967-11	ELECT	47uF	20%	16V		C132A	1-162-282-31	CERAMIC	100PF	10%	50V	
C19	1-162-306-11	CERAMIC	0.01uF	20%	16V		C134	1-162-301-11	CERAMIC	0.0015uF	30%	16V	
C20	1-126-960-11	ELECT	1uF	20%	50V		C137	1-161-494-00	CERAMIC	0.022uF		25V	
C21	1-126-961-11	ELECT	2.2uF	20%	50V		C139	1-161-494-00	CERAMIC	0.022uF		25V	
C22	1-126-933-11	ELECT	100uF	20%	10V		C140	1-126-933-11	ELECT	100uF	20%	16V	
C23	1-126-959-11	ELECT	0.47uF	20%	50V		C141	1-126-964-51	ELECT	10uF	20%	50V	
C24	1-126-963-11	ELECT	4.7uF	20%	50V		C142	1-126-961-11	ELECT	2.2uF	20%	50V	
C25	1-126-956-11	ELECT	0.1uF	20%	50V		C151	1-162-282-31	CERAMIC	100PF	10%	50V	
C26	1-161-494-00	CERAMIC	0.022uF		25V		C152	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C27	1-161-053-00	CERAMIC	0.015uF	10%	50V		C201	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C28	1-161-053-00	CERAMIC	0.015uF	10%	50V		C202	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C29	1-126-959-11	ELECT	0.47uF	20%	50V		C203	1-162-282-31	CERAMIC	100PF	10%	50V	
C30	1-126-959-11	ELECT	0.47uF	20%	50V		C204	1-162-282-31	CERAMIC	100PF	10%	50V	
C38	1-162-285-31	CERAMIC	180PF	10%	50V		C205	1-126-967-11	ELECT	47uF	20%	16V	
C39	1-162-203-31	CERAMIC	15PF	5%	50V		C206	1-161-052-00	CERAMIC	0.012uF	10%	25V	
C41	1-117-862-11	FILM	330PF		100V		C207	1-126-960-11	ELECT	1uF	20%	50V	
C42	1-117-861-11	FILM	270PF		100V		C208	1-126-962-11	ELECT	3.3uF	20%	50V	
C46	1-162-282-31	CERAMIC	100PF	10%	50V		C209	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C47	1-162-282-31	CERAMIC	100PF	10%	50V		C210	1-162-290-31	CERAMIC	470PF	10%	50V	
C48	1-126-967-11	ELECT	47uF	20%	16V		C211	1-162-286-31	CERAMIC	220PF	10%	50V	
C49	1-161-494-00	CERAMIC	0.022uF		25V		C212	1-126-967-11	ELECT	47uF	20%	16V	
C49A	1-117-804-11	CERAMIC	0.1uF		50V		C213	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C50	1-162-282-31	CERAMIC	100PF	10%	50V		C214	1-126-962-11	ELECT	3.3uF	20%	50V	
C62	1-162-294-31	CERAMIC	0.001uF	10%	50V		C215	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C101	1-162-294-31	CERAMIC	0.001uF	10%	50V		C216	1-126-959-11	ELECT	0.47uF	20%	50V	
C102	1-162-294-31	CERAMIC	0.001uF	10%	50V		C220	1-126-960-11	ELECT	1uF	20%	50V	
C103	1-162-282-31	CERAMIC	100PF	10%	50V		C221	1-126-959-11	ELECT	0.47uF	20%	50V	
C104	1-162-282-31	CERAMIC	100PF	10%	50V		C222	1-162-282-31	CERAMIC	100PF	10%	50V	
C105	1-126-967-11	ELECT	47uF	20%	16V		C224	1-126-960-11	ELECT	1uF	20%	50V	
C106	1-161-052-00	CERAMIC	0.012uF	10%	25V		C225	1-126-967-11	ELECT	47uF	20%	16V	
C107	1-126-960-11	ELECT	1uF	20%	50V		C226	1-161-494-00	CERAMIC	0.022uF		25V	
C108	1-126-962-11	ELECT	3.3uF	20%	50V		C227	1-161-494-00	CERAMIC	0.022uF		25V	
C109	1-162-294-31	CERAMIC	0.001uF	10%	50V		C228	1-161-494-00	CERAMIC	0.022uF		25V	
C110	1-162-290-31	CERAMIC	470PF	10%	50V		C229	1-161-020-11	CERAMIC	0.039uF	10%	25V	
C111	1-162-286-31	CERAMIC	220PF	10%	50V		C230	1-117-804-11	CERAMIC	0.1uF		50V	
C112	1-126-967-11	ELECT	47uF	20%	16V		C231	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C113	1-162-294-31	CERAMIC	0.001uF	10%	50V		C232A	1-162-282-31	CERAMIC	100PF	10%	50V	
C114	1-126-962-11	ELECT	3.3uF	20%	50V		C234	1-162-301-11	CERAMIC	0.0015uF	30%	16	
C115	1-162-294-31	CERAMIC	0.001uF	10%	50V		C237	1-161-494-00	CERAMIC	0.022uF		25V	
C116	1-126-959-11	ELECT	0.47uF	20%	50V		C239	1-161-494-00	CERAMIC	0.022uF		25V	
							C240	1-126-933-11	ELECT	100uF	20%	10V	
							C241	1-126-964-51	ELECT	10uF	20%	50V	

MAIN

Ref. No.	Part No.	Description	Remark
C242	1-126-961-11	ELECT	2. 2uF 20% 50V
C251	1-162-282-31	CERAMIC	100PF 10% 50V
C252	1-162-294-31	CERAMIC	0. 001uF 10% 50V
C300	1-162-282-31	CERAMIC	100PF 10% 50V (ZW220L)
C301	1-126-933-11	ELECT	100uF 20% 16V
C302	1-126-926-11	ELECT	1000uF 20% 10V
C303	1-126-962-11	ELECT	3. 3uF 20% 50V
C304	1-126-967-11	ELECT	47uF 20% 16V
C305	1-126-964-51	ELECT	10uF 20% 50V
C305A	1-161-494-11	CERAMIC	0. 022uF 25V
C306	1-126-233-11	ELECT	22uF 20% 50V
C307	1-126-961-11	ELECT	2. 2uF 20% 50V
C308	1-136-155-00	FILM	0. 015uF 5% 50V
C309	1-136-155-00	FILM	0. 015uF 5% 50V
C310	1-126-967-11	ELECT	47uF 20% 16V
C311	1-137-350-00	MYLAR	0. 015uF 5% 100V
C312	1-130-589-11	MYLAR	0. 0022uF 5% 100V
C316	1-126-934-11	ELECT	220uF 20% 16V
C321	1-126-967-11	ELECT	47uF 20% 16V
C322	1-126-933-11	ELECT	100uF 20% 10V
C325	1-126-960-11	ELECT	1uF 20% 50V
C327	1-126-925-11	ELECT	470uF 20% 10V
C329	1-117-804-11	CERAMIC	0. 1uF 50V
C330	1-126-962-11	ELECT	3. 3uF 20% 50V
C332	1-162-292-31	ELECT	6800uF 10% 50V
C332A	1-110-671-31	CERAMIC	0. 047uF 20% 50V
C333	1-126-933-11	ELECT	100uF 20% 10V
C334	1-126-966-11	ELECT	33uF 20% 50V
C335	1-126-044-11	ELECT	1uF 20% 50V
C351	1-126-043-11	ELECT	0. 47uF 20% 50V
C352	1-126-967-11	ELECT	47uF 20% 16V
C352A	1-124-682-51	ELECT	22uF 20% 16V
C353	1-126-959-00	ELECT	0. 47uF 20% 50V
C356	1-161-494-00	CERAMIC	0. 022uF 25V
C357	1-161-494-00	CERAMIC	0. 022uF 25V
C359	1-126-964-51	ELECT	10uF 20% 50V
C360	1-162-294-31	CERAMIC	0. 001uF 10% 50V
C366	1-162-199-31	CERAMIC	10PF 5% 50V
C371	1-126-956-11	CERAMIC	0. 1uF 20% 50V
C372	1-164-086-11	CERAMIC	0. 0012uF 10% 50V
C373	1-164-085-11	CERAMIC	0. 001uF 10% 50V
C374	1-161-494-00	CERAMIC	0. 022uF 25V
C375	1-161-494-00	CERAMIC	0. 022uF 25V

< FILTER >

CF1	1-578-791-11	FILTER, CERAMIC
CF2	1-527-870-21	FILTER, CERAMIC (SFU455)
CF3	1-567-163-11	FILTER, CERAMIC
CF4	1-578-791-11	FILTER, CERAMIC

< CONNECTOR/WIRE >

CN02	7-612-017-61	WIRE, PARALLEL 10P (TOP BASE)
------	--------------	-------------------------------

Ref. No.	Part No.	Description	Remark
CN07	1-782-398-11	SOCKET, CONNECTOR 21P	
CN301	1-779-616-11	CONNECTOR (TOP BASE) 3P	
CN302	1-779-615-11	CONNECTOR (TOP BASE) 5P	
CN303	1-779-777-11	CONNECTOR (TOP BASE) 2P	
CN304	1-779-613-11	CONNECTOR (WIRE HOLDER) 5P	
CN305	1-779-614-11	CONNECTOR (WIRE HOLDER) 4P	
CN601	1-782-584-11	WIRE, PARALLEL 9P (TOP BASE)	
CN901	1-779-693-11	CONNECTOR (WIRE HOLDER) 5P	

< VARIABLE CAPACITOR >

CT1-4	1-141-579-11	CAP, ADJ VAR (TUNING)
CT5	1-117-860-11	CAP, ADJ VAR 50PF
CT10	1-117-860-11	CAP, ADJ VAR 50PF

< DIODE >

D3	8-719-987-63	DIODE 1N4148M
D5	8-719-987-63	DIODE 1N4148M
D6	8-719-987-63	DIODE 1N4148M
D302	8-719-987-63	DIODE 1N4148M
D303	8-719-987-63	DIODE 1N4148M
D304	8-719-987-63	DIODE 1N4148M
D305	8-719-987-63	DIODE 1N4148M
D307	8-719-987-63	DIODE 1N4148M
D308	8-719-987-63	DIODE 1N4148M
D309	8-719-987-63	DIODE 1N4148M
D310	8-719-987-63	DIODE 1N4148M
D313	8-719-987-63	DIODE 1N4148M
D314	8-719-987-63	DIODE 1N4148M
D316	8-719-987-63	DIODE 1N4148M
D317	8-719-911-19	DIODE 1SS119
D318	8-719-987-63	DIODE 1N4148M
D352	8-719-947-69	DIODE MTZJ-T-72-18B
D353	8-719-987-63	DIODE 1N4148M
D354	8-719-987-63	DIODE 1N4148M
D355	8-719-987-63	DIODE 1N4148M
D357	8-719-983-66	DIODE MTZJ-T-72-3. 6B
D358	8-719-987-63	DIODE 1N4148M
D361	8-719-987-63	DIODE 1N4148M
D362	8-719-987-63	DIODE 1N4148M

< BAND PASS FILTER >

FL1	1-233-918-11	FILTER, BAND PASS
-----	--------------	-------------------

< IC >

IC1	8-752-050-20	IC CXA1238S
IC301	8-759-242-58	IC TA8189N
IC302	8-759-515-65	IC S81252HG
IC303	8-759-634-51	IC M5218AP
IC304	8-759-473-59	IC LC75392
IC305	8-759-333-16	IC LA4705NA

Ref. No.	Part No.	Description	Remark
< JACK >			
JK301	1-779-611-11	JACK, HEADPHONE (PHONES)	
< ANTENNA/COIL >			
L1	1-416-273-11	COIL, FM RF	
L2	1-416-365-11	COIL, FM OSCILLATION	
L3	1-501-937-11	ANTENNA, LW/MW FERRITE-ROD	
L4	1-416-312-11	COIL, MW OSCILLATION	
L8	1-416-313-11	COIL, LW OSCILLATION	
L9	1-414-848-11	INDUCTOR 33uH	
L111	1-414-174-11	INDUCTOR 0.33uH	
L211	1-414-174-11	INDUCTOR 0.33uH	
L301	1-416-352-11	COIL, BIAS OSCILLATION	
L310	1-414-174-11	INDUCTOR 0.33uH	
< TRANSISTOR >			
Q1	8-729-904-36	TRANSISTOR DTC114YS	
Q4	8-729-422-57	TRANSISTOR UN4111	
Q101	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q102	8-729-142-46	TRANSISTOR 2SC2001-LK	
Q103	8-729-142-46	TRANSISTOR 2SC2001-LK	
Q104	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q105	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q111	8-729-178-55	TRANSISTOR 2SC2785-E	
Q112	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q201	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q202	8-729-142-46	TRANSISTOR 2SC2001-LK	
Q203	8-729-142-46	TRANSISTOR 2SC2001-LK	
Q204	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q205	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q211	8-729-178-55	TRANSISTOR 2SC2785-E	
Q212	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q302	8-729-900-89	TRANSISTOR DTC144ES	
Q303	8-729-900-74	TRANSISTOR DTC143TS	
Q304	8-729-900-65	TRANSISTOR DTA144ES	
Q305	8-729-921-65	TRANSISTOR DTC143ES	
Q306	8-729-142-46	TRANSISTOR 2SC2001-LK	
Q307	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q308	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q309	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q310	8-729-904-34	TRANSISTOR DTA114TS	
Q312	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q313	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q314	8-729-422-57	TRANSISTOR UN4111	
Q315	8-729-900-80	TRANSISTOR DTC114ES	
Q317	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q319	8-729-422-57	TRANSISTOR UN4111	
Q320	8-729-900-80	TRANSISTOR DTC114ES	
Q321	8-729-900-80	TRANSISTOR DTC114ES	
Q322	8-729-422-57	TRANSISTOR UN4111	
Q331	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q332	8-729-119-78	TRANSISTOR 2SC403SP-51	

Ref. No.	Part No.	Description	Remark
Q351	8-729-119-78	TRANSISTOR 2SC403SP-51	
< RESISTOR >			
R3	1-247-839-11	CARBON 2.2K 5% 1/4W	
R5	1-249-424-11	CARBON 3.9K 5% 1/4W (ZW220L)	
R6	1-247-879-11	CARBON 100K 5% 1/4W	
R9	1-247-879-11	CARBON 100K 5% 1/4W	
R10	1-249-404-00	CARBON 82 5% 1/4W	
R11	1-249-427-11	CARBON 6.8K 5% 1/4W	
R12	1-247-839-11	CARBON 2.2K 5% 1/4W	
R13	1-247-807-11	CARBON 100 5% 1/4W	
R14	1-247-855-11	CARBON 10K 5% 1/4W	
R15	1-247-887-00	CARBON 220K 5% 1/4W	
R16	1-247-887-00	CARBON 220K 5% 1/4W	
R17	1-249-427-11	CARBON 6.8K 5% 1/4W	
R22	1-249-411-11	CARBON 330 5% 1/4W (ZW200L)	
R22	1-249-413-11	CARBON 470 5% 1/4W (ZW220L)	
R23	1-260-117-11	CARBON 33K 5% 1/2W	
R25	1-247-835-11	CARBON 1.5K 5% 1/4W	
R25A	1-249-417-11	CARBON 1K 5% 1/4W	
R28	1-249-399-11	CARBON 33 5% 1/4W	
R33	1-249-420-11	CARBON 1.8K 5% 1/4W	
R34	1-249-420-11	CARBON 1.8K 5% 1/4W	
R35	1-247-855-11	CARBON 10K 5% 1/4W	
R36	1-247-855-11	CARBON 10K 5% 1/4W	
R101	1-249-417-11	CARBON 1K 5% 1/4W	
R102	1-249-417-11	CARBON 1K 5% 1/4W	
R103	1-247-889-00	CARBON 270K 5% 1/4W	
R104	1-249-430-11	CARBON 12K 5% 1/4W	
R105	1-249-408-11	CARBON 180 5% 1/4W	
R105A	1-249-416-11	CARBON 820 5% 1/4W	
R106	1-249-428-11	CARBON 8.2K 5% 1/4W	
R107	1-247-891-00	CARBON 330K 5% 1/4W	
R108	1-247-847-11	CARBON 4.7K 5% 1/4W	
R109	1-247-879-11	CARBON 100K 5% 1/4W	
R110	1-247-855-11	CARBON 10K 5% 1/4W	
R111	1-249-432-11	CARBON 18K 5% 1/4W	
R112	1-247-885-00	CARBON 180K 5% 1/4W	
R113	1-247-891-00	CARBON 330K 5% 1/4W	
R114	1-249-408-11	CARBON 180 5% 1/4W	
R115	1-247-839-11	CARBON 2.2K 5% 1/4W	
R116	1-247-881-00	CARBON 120K 5% 1/4W	
R117	1-247-855-11	CARBON 10K 5% 1/4W	
R121	1-247-847-11	CARBON 4.7K 5% 1/4W	
R122	1-247-855-11	CARBON 10K 5% 1/4W	
R123	1-247-855-11	CARBON 10K 5% 1/4W	
R124	1-249-427-11	CARBON 6.8K 5% 1/4W	
R125	1-247-847-11	CARBON 4.7K 5% 1/4W	
R125A	1-249-417-11	CARBON 1K 5% 1/4W	
R126	1-247-871-11	CARBON 47K 5% 1/4W	
R127	1-247-871-11	CARBON 47K 5% 1/4W	
R128	1-247-871-11	CARBON 47K 5% 1/4W	
R129	1-247-871-11	CARBON 47K 5% 1/4W	

MAIN

Ref. No.	Part No.	Description	Remark		
R130	1-247-879-11	CARBON	100K	5%	1/4W
R131	1-249-417-11	CARBON	1K	5%	1/4W
R132	1-247-847-11	CARBON	4.7K	5%	1/4W
R133	1-247-855-11	CARBON	10K	5%	1/4W
R137	1-247-839-11	CARBON	2.2	5%	1/4W
R139	1-247-839-11	CARBON	2.2	5%	1/4W
R140	1-249-417-11	CARBON	1K	5%	1/4W
R141	1-260-093-11	CARBON	330	5%	1/2W
R142	1-247-847-11	CARBON	4.7K	5%	1/4W
R151	1-247-855-11	CARBON	10K	5%	1/4W
R153	1-247-879-11	CARBON	100K	5%	1/4W
R201	1-249-417-11	CARBON	1K	5%	1/4W
R202	1-249-417-11	CARBON	1K	5%	1/4W
R203	1-247-889-00	CARBON	270K	5%	1/4W
R204	1-249-430-11	CARBON	12K	5%	1/4W
R205	1-249-408-11	CARBON	180	5%	1/4W
R205A	1-249-416-11	CARBON	820	5%	1/4W
R206	1-249-428-11	CARBON	8.2K	5%	1/4W
R207	1-247-891-00	CARBON	330K	5%	1/4W
R208	1-247-847-11	CARBON	4.7K	5%	1/4W
R209	1-247-879-11	CARBON	100K	5%	1/4W
R210	1-247-855-11	CARBON	10K	5%	1/4W
R211	1-249-432-11	CARBON	18K	5%	1/4W
R212	1-247-885-00	CARBON	180K	5%	1/4W
R213	1-247-891-00	CARBON	330K	5%	1/4W
R214	1-249-408-11	CARBON	180	5%	1/4W
R215	1-247-839-11	CARBON	2.2K	5%	1/4W
R216	1-247-881-00	CARBON	120K	5%	1/4W
R217	1-247-855-11	CARBON	10K	5%	1/4W
R221	1-247-847-11	CARBON	4.7K	5%	1/4W
R222	1-247-855-11	CARBON	10K	5%	1/4W
R223	1-247-855-11	CARBON	10K	5%	1/4W
R224	1-249-427-11	CARBON	6.8K	5%	1/4W
R225	1-247-847-11	CARBON	4.7K	5%	1/4W
R225A	1-249-417-11	CARBON	1K	5%	1/4W
R226	1-247-871-11	CARBON	47K	5%	1/4W
R227	1-247-871-11	CARBON	47K	5%	1/4W
R228	1-247-871-11	CARBON	47K	5%	1/4W
R229	1-247-871-11	CARBON	47K	5%	1/4W
R230	1-247-879-11	CARBON	100K	5%	1/4W
R231	1-249-417-11	CARBON	1K	5%	1/4W
R232	1-247-847-11	CARBON	4.7K	5%	1/4W
R233	1-247-855-11	CARBON	10K	5%	1/4W
R237	1-247-839-11	CARBON	2.2	5%	1/4W
R239	1-247-839-11	CARBON	2.2	5%	1/4W
R240	1-249-417-11	CARBON	1K	5%	1/4W
R241	1-260-093-11	CARBON	330	5%	1/2W
R242	1-247-847-11	CARBON	4.7K	5%	1/4W
R251	1-247-855-11	CARBON	10K	5%	1/4W
R253	1-247-879-11	CARBON	100K	5%	1/4W
R301	1-247-855-11	CARBON	10K	5%	1/4W
R301A	1-249-417-11	CARBON	1K	5%	1/4W
R302	1-247-855-11	CARBON	10K	5%	1/4W

Ref. No.	Part No.	Description	Remark		
R302A	1-249-417-11	CARBON	1K	5%	1/4W
R303	1-249-434-11	CARBON	27K	5%	1/4W
R303A	1-247-847-11	CARBON	4.7K	5%	1/4W
R304	1-249-438-11	CARBON	56K	5%	1/4W
R305	1-247-843-11	CARBON	3.3K	5%	1/4W
R308	1-260-089-11	CARBON	150	5%	1/2W
R309	1-249-434-11	CARBON	27K	5%	1/4W
R310	1-249-399-11	CARBON	33	5%	1/4W
R312	1-247-807-11	CARBON	100	5%	1/4W
R313	1-247-863-11	CARBON	22K	5%	1/4W
R314	1-249-431-11	CARBON	15K	5%	1/4W
R317	1-247-903-00	CARBON	1M	5%	1/4W
R318	1-247-855-11	CARBON	10K	5%	1/4W
R319	1-247-879-11	CARBON	100K	5%	1/4W
R320	1-247-843-11	CARBON	3.3K	5%	1/4W
R321	1-249-417-11	CARBON	1K	5%	1/4W
R322	1-247-855-11	CARBON	10K	5%	1/4W
R323	1-247-855-11	CARBON	10K	5%	1/4W
R324	1-247-863-11	CARBON	22K	5%	1/4W
R325	1-247-855-11	CARBON	10K	5%	1/4W
R326	1-247-855-11	CARBON	10K	5%	1/4W
R327	1-247-855-11	CARBON	10K	5%	1/4W
R328	1-247-855-11	CARBON	10K	5%	1/4W
R329	1-247-841-11	CARBON	2.7K	5%	1/4W
R329A	1-247-841-11	CARBON	2.7K	5%	1/4W
R330	1-247-847-11	CARBON	4.7K	5%	1/4W
R330A	1-247-847-11	CARBON	4.7K	5%	1/4W
R331	1-249-409-11	CARBON	220	5%	1/4W
R331A	1-247-855-11	CARBON	10K	5%	1/4W
R333	1-247-807-11	CARBON	100	5%	1/4W
R335	1-249-417-11	CARBON	1K	5%	1/4W
R336	1-247-903-00	CARBON	1M	5%	1/4W
R338	1-249-411-11	CARBON	330	5%	1/4W
R340	1-247-855-11	CARBON	10K	5%	1/4W
R341	1-260-089-11	CARBON	150	5%	1/2W
R342	1-247-855-11	CARBON	10K	5%	1/4W
R351	1-247-855-11	CARBON	10K	5%	1/4W
R352	1-249-843-11	CARBON	3.3K	5%	1/4W
R353	1-247-855-11	CARBON	10K	5%	1/4W
R354	1-247-863-11	CARBON	22K	5%	1/4W
R355	1-247-903-00	CARBON	1M	5%	1/4W
R356	1-247-903-00	CARBON	1M	5%	1/4W
R357	1-247-903-00	CARBON	1M	5%	1/4W
R358	1-260-088-11	CARBON	120	5%	1/2W
R358A	1-247-863-11	CARBON	22K	5%	1/4W
R359	1-249-417-11	CARBON	1K	5%	1/4W
R359A	1-247-847-11	CARBON	4.7K	5%	1/4W
R362	1-247-855-11	CARBON	10K	5%	1/4W
R363	1-247-855-11	CARBON	10K	5%	1/4W
R364	1-247-855-11	CARBON	10K	5%	1/4W
R371	1-247-855-11	CARBON	10K	5%	1/4W
R372	1-247-807-11	CARBON	100	5%	1/4W

MAIN

MOTOR

POSISTOR

POWER

SENSOR

SP TERMINAL

TRANSISTOR

Ref. No.	Part No.	Description	Remark
R373	1-247-871-11	CARBON 47K 5% 1/4W	
R374	1-247-847-11	CARBON 4.7K 5% 1/4W	
R375	1-249-417-11	CARBON 1K 5% 1/4W	
		< VARIABLE RESISTOR >	
RV1	1-225-473-11	RES, ADJ 20K	
		< SWITCH >	
S1	1-771-153-11	SWITCH, LEVER (BAND)	
		< VARIABLE RESISTOR >	
SFR301	1-225-517-11	RES, ADJ 0.47K	
		< SWITCH >	
SW301	1-571-588-11	SWITCH, SLIDE (STEREO MODE/ISS)	
SW302	1-771-175-11	SWITCH, PUSH (HI-SPEED DUBBING)	
		< TRANSFORMER >	
T1	1-416-272-11	COIL, AM IFT (W702)	
		< VARIABLE CAPACITOR >	
VC1-4	1-141-579-11	CAP, ADJ VAR (TUNING)	

*	1-658-023-12	MOTOR BOARD	

		< CONNECTOR >	
CN703	1-564-722-11	CONNECTOR 6P	
		< SWITCH >	
S05	1-572-085-12	SWITCH, LEAF (LIMIT)	

*	1-669-077-11	POSISTOR BOARD	

	7-685-752-01	SCREW +PTT 3X8	
		< CONNECTOR >	
CN313	1-784-655-11	CONNECTOR (WIRE HOLDER) 2P	
		< THERMISTOR >	
TH380	1-803-071-11	THERMISTOR	

*	1-666-278-11	POWER BOARD	

	1-533-217-31	HOLDER, FUSE	

Ref. No.	Part No.	Description	Remark
		< CAPACITOR >	
C901	1-117-804-11	CERAMIC 0.1uF	50V
C902	1-117-804-11	CERAMIC 0.1uF	50V
C903	1-117-804-11	CERAMIC 0.1uF	50V
C904	1-117-804-11	CERAMIC 0.1uF	50V
C906	1-117-804-11	CERAMIC 0.1uF	50V
		< CONNECTOR >	
CN901	1-779-694-11	CONNECTOR (BASE) 5P	
CN902	1-779-619-11	CONNECTOR (BASE) 3P	
		< DIODE >	
D901	8-719-058-88	DIODE 1N4002	
D902	8-719-058-88	DIODE 1N4002	
D903	8-719-058-88	DIODE 1N4002	
D904	8-719-058-88	DIODE 1N4002	
D905	8-719-987-63	DIODE 1N4148M	
		< FUSE >	
△F901	1-533-871-11	FUSE (6.3A/250V)	
		< AC INLET >	
△JK901	1-251-618-11	INLET, AC (AC IN)	
		< TRANSFORMER >	
△T901	1-431-543-11	TRANSFORMER, POWER (IEC-65)	

*	1-666-276-11	SENSOR BOARD	

		< CONNECTOR >	
CN004	1-779-681-11	PIN HEADER, SIDE 40P	
		< REMOTE RECEIVER >	
SEN851	1-759-412-11	RECEIVER, REMOTE (SPS-447)	

*	1-666-161-11	SP TERMINAL BOARD	

		< CONNECTOR >	
CN305	1-779-614-11	CONNECTOR (WIRE HOLDER) 4P	
		< TERMINAL >	
JK302	1-694-307-11	TERMINAL, SP 4P (SPEAKER)	

*	1-666-274-11	TRANSISTOR BOARD	

	7-685-647-79	SCREW +BTP 3X10 TYPE2 N-S	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

TRANSISTOR

Ref. No.	Part No.	Description	Remark
< CAPACITOR >			
C314	1-126-925-11	ELECT 470uF	20% 10V
C323	1-126-925-11	ELECT 470uF	20% 10V
C326	1-117-804-11	CERAMIC 0.1uF	50V

< CONNECTOR >

CN304 1-779-613-11 CONNECTOR (WIRE HOLDER) 5P

< DIODE >

D306 8-719-110-17 DIODE RD10ESB2
D315 8-719-110-17 DIODE RD10ESB2

< FUSIBLE >

△FR301 1-219-149-11 FUSIBLE 1 5% 1/4W F

< TRANSISTOR >

Q311 8-729-822-89 TRANSISTOR 2SD1667-R
Q318 8-729-822-89 TRANSISTOR 2SD1667-R

< RESISTOR >

R311 1-247-827-11 CARBON 680 5% 1/4W
R339 1-247-827-11 CARBON 680 5% 1/4W
R360 1-247-807-11 CARBON 100 5% 1/4W
R361 1-247-807-11 CARBON 100 5% 1/4W

MISCELLANEOUS

102 1-782-391-11 LEAD, CONNECTOR (300mm) 5P
104 1-782-390-11 LEAD, CONNECTOR (300mm) 3P
110 1-782-393-11 CABLE, FLEXIBLE FLAT (120mm) 15P
112 1-782-394-11 CABLE, FLEXIBLE FLAT (160mm) 21P
116 1-452-732-11 MAGNET

124 1-782-392-11 CABLE, FLEXIBLE FLAT (80mm) 16P
125 1-779-607-11 LEAD, CONNECTOR (160mm) 6P
126 1-779-608-11 LEAD, CONNECTOR (100mm) 2P
128 1-782-580-11 LEAD, CONNECTOR (300mm) 2P
△151 8-848-379-31 OPTICAL PICK-UP KSS-213B/F-NP

ANT901 1-501-927-11 ANTENNA, TELESCOPIC (FM)
HE901 1-500-492-11 HEAD, E (ERASE) (DECK B)
HP901 1-500-187-11 HEAD (PLAYBACK) (DECK A)
HRP901 1-500-138-11 HEAD, R/P (REC/PB) (DECK B)
M380 1-763-080-11 MOTOR (FAN)

M601 X-3369-757-1 MOTOR ASSY (REEL/CAPSTAN)
M701 X-2625-769-1 GEAR ASSY (MB), MOTOR (SLED)
M702 X-2625-770-1 CHASSIS ASSY (MB) (RP), MOTOR (SPINDLE)
S301 1-762-024-11 SWITCH, LEAF (REC) (DECK B)
S302 1-762-022-11 SWITCH, LEAF (MOTOR ON) (DECK B)

S303 1-771-256-11 SWITCH, LEAF (DIRECTION) (DECK A)
S304 1-762-022-11 SWITCH, LEAF (MOTOR ON/PLAY) (DECK B)
S305 1-762-023-11 SWITCH, LEAF (PLAY) (DECK A)

Ref. No.	Part No.	Description	Remark
S306	1-762-255-11	SWITCH, LEAF (PLAYBACK) (DECK A)	
S702	1-692-960-11	SWITCH, PUSH (1 KEY)	
		(CD LID OPEN/CLOSE DET)	
SP101	1-505-724-11	SPEAKER (4 inch) (L-CH)	
SP201	1-505-724-11	SPEAKER (4 inch) (R-CH)	

HARDWARE LIST

#1 7-685-648-79 SCREW +BTP 3X12 TYPE2 N-S
#2 7-685-248-19 SCREW +KTP 3X12 TYPE2 NON-SLIT
#3 7-685-650-79 SCREW +BTP 3X16 TYPE2 N-S
#4 7-685-548-19 SCREW +BTP 3X12 TYPE2 N-S
#5 7-682-549-09 SCREW +B 3X10

#6 7-685-903-21 SCREW +PTPHW 3X8 (TYPE2)
#7 7-685-102-19 SCREW +P 2X4 TYPE2 NON-SLIT
#8 7-685-647-79 SCREW +BTP 3X10 TYPE2 N-S
#9 7-685-133-19 SCREW +P 2.6X6 TYPE2 NON-SLIT
#10 7-685-134-19 SCREW +BTP 2.6X8 TYPE2 N-S

#11 7-685-136-19 SCREW +BTP 2.6X12 TYPE2 N-S
#12 7-621-255-15 SCREW +P 2X3
#15 7-685-153-21 SCREW 3X30
#16 7-685-752-01 SCREW +PTT 3X8
#17 7-685-752-09 SCREW +PTT 3X8 (B)

ACCESSORIES & PACKING MATERIALS

△ 1-475-272-11 REMOTE COMMANDER (RMT-CZW200AD)
△ 1-475-273-11 ADAPTOR, AC (ZW200L:UK)
△ 1-782-494-11 CORD, POWER
3-018-608-01 COVER, BATTERY (for RMT-CZW200AD)
3-859-373-31 MANUAL, INSTRUCTION (ENGLISH, GERMAN)

3-859-373-41 MANUAL, INSTRUCTION (FRENCH, SPANISH)
(ZW200L:AEP)
3-859-373-51 MANUAL, INSTRUCTION (ITALIAN, SWEDISH,
PORTUGUESE) (ZW200L:AEP)
3-859-373-72 MANUAL, INSTRUCTION (POLISH, RUSSIAN)
(ZW220L)

The components identified by
mark △ or dotted line with mark
△ are critical for safety.
Replace only with part number
specified.

CFD-ZW200L/ZW220L

SONY®

SERVICE MANUAL

1998. 05

AEP Model

UK Model

CFD-ZW200L

East European Model

CFD-ZW220L

CORRECTION-1

Correct your service manual as shown below.

 : Indicates corrected portion.

Page	INCORRECT				CORRECT			
	Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
66	LCD801	1-810-442-31	DISPLAY PANEL, LIQUID CRYSTAL		LCD801	<u>1-803-291-11</u>	DISPLAY PANEL, LIQUID CRYSTAL	

(ECN-RC800476)

CFD-ZW200L/ZW220L

SONY®

SERVICE MANUAL

2000. 02

AEP Model

UK Model

CFD-ZW200L

East European Model

CFD-ZW220L

CORRECTION-2

Correct your service manual as shown below.

 : Indicates corrected portion.

Page	INCORRECT				CORRECT			
	Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
			< SWITCH >				< SWITCH >	
68	S851	1-762-798-11	SWITCH, KEYBOARD (POWER)		S851	<u>1-771-838-11</u>	SWITCH, TACT (POWER)	
	S852	1-762-798-11	SWITCH, KEYBOARD (SLEEP)		S852	<u>1-771-838-11</u>	SWITCH, TACT (SLEEP)	
	S853	1-762-798-11	SWITCH, KEYBOARD (CD)		S853	<u>1-771-838-11</u>	SWITCH, TACT (CD)	
	S854	1-762-798-11	SWITCH, KEYBOARD (CLOCK)		S854	<u>1-771-838-11</u>	SWITCH, TACT (CLOCK)	
	S855	1-762-798-11	SWITCH, KEYBOARD (TAPE)		S855	<u>1-771-838-11</u>	SWITCH, TACT (TAPE)	
	S856	1-762-798-11	SWITCH, KEYBOARD (TIMER)		S856	<u>1-771-838-11</u>	SWITCH, TACT (TIMER)	
	S857	1-762-798-11	SWITCH, KEYBOARD (RADIO)		S857	<u>1-771-838-11</u>	SWITCH, TACT (RADIO)	
	S858	1-762-798-11	SWITCH, KEYBOARD (STANDBY)		S858	<u>1-771-838-11</u>	SWITCH, TACT (STANDBY)	
	S859	1-762-798-11	SWITCH, KEYBOARD (MEGA BASS)		S859	<u>1-771-838-11</u>	SWITCH, TACT (MEGA BASS)	
	S860	1-762-798-11	SWITCH, KEYBOARD (SURROUND)		S860	<u>1-771-838-11</u>	SWITCH, TACT (SURROUND)	
	S862	1-762-798-11	SWITCH, KEYBOARD (VOLUME, +)		S862	<u>1-771-838-11</u>	SWITCH, TACT (VOLUME, +)	
	S863	1-762-798-11	SWITCH, KEYBOARD (VOLUME, -)		S863	<u>1-771-838-11</u>	SWITCH, TACT (VOLUME, -)	
	S865	1-762-798-11	SWITCH, KEYBOARD (▷)		S865	<u>1-771-838-11</u>	SWITCH, TACT (▷)	
	S866	1-762-798-11	SWITCH, KEYBOARD (PLAY MODE)		S866	<u>1-771-838-11</u>	SWITCH, TACT (PLAY MODE)	
	S868	1-762-798-11	SWITCH, KEYBOARD (□)		S868	<u>1-771-838-11</u>	SWITCH, TACT (□)	
	S869	1-762-798-11	SWITCH, KEYBOARD (DISPLAY/ENTER)		S869	<u>1-771-838-11</u>	SWITCH, TACT (DISPLAY/ENTER)	
	S871	1-762-798-11	SWITCH, KEYBOARD (▷▷ , TIME SET +)		S871	<u>1-771-838-11</u>	SWITCH, TACT (▷▷ , TIME SET +)	
	S872	1-762-798-11	SWITCH, KEYBOARD (◁◁, TIME SET -)		S872	<u>1-771-838-11</u>	SWITCH, TACT (◁◁, TIME SET -)	

(RPC-00001)